

[manuals.plus](#) /› [Ingenuity](#) /› [Ingenuity Soothing Baby Bouncer \(Morrison\) Instruction Manual](#)**Ingenuity 11203**

# Ingenuity Soothing Baby Bouncer (Morrison) Instruction Manual

Model: 11203

## 1. INTRODUCTION

The Ingenuity Soothing Baby Bouncer in Morrison design is engineered to provide comfort and entertainment for infants from birth up to 6 months or 20 lbs. This bouncer features plush fabrics, soothing vibrations, and a selection of melodies to help calm your baby. It includes a cushioned foot pillow, side supports, and a removable headrest to adapt as your baby grows. The removable toy bar with two plush toys offers engaging play. Designed for convenience, the seat pad is machine washable, and the unit features volume controls and automatic shut-off for music.



Image: A baby comfortably seated and smiling in the Ingenuity Soothing Baby Bouncer, featuring a grey and polka-dot pattern with a toy bar.

## 2. IMPORTANT SAFEGUARDS

- Always use the 3-point harness to secure your child in the bouncer.
- Never leave your child unattended in the bouncer.
- Do not use the bouncer once your child can sit up unassisted or weighs more than 20 lbs (9.07 kg).
- Place the bouncer on a flat, level surface. Do not use on elevated surfaces.
- Keep away from stairs, open flames, and other hazards.
- Ensure all components are securely assembled before each use.

## 3. PACKAGE CONTENTS

Verify that all components are present before assembly:

- Bouncer Frame (metal components)

- Seat Pad (with cushioned foot pillow and side supports)
- Removable Headrest
- Toy Bar with 2 Plush Toys (lion and elephant)
- Vibration/Music Unit
- Instruction Manual



Image: A complete view of the Ingenuity Soothing Baby Bouncer, illustrating all assembled parts.

## 4. ASSEMBLY INSTRUCTIONS

1. **Assemble the Frame:** Connect the metal frame components according to the diagrams in the included manual. Ensure all connections click securely into place.
2. **Attach the Seat Pad:** Drape the seat pad over the assembled frame, ensuring all elastic loops and fasteners are correctly aligned and secured.
3. **Insert Batteries:** Locate the battery compartment on the underside of the vibration/music unit. Insert 3 C batteries (not included), ensuring correct polarity. Close the compartment securely.
4. **Attach Vibration/Music Unit:** Secure the vibration/music unit to the designated slot on the front underside of the bouncer frame.
5. **Install Headrest:** Position the removable headrest at the top of the seat pad, securing it with any

attached fasteners. This provides additional support for newborns.

6. **Attach Toy Bar:** Insert the toy bar into the designated slots on either side of the bouncer frame until it clicks into place. Ensure the plush toys are securely attached to the bar.

## 5. OPERATING INSTRUCTIONS

### 5.1. Using Music and Vibrations

The bouncer features a control unit for music and vibrations located at the front of the seat.

- **Music:** Slide the music switch to turn on melodies. There are multiple melodies and volume control options. The music features an automatic shut-off.
- **Vibrations:** Slide the vibration switch to activate soothing vibrations. This feature also includes an automatic shut-off.



Image: Close-up of the control panel for music and vibration settings on the bouncer.

### 5.2. Adjusting Headrest

The cushioned headrest provides extra support for smaller infants and can be removed as your baby grows.

- To remove, unfasten any attached loops or Velcro from the seat pad.
- To reattach, align the headrest with the top of the seat and secure fasteners.



Image: Hands detaching the supportive headrest from the bouncer seat.

### 5.3. Using the Toy Bar

The toy bar with two plush toys can be easily removed for convenient access to your baby.

- To remove, press the release buttons on each side of the frame where the toy bar is inserted and lift the bar.
- To reattach, align the toy bar with the slots and push down until it clicks securely.



Image: A hand demonstrating the removal of the toy bar from the bouncer.



Image: A baby engaging with the attached plush toys on the bouncer's toy bar.

#### 5.4. Securing Your Child

Always use the 3-point harness system to safely secure your child in the bouncer.

- Place your child in the seat.
- Bring the waist straps around your child's waist and fasten the buckle.
- Adjust the straps to ensure a snug, secure fit without being too tight.

### 6. CARE AND MAINTENANCE

- **Seat Pad:** Remove the seat pad from the frame. Fasten buckles on the seat restraint and seat pad. Fasten all hook-and-loop patches to the corresponding patch. Machine wash with cold water on a gentle cycle. Do not use bleach. Tumble dry on low heat.
- **Frame:** Wipe the metal and plastic components of the frame with a damp cloth and mild soap. Do not immerse the frame or electronic unit in water.
- **Toys:** Surface wash plush toys with a damp cloth and mild soap. Air dry.

## 7. TROUBLESHOOTING

- **No Music/Vibration:** Check if batteries are inserted correctly and are not depleted. Replace batteries if necessary. Ensure the power switch is in the ON position.
- **Weak Vibration:** Replace batteries.
- **Toy Bar Not Secure:** Ensure the toy bar is fully inserted into the frame slots until it clicks. Check for any obstructions.
- **Bouncer Feels Unstable:** Verify that all frame components are correctly and securely assembled. Ensure the bouncer is placed on a flat, level surface.

## 8. SPECIFICATIONS

Feature	Detail
Product Dimensions	26.77 x 20.08 x 15.9 inches (68 x 51 x 40.4 cm)
Item Model Number	11203
Batteries Required	3 C batteries
Battery Life	Approximately 180 Hours
Target Gender	Unisex
Maximum Weight Recommendation	20 lbs (9.07 Kilograms)
Material Type	Metal, Plastic, Fabric
Material Composition	Plastic 60%, Cotton 40%
Item Weight	3.06 pounds (1.39 kg)
Color	Morrison
Is Portable	Yes



Image: Visual representation of the bouncer's dimensions.

## 9. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the contact details provided in the original product packaging or visit the official Ingenuity website. Keep your purchase receipt for warranty claims.