

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [BLACK+DECKER](#) /

› [BLACK+DECKER Electric Leaf Blower, Leaf Vacuum and Mulcher BEBL7000 User Manual](#)

## BLACK+DECKER BEBL7000

# BLACK+DECKER Electric Leaf Blower, Leaf Vacuum and Mulcher

Model: BEBL7000

## 1. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions before using the appliance.
- Wear appropriate personal protective equipment, including eye protection, hearing protection, and long pants.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- Keep children, bystanders, and pets away while operating the appliance.
- Avoid accidental starting. Ensure the switch is in the off-position before plugging in.
- Do not abuse the cord. Never use the cord for carrying, pulling, or unplugging the power tool. Keep cord away from heat, oil, sharp edges, or moving parts.
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- Always disconnect the appliance from the power supply before cleaning or performing maintenance.

## 2. PRODUCT OVERVIEW

The BLACK+DECKER BEBL7000 is a versatile 3-in-1 electric leaf blower, leaf vacuum, and mulcher designed for efficient yard cleanup. Its innovative backpack style allows for hands-free operation and increased bag capacity, making yard work more comfortable.



#### Key Features:

- **3-in-1 Design:** Easily converts into a corded leaf blower, leaf vacuum, or mulcher for versatile use.
- **Powerful Air Speed and Airflow:** Air speeds up to 250 mph and airflow up to 400 cfm deliver the power needed for quick, effective clearing.
- **Backpack Style:** Easy-to-wear backpack with up to 2x the bag capacity allows for hands-free operation.
- **POWERBOOST:** More power at the push of a button for tough debris.
- **Flexi-Tube:** Allows for enhanced maneuverability when vacuuming leaves and debris.

### 3. SETUP

The BEBL7000 is designed for easy conversion between its three functions. Follow these steps for initial setup and mode changes:

#### 3.1 Assembly for Blower Mode

1. Ensure the unit is unplugged from the power source.
2. Attach the blow tube to the main unit's air outlet. Ensure it clicks securely into place.
3. For optimal blowing, ensure the vacuum inlet cover is securely closed.



*Figure 1: Blower Tube Assembly*

### **3.2 Assembly for Vacuum/Mulcher Mode**

1. Ensure the unit is unplugged from the power source.
2. Remove the blow tube by pressing the release button and pulling it off.
3. Open the vacuum inlet cover.
4. Attach the flexible vacuum tube to the vacuum inlet. Secure it by twisting until it locks.
5. Connect the backpack collection bag to the air outlet where the blow tube was previously attached. Ensure it is firmly secured.



Figure 2: Vacuum/Mulcher Assembly

### 3.3 Power Connection

The BEBL7000 is a corded electric tool. Connect the appliance's power cord to a suitable outdoor-rated extension cord. Ensure the extension cord is rated for the appliance's power requirements and is in good condition.

*Video: Demonstration of the 3-in-1 functionality and assembly steps for the BLACK+DECKER BEBL7000.*

## 4. OPERATING INSTRUCTIONS

Familiarize yourself with the controls and functions before operating the unit.

### 4.1 Blower Operation

In blower mode, the unit generates a powerful air stream to clear debris from hard surfaces and leaves from lawns.

- Ensure the unit is assembled in blower configuration.
- Plug the unit into a suitable power outlet.
- Press the ON/OFF switch to start the blower.

- Direct the nozzle towards the debris you wish to clear.



**More power with the push  
of a button**

*Figure 3: Blower in Action*

#### **4.2 Vacuum and Mulcher Operation**

In vacuum mode, the unit sucks up leaves and debris, which are then mulched and collected in the backpack bag.

- Ensure the unit is assembled in vacuum configuration with the backpack bag attached.
- Wear the backpack bag comfortably on your back.
- Plug the unit into a suitable power outlet.
- Press the ON/OFF switch to start the vacuum.
- Move the vacuum nozzle over the leaves and debris to collect them. The mulching impeller will reduce their volume.
- When the bag is full, turn off and unplug the unit, then detach the bag to empty its contents.



**Backpack  
design**  
Supplies  
comfort,  
convenience,  
and up to  
2x capacity.

*Figure 4: Vacuuming Leaves*



*Figure 5: Backpack Comfort*

#### **4.3 POWERBOOST Feature**

For stubborn debris or when extra power is needed, utilize the POWERBOOST button.

- While the unit is running, press and hold the POWERBOOST button located on the handle.
- Release the button to return to standard power.



*Figure 6: POWERBOOST Button*

## **5. MAINTENANCE**

Regular maintenance ensures optimal performance and extends the life of your appliance.

### **5.1 Cleaning**

- Always unplug the unit before cleaning.
- Wipe the exterior with a damp cloth. Do not use strong detergents or solvents.
- Regularly check the vacuum tube and impeller area for debris buildup. Clear any blockages to maintain suction power and prevent damage.
- Empty and clean the collection bag after each use, especially when mulching wet leaves, to prevent mold and odors.

### **5.2 Storage**

- Store the appliance in a dry, well-ventilated area, out of reach of children.
- Ensure the unit is clean and dry before storing.
- Coil the power cord neatly to prevent tangling and damage.

## 6. TROUBLESHOOTING

If your BLACK+DECKER BEBL7000 is not operating correctly, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Unit does not start	Not plugged in; Power outlet faulty; Safety interlock not engaged; Extension cord damaged.	Check power connection; Test outlet with another appliance; Ensure all tubes/covers are securely attached; Inspect extension cord for damage.
Low suction/blowing power	Tube/impeller clogged; Collection bag full or improperly attached; Vacuum inlet cover not fully open (in vacuum mode).	Turn off and unplug, clear any blockages; Empty and reattach collection bag; Ensure vacuum inlet cover is fully open.
Excessive vibration	Debris caught in impeller; Damaged impeller.	Turn off and unplug, clear debris; If problem persists, contact customer service.

## 7. SPECIFICATIONS

- **Brand:** BLACK+DECKER
- **Model Name:** Back Pack Leaf (BEBL7000)
- **Power Source:** Corded Electric
- **Air Flow Capacity:** 400 Cubic Feet Per Minute (cfm)
- **Speed:** 250 Miles per Hour (mph)
- **Noise Level:** 92 dB
- **Item Weight:** 11.1 Pounds
- **Product Dimensions:** 21"L x 15.58"W x 11.43"H
- **Included Components:** BEBL7000, Blow Tube, Vac Tube, Backpack Bag
- **Country of Origin:** China

## 8. WARRANTY AND SUPPORT

BLACK+DECKER offers a 2-year limited warranty on this product, covering defects in material or workmanship. For warranty claims or technical support, please contact BLACK+DECKER customer service.

For a comprehensive user manual, please refer to the official PDF document:

[Download User Manual  
\(PDF\)](#)