

[Manuals.plus](#) /

› [Bennett Read](#) /

› Bennett Read Zoom Vacuum Cleaner User Manual

Bennett Read 6009699039548

Bennett Read Zoom Vacuum Cleaner User Manual

Model: 6009699039548

Brand: Bennett Read

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Bennett Read Zoom Vacuum Cleaner. Please read this manual thoroughly before using the appliance and retain it for future reference. The Bennett Read Zoom Vacuum Cleaner features a 1200W motor and exceptional multi-cyclonic filtration, designed to capture fine dust and particles, returning clean air to your home. Its compact design includes automatic cord rewind, a bagless system, and an easy-eject dirt canister for convenient cleaning, maintenance, and storage. It is suitable for cleaning both carpets and hard floors.

Key Features:

- Lightweight compact design and multi-surface cleaning capability.
- Multi-cyclonic technology for bagless convenience.
- Advanced four-stage filtration system.
- Four-stage filtration for cleaner air output.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Do not leave the vacuum cleaner unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may

reduce air flow.

- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.

PRODUCT COMPONENTS



Main Unit Assembly: This image displays the complete Bennett Read Zoom Vacuum Cleaner, including the main body, flexible hose, telescopic wand, and floor nozzle. The orange and black color scheme is prominent, highlighting the compact design.



Angled View: An angled perspective of the vacuum cleaner, emphasizing the transparent dust canister, large rear wheels, and the compact form factor. The hose and floor nozzle are also visible.



Filter Access: This image illustrates the easy access to the multi-cyclonic air filtration system. A hand is shown removing a filter from the side compartment of the vacuum cleaner, demonstrating the maintenance process.



Compact Design Detail: A close-up view highlighting the robust wheel design and the "Zoom Compact Canister Vacuum" branding on the side of the unit, emphasizing its portability and storage convenience.

SETUP AND ASSEMBLY

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging materials for future storage or transport if needed.
2. **Hose Connection:** Insert the flexible hose into the suction inlet on the main unit until it clicks securely into place.
3. **Wand and Nozzle Assembly:** Attach the telescopic wand to the end of the flexible hose. Then, connect the desired floor nozzle or accessory tool to the end of the telescopic wand. Ensure all connections are firm.
4. **Power Cord:** Extend the power cord from the automatic cord rewind mechanism. Ensure the cord is fully extended to avoid overheating.
5. **Initial Filter Check:** Before first use, ensure all filters (pre-motor and post-motor) are correctly installed and clean. Refer to the Maintenance section for filter locations.

OPERATING INSTRUCTIONS

1. **Power Connection:** Plug the power cord into a suitable electrical outlet.
2. **Power On/Off:** Press the power button located on the main unit to turn the vacuum cleaner on. Press it again to turn off.
3. **Adjusting Suction:** Some models may feature a suction control slider on the hose handle. Adjust as needed for different surfaces (e.g., lower suction for delicate fabrics, higher for hard floors).
4. **Cleaning Surfaces:**
 - For carpets, use the floor nozzle with the brush setting engaged (if applicable).
 - For hard floors, use the floor nozzle with the brush setting retracted (if applicable) or a dedicated hard floor tool.
 - Use crevice tool for tight spaces and upholstery tool for furniture.
5. **Automatic Cord Rewind:** After use, unplug the vacuum cleaner from the wall outlet. Press the cord rewind button (usually located near the power button) to automatically retract the power cord. Guide the cord to prevent tangling.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

Emptying the Dirt Canister:

1. Ensure the vacuum cleaner is unplugged.
2. Locate the dirt canister release button (often on the top or side of the canister). Press it to detach the canister from the main unit.

3. Position the canister over a waste bin. Locate the bottom release latch and open the canister to empty its contents.
4. Close the bottom latch securely and reattach the canister to the vacuum cleaner until it clicks into place.

Cleaning Filters:

Your Bennett Read Zoom Vacuum Cleaner features a multi-stage filtration system. Filters should be cleaned regularly, typically after every 3-5 uses, or when suction power noticeably decreases.

1. **Pre-Motor Filter:** This filter is usually located inside or near the dirt canister. Remove it and tap off loose dirt over a bin. If washable, rinse under cold water until water runs clear. Allow to air dry completely for at least 24 hours before reinserting. Do not use a dryer or heat.
2. **Post-Motor Filter (HEPA-type):** This filter is typically located at the rear or side of the vacuum cleaner. Check your specific model for its location. These filters are often not washable and should be tapped clean. Replace if heavily soiled or damaged.
3. Ensure all filters are completely dry before reassembling the vacuum cleaner to prevent damage to the motor.

General Cleaning:

- Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Check the floor nozzle for tangled hair or debris and remove as necessary.

TROUBLESHOOTING

Before contacting customer support, please refer to the following common issues and solutions.

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Not plugged in; no power at outlet; power button not pressed.	Ensure plug is fully inserted; check circuit breaker; press power button firmly.
Loss of suction.	Dirt canister full; filters clogged; hose/nozzle blocked.	Empty dirt canister; clean/replace filters; check hose/nozzle for obstructions.
Unusual noise.	Obstruction in hose/nozzle; motor issue.	Check for and remove obstructions. If noise persists, contact customer support.
Dirt escaping from vacuum.	Dirt canister not properly closed; filters missing or incorrectly installed.	Ensure canister is securely latched; check filter installation.

SPECIFICATIONS

- Brand:** Bennett Read
- Model Number:** 6009699039548
- Colour:** Multicolor
- Product Dimensions:** 2.54 x 2.54 x 2.54 cm (L x W x H)
- Item Weight:** 900 g
- Material:** Carbon
- Special Features:** Adjustable
- Specific Uses for Product:** Cleaning
- Form Factor:** Shell (Canister)
- Recommended Uses:** Cleaning

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or contact your retailer. Spare part information for this product is not available or provided in the product specifications.

For technical support or service inquiries, please contact Bennett Read customer service through their official website or the contact details provided on your purchase receipt.

© 2025 Bennett Read. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I reassemble the parts of the dust container for my Bennett Read Zoom Vacuum Cleaner?

The provided manual for the Bennett Read Zoom Vacuum Cleaner (Model: 6009699039548) offers instructions for emptying the dirt canister and cleaning the filters, which involves detaching and reattaching parts of the dust container. While...

[Read full answer](#)