

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Walker Edison](#) /
- › [Walker Edison Georgetown 58-Inch TV Stand Instruction Manual](#)

Walker Edison W58BDSDGW

Walker Edison Georgetown 58-Inch TV Stand Instruction Manual

Model: W58BDSDGW

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Walker Edison Georgetown 58-Inch TV Stand. Please read all instructions carefully before beginning assembly and retain this manual for future reference. This TV stand is designed to accommodate most televisions up to 65 inches.



Image 1.1: Front view of the assembled Walker Edison Georgetown 58-Inch TV Stand in Grey Wash.

2. SAFETY INFORMATION

WARNING: Always follow the assembly instructions carefully. Use appropriate tools and take necessary precautions while assembling the product to avoid injuries.

- Ensure all parts are present and undamaged before assembly. Do not proceed with assembly if any parts are missing or damaged.
- Assemble the unit on a soft, clean surface (e.g., carpet) to prevent scratching.
- It is recommended that two adults assemble this product.
- Do not use power tools unless specifically instructed, as overtightening screws can damage the material.
- Place the TV stand on a level, stable surface to prevent tipping.
- Do not exceed the maximum weight capacity of the stand (87 pounds).
- Keep small parts and packaging materials away from children.

3. PACKAGE CONTENTS

Verify that all components listed below are included in your package. If any parts are missing, please contact customer support.

- TV stand panels (top, bottom, sides, shelves, back panels)
- Barn-style doors (2)
- Metal hinges, handles, and corner accents
- Assembly hardware (screws, dowels, cam locks, etc.)
- Wood glue (for enhanced stability)
- Allen wrench
- Step-by-step instruction manual

4. ASSEMBLY INSTRUCTIONS

Your Walker Edison Georgetown TV Stand ships ready-to-assemble. Detailed, step-by-step instructions are included in the product packaging. Please follow these instructions precisely for proper assembly.

General Assembly Tips:

1. **Prepare Your Workspace:** Clear a spacious area and lay down a blanket or cardboard to protect both the furniture pieces and your floor.
2. **Identify All Parts:** Before starting, sort and identify all hardware and wood panels according to the included parts list.
3. **Hand Tools Recommended:** A Phillips head screwdriver is required. Avoid using power drills unless explicitly stated in the assembly guide, as they can strip screws or damage the wood.
4. **Two-Person Assembly:** While possible for one person, assembly is significantly easier and safer with two people.
5. **Door Alignment:** During door installation, ensure hinges are correctly positioned. Minor adjustments may be needed to achieve perfect door alignment.



Image 4.1: Diagram showing the dimensions of the TV stand: 58 inches wide, 16 inches deep, and 24 inches high.




Image 4.2: Close-up view of the metal handle and the textured grey wash finish on a barn-style door.

5. OPERATING INSTRUCTIONS

The Walker Edison Georgetown TV Stand is designed for functional and aesthetic integration into your living space.

Placing Your Television:

This stand is suitable for most TVs up to 65 inches. Ensure the television's base fits securely on the top surface and does not exceed the stand's weight limit of 87 pounds.

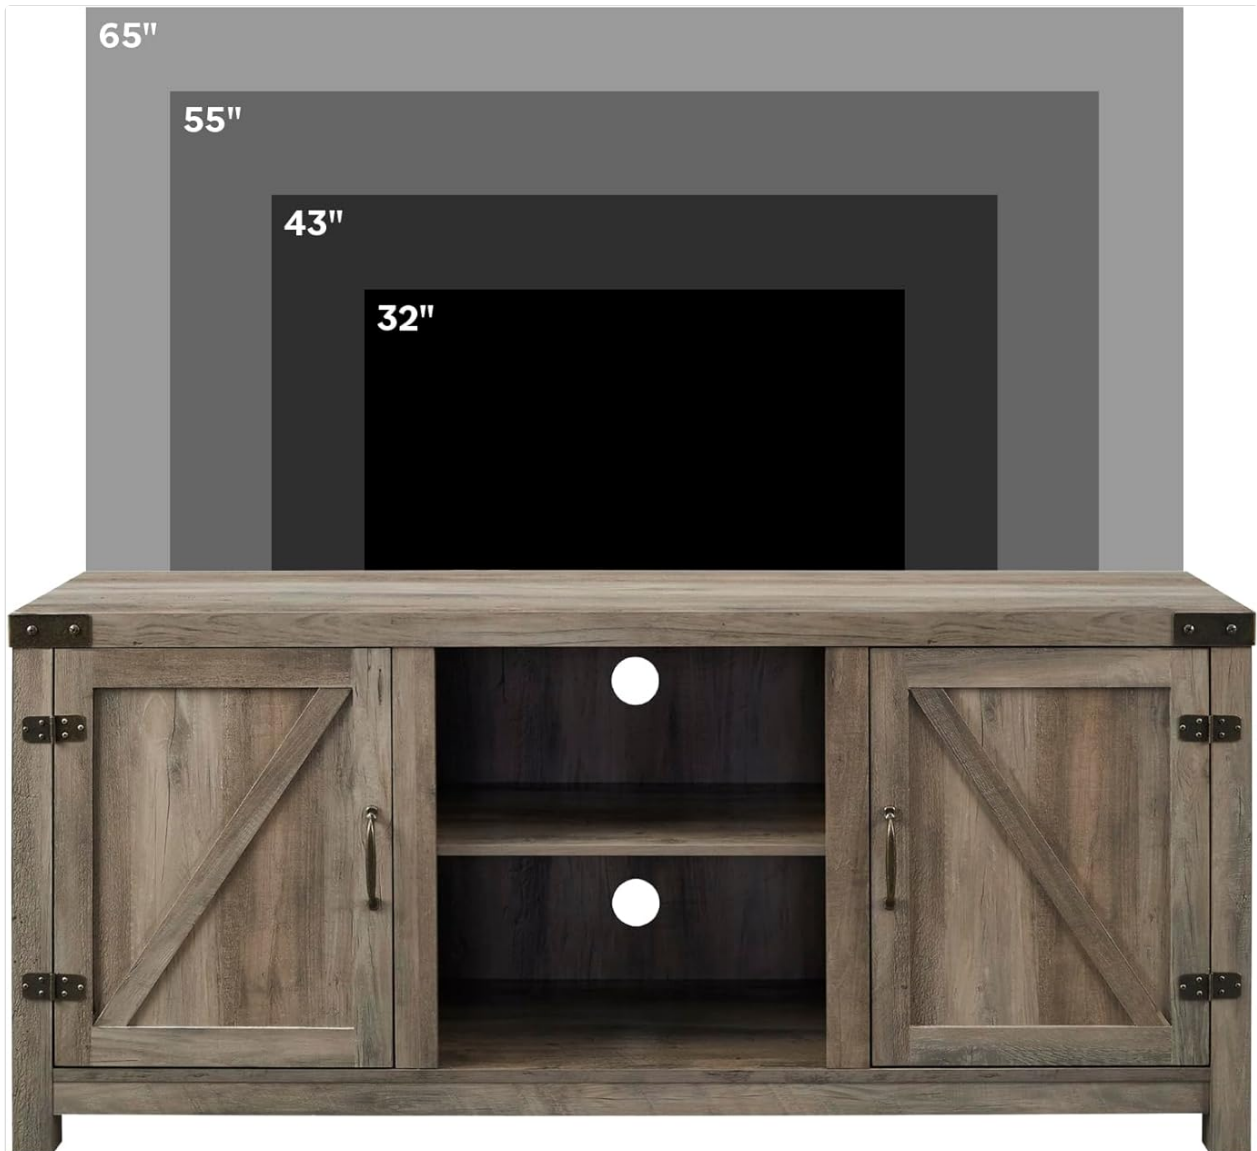

Entertainment Center for 65" TV

Accommodates most TVs up to 65".

Image 5.1: Illustration demonstrating the TV stand's capacity to hold TVs up to 65 inches.

Storage and Organization:

The stand features open shelving in the center and concealed storage behind two barn-style doors. Adjustable shelves allow for customization to fit media devices, books, or decorative items.



Image 5.2: View of the interior storage space with one barn door open, showing adjustable shelves.



Image 5.3: Detailed view of an interior shelf, highlighting the circular cutout for cable management.

Cable Management:

Integrated cut-outs on the back panel and shelves facilitate organized routing of power cords and media cables, helping to maintain a tidy appearance.



Simple Cord Management

Easily organize messy wires with cut-outs for overall cord management.



Image 5.4: Close-up of the back panel, illustrating the strategically placed circular cutouts for cable management.

6. MAINTENANCE AND CARE

To ensure the longevity and appearance of your TV stand, follow these care guidelines:

- **Cleaning:** Wipe surfaces with a damp cloth and mild soap if necessary. Dry immediately with a clean, soft cloth to prevent water marks. Avoid harsh chemicals or abrasive cleaners.
- **Protection:** Use felt pads under the legs to prevent floor scratches, especially when moving the stand.
- **Sunlight Exposure:** Avoid prolonged direct sunlight exposure to prevent fading or discoloration of the finish.
- **Moisture:** Protect the stand from excessive moisture and humidity.

7. TROUBLESHOOTING

If you encounter issues with your TV stand, consider the following common solutions:

- **Wobbly Stand:** Ensure all screws and fasteners are tightened. Check that the stand is placed on a completely level surface. Adjust leg levelers if applicable (this model does not specify levelers, but general advice).
- **Doors Not Aligning:** Recheck hinge installation. Sometimes, loosening and re-tightening hinge screws can allow for minor adjustments to align the doors. Ensure the stand is level.
- **Difficulty with Screws:** If pilot holes are too small, apply firm, steady pressure with a hand screwdriver. Avoid forcing screws, which can strip them or damage the wood.

8. SPECIFICATIONS

Feature	Detail
Brand	Walker Edison
Model Name	Georgetown

Item Model Number	W58BDSDGW
Color	Grey Wash
Product Dimensions	16"D x 58"W x 24"H
Item Weight	87 Pounds
Material	Engineered Wood
Mounting Type	Freestanding
Recommended TV Size	Up to 65 Inches
Number of Shelves	5 (including bottom base)
Assembly Required	Yes

9. WARRANTY INFORMATION

Warranty information for Walker Edison products is typically provided with the purchase documentation or can be found on the official Walker Edison website. Please refer to those resources for specific warranty terms and conditions.

10. CUSTOMER SUPPORT

For assistance with assembly, missing parts, or any other inquiries, please contact Walker Edison customer support:

Phone: [1-801-433-3008](tel:1-801-433-3008)

Email: service@walkerediton.com

Replacement parts are available. Please contact Walker Edison within 30 days of delivery for assistance with replacement parts.

QUESTIONS?

We can help you.





1-801-433-3008


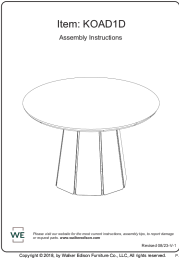 
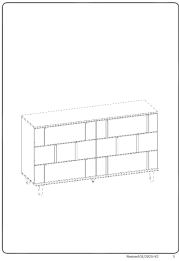 

or email **service@walkeredison.com**

Replacement parts now available.
Please contact Walker Edison within 30 days of delivery.

Image 10.1: Walker Edison customer support contact details.

Related Documents - W58BDSDGW

	<p>Walker Edison W70CSGD TV Stand Assembly Instructions</p> <p>Detailed assembly instructions for the Walker Edison W70CSGD TV Stand, including parts list, hardware list, and step-by-step guidance for building your furniture.</p>
	<p>Walker Edison W584DHDHB Assembly Instructions Furniture Setup Guide</p> <p>Detailed assembly instructions for the Walker Edison W584DHDHB furniture item. Learn how to assemble your new cabinet with clear steps, parts list, and hardware guide. Includes general assembly tips for this Dark Walnut Classic Glass Door Universal TV Stand.</p>

 <p>Item #: W60FPXDHB Assembly Instructions Type: TV - 60" Class Instructions in English</p> <p>Model #: W60FPXDHB Instructions in English Model #: W60FPXDHB Instructions in English</p> <p>© 2015 Walker Edison Furniture Co., LLC. All rights reserved.</p>	<p>Walker Edison W60FPXDHB Assembly Instructions</p> <p>Comprehensive assembly guide for the Walker Edison W60FPXDHB TV stand with fireplace. Includes parts list, hardware, and step-by-step instructions in multiple languages.</p>
 <p>Item: KOAD1D Assembly Instructions</p> <p>© 2015 Walker Edison Furniture Co., LLC. All rights reserved.</p>	<p>Walker Edison KOAD1D Round Dining Table Assembly Instructions</p> <p>Step-by-step assembly instructions for the Walker Edison KOAD1D round dining table. Includes parts list, hardware list, and assembly guidelines.</p>
 <p>© 2015 Walker Edison Furniture Co., LLC. All rights reserved.</p>	<p>Walker Edison Bronx 6-Drawer Dresser Assembly Guide</p> <p>Comprehensive assembly guide for the Walker Edison Bronx 6-Drawer Dresser, featuring estimated assembly time, required tools, safety warnings, detailed step-by-step instructions, and parts lists for a successful setup.</p>
 <p>WALKER EDISON Adair - 70" Sloane Adair Solid Wood TV Stand SKU: W70ADR2D © 2015 Walker Edison</p> <p>For Residential Use Only</p> <p>© 2015 Walker Edison Furniture Co., LLC. All rights reserved.</p>	<p>Walker Edison Adair 70" Sloane Adair Solid Wood TV Stand Assembly Instructions</p> <p>Detailed assembly instructions for the Walker Edison Adair 70" Sloane Adair Solid Wood TV Stand (SKU: W70ADR2D). Includes parts list, hardware list, and step-by-step guidance for easy setup.</p>