

[manuals.plus](#) /

› [Wind River](#) /

› [Wind River H3000 Remote Control User Manual](#)

Wind River H3000

Wind River H3000 Remote Control User Manual

Model: H3000 | Brand: Wind River

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Wind River H3000 Remote Control. Designed for use with compatible Wind River ceiling fans, this remote allows convenient control of fan speed, light functions, and fan direction from anywhere in the room. The remote features a durable plastic construction with a sleek black finish.



Figure 1: Front view of the Wind River H3000 Remote Control. The remote is black with white icons for fan speed, light control, fan direction, and power.

2. SETUP

2.1 Battery Installation

The Wind River H3000 Remote Control requires batteries for operation. While batteries may not be included, please refer to the battery compartment on the back of the remote for the correct battery type (typically AAA or AA). Follow these steps:

1. Locate the battery compartment cover on the back of the remote control.

2. Slide or lift the cover to open the compartment.
3. Insert the required batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover securely.

2.2 Pairing with Your Ceiling Fan (If Applicable)

Most Wind River remote controls are pre-paired with their compatible fan receivers. If your remote is a replacement or if the fan does not respond after battery installation, pairing may be required. Consult your ceiling fan's instruction manual for specific pairing procedures. A common pairing method involves:

- Turning off the power to the fan at the circuit breaker for at least 30 seconds.
- Restoring power to the fan.
- Within 30-60 seconds of restoring power, press and hold the 'Light' or 'Stop' button on the remote until the fan light blinks or the fan jogs, indicating successful pairing.

If these steps do not work, refer to the specific pairing instructions provided with your Wind River ceiling fan model.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your Wind River H3000 Remote Control:

Power Button (Large circle with vertical line at bottom): Located at the bottom center. Press to turn the fan and light system ON or OFF.

Fan Speed Control Buttons (Three circular arrows with dots): Located in the middle row. These buttons typically control the fan speed. There are three distinct buttons, likely corresponding to Low, Medium, and High fan speeds. Press the desired button to set the fan speed.

Light ON/OFF Button (Light bulb icon): Located in the top row, middle. Press to turn the fan light ON or OFF.

Light Dimming/Mode Button (Light bulb with water drop icon): Located in the top row, right. This button may control light dimming (press and hold) or cycle through different light modes if your fan supports them.

Fan Direction Button (Circular arrow icon): Located in the top row, left. Press this button to reverse the direction of the fan blades. This feature is useful for seasonal comfort: downward airflow for cooling in summer, and upward airflow for circulating warm air in winter.

4. MAINTENANCE

4.1 Cleaning

To maintain the appearance and functionality of your remote control:

- Wipe the surface with a soft, dry cloth.
- For stubborn marks, slightly dampen the cloth with water. Do not use harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote.

4.2 Battery Replacement

Replace batteries when the remote's range decreases or if the fan/light becomes unresponsive. Always replace all batteries at the same time with new ones of the same type. Dispose of old batteries according to local regulations.

4.3 Storage

If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage

to the remote's internal components.

5. TROUBLESHOOTING

If you experience issues with your Wind River H3000 Remote Control, try the following solutions:

- **Remote Not Responding:**

- Check the batteries. Ensure they are inserted correctly and are not depleted. Replace if necessary.
- Ensure the remote is within range of the fan's receiver.
- Verify there are no obstructions between the remote and the fan receiver.
- If the remote was recently dropped or damaged, internal components may be affected.

- **Fan or Light Not Responding Consistently:**

- Check the power supply to the fan at the wall switch or circuit breaker.
- Attempt to re-pair the remote with the fan receiver (refer to Section 2.2).
- Ensure the fan's receiver unit is functioning correctly.

- **Limited Range:**

- Replace the batteries.
- Minimize interference from other electronic devices.

If problems persist after attempting these solutions, contact Wind River customer support or a qualified electrician.

6. SPECIFICATIONS

Feature	Detail
Model Number	H3000
Brand	Wind River
Product Dimensions	0.98 x 2.01 x 5 inches
Item Weight	1 pound
Material	Plastic
Finish	Black
Batteries Required	Yes (Type not specified, check compartment)

7. WARRANTY AND SUPPORT

For warranty information or technical support regarding your Wind River H3000 Remote Control, please refer to the documentation included with your original ceiling fan purchase or visit the official Wind River website. You may also contact Wind River customer service directly for assistance with product inquiries, troubleshooting, or replacement parts.

For general inquiries, you can often find contact information on the manufacturer's official website or through your product's purchase point.

