

LEICKE EP18105

LEICKE DJ Roxxx Active Portable Stereo Speaker EP18105 User Manual

1. INTRODUCTION

The LEICKE DJ Roxxx Active Portable Stereo Speaker is designed for outdoor use, offering robust and splash-proof performance. Its durable housing makes it suitable for various activities such as camping, cycling, climbing, sports, beach outings, or park gatherings. This manual provides detailed instructions for setting up, operating, and maintaining your speaker.



Image: The DJ Roxxx Active speaker is ideal for outdoor activities and adventures.

2. PACKAGE CONTENTS

Please check the package for the following items:

- LEICKE DJ Roxxx Active Bluetooth Speaker (Red)
- USB Charging Cable
- 3.5mm Jack AUX Cable
- Carabiner Hook for attachment
- User Manual



Image: The LEICKE DJ Roxxx Active speaker in red.

3. PRODUCT OVERVIEW & CONTROLS

Familiarize yourself with the speaker's buttons and ports for optimal use.

Splashproof

Spritzwassergeschützt

Increase volume/ next track/radio station

Lautstärke erhöhen/
Nächster Titel/Radiosender

On/Off button

An-/Aus-Schalter

Mode button

Modus-Umschalter

Play/pause/call/hang up

Abspielen/Pause/Anrufen/
Auflegen

Decrease volume/ previous track/radio station

Lautstärke senken/Vorheriger Titel/Radiosender



Image: Control buttons on the LEICKE DJ Roxxx Active speaker.

- **Play/Pause/Call/Hang Up Button:** Controls music playback and manages phone calls.
- **Increase Volume/Next Track/Radio Station Button:** Increases volume, skips to the next song, or tunes to the next radio station.
- **On/Off Button:** Powers the speaker on or off.
- **Mode Button (M):** Switches between different input modes (Bluetooth, MicroSD, FM Radio, AUX).
- **Decrease Volume/Previous Track/Radio Station Button:** Decreases volume, goes to the previous song, or tunes to the previous radio station.



Image: Connectivity ports located under a protective cover.

- **AUX Port:** For connecting external audio devices via a 3.5mm jack cable.
- **MicroSD/TF Card Slot:** For playing MP3 files directly from a memory card (up to 32GB).
- **Micro-USB Charging Port:** For charging the speaker's internal battery and for PC speaker functionality.

4. SETUP

4.1 Charging the Speaker

1. Connect the supplied USB charging cable to the Micro-USB port on the speaker.
2. Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB

port.

3. The charging indicator light will illuminate. Once fully charged, the light will change or turn off (refer to specific LED behavior in the quick start guide if available).
4. A full charge provides approximately 6 hours of playback time.

4.2 Bluetooth Pairing

1. Ensure the speaker is powered on. If not, press and hold the On/Off button.
2. Press the Mode (M) button until the speaker is in Bluetooth pairing mode (a voice prompt or flashing LED may indicate this).
3. On your smartphone, tablet, or other Bluetooth-enabled device, enable Bluetooth and search for available devices.
4. Select "DJ Roxxx Active" from the list of devices.
5. Once paired, the speaker will indicate a successful connection (e.g., a sound or solid LED). The effective range is up to 10 meters.

4.3 NFC Pairing (Near Field Communication)

For devices with NFC capability:

1. Ensure NFC is enabled on your smartphone.
2. Gently tap your NFC-enabled device against the NFC area on the speaker.
3. Confirm the pairing request on your device.

4.4 MicroSD Card Playback

1. Insert a MicroSD (TF) card with MP3 audio files into the MicroSD card slot.
2. The speaker will automatically switch to MicroSD mode and begin playing music. If not, press the Mode (M) button to select MicroSD mode.

4.5 AUX Connection

1. Connect one end of the 3.5mm AUX cable to the AUX port on the speaker.
2. Connect the other end to the headphone jack or line-out port of your audio device (e.g., laptop, MP3 player).
3. Press the Mode (M) button to switch to AUX input mode.

4.6 PC Speaker Function

1. Connect the speaker to your PC using the supplied USB cable.
2. Your computer should recognize the speaker as an audio output device. Select it in your sound settings if necessary.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- To power on, press and hold the **On/Off** button until the indicator light illuminates.
- To power off, press and hold the **On/Off** button again until the indicator light turns off.

5.2 Music Playback

- Press the **Play/Pause** button to start or pause music playback.
- Press the **Increase Volume/Next Track** button briefly to skip to the next track.

- Press the **Decrease Volume/Previous Track** button briefly to go to the previous track.
- Press and hold the **Increase Volume** button to increase the volume.
- Press and hold the **Decrease Volume** button to decrease the volume.

5.3 Hands-free Function

When connected via Bluetooth to a smartphone:

- To answer an incoming call, press the **Play/Pause/Call** button.
- To end a call, press the **Play/Pause/Call** button again.
- The integrated microphone allows for clear communication.

5.4 FM Radio

1. Press the **Mode (M)** button to switch to FM Radio mode.
2. For better reception, connect the USB charging cable as an antenna.
3. Press the **Play/Pause** button to automatically scan and save available radio stations.
4. Use the **Next Track** and **Previous Track** buttons to navigate between saved stations.

6. MAINTENANCE

6.1 Cleaning

Wipe the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure all port covers are securely closed before cleaning or exposing to moisture.

6.2 Battery Care

- Charge the speaker fully before first use.
- To prolong battery life, avoid completely draining the battery frequently.
- If storing the speaker for an extended period, charge it to about 50% and recharge every few months.

6.3 Water Resistance (IPX4)

The speaker is rated IPX4, meaning it is splash-proof and protected against splashing water from any direction. It is not designed to be submerged in water. Ensure all port covers are tightly sealed to maintain water resistance.

7. TROUBLESHOOTING

- **No Power:** Ensure the speaker is charged. Connect it to a power source using the USB cable.
- **No Sound:** Check the volume level on both the speaker and the connected device. Ensure the correct input mode (Bluetooth, AUX, MicroSD, FM) is selected.
- **Bluetooth Pairing Issues:** Make sure the speaker is in pairing mode. Disable and re-enable Bluetooth on your device. Move closer to the speaker. Clear previous Bluetooth connections on your device.
- **Poor FM Radio Reception:** Extend the USB charging cable to act as an antenna. Try moving to a different location.
- **MicroSD Card Not Reading:** Ensure the card is inserted correctly and contains supported MP3 files. The card should be formatted to FAT32.

8. SPECIFICATIONS

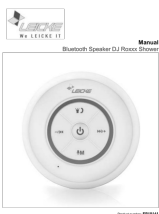

Feature	Specification
Model Number	EP18105
Dimensions (L x W x H)	18.1 x 6.8 x 6.8 cm
Weight	405 g
Power Output	10 Watts
Connectivity	Bluetooth 4.0, NFC, MicroSD (TF), AUX (3.5mm), Micro-USB
Battery Life	Approx. 6 hours
Water Resistance	IPX4 (Splash-proof)
Compatible Devices	MicroSD (TransFlash)





9. WARRANTY AND SUPPORT

LEICKE products are designed for quality and reliability. For warranty information and technical support, please refer to the documentation included with your purchase or visit the official LEICKE website. Keep your proof of purchase for any warranty claims.

For further assistance, please contact LEICKE customer support.

Related Documents - EP18105

	<p>LEICKE DJ Roxxx Shower Bluetooth Speaker EP18141 User Manual and Guide</p> <p>Comprehensive user manual for the LEICKE DJ Roxxx Shower Bluetooth Speaker (EP18141). Learn about package contents, technical specifications, Bluetooth pairing, modes, controls, troubleshooting, safety, and FCC compliance.</p>
	<p>LEICKE DJ Roxxx Bluetooth-Lautsprecher Bedienungsanleitung</p> <p>Benutzerhandbuch für den LEICKE DJ Roxxx Bluetooth-Lautsprecher (Modell EP18177), das den Lieferumfang, technische Spezifikationen, Betriebsmodi, Fernbedienung, Sicherheitshinweise und Konformitätsinformationen abdeckt.</p>

 <p>Manual LEICKE Bluetooth Speaker DJ Roxxx Round Clip</p> <p>Product number: EP18222</p>	<p>LEICKE Bluetooth Speaker DJ Roxxx Round Clip Manual - EP18222</p> <p>User manual for the LEICKE Bluetooth Speaker DJ Roxxx Round Clip (Model EP18222). Learn about package contents, technical specifications, Bluetooth pairing, modes, controls, troubleshooting, safety, and compliance.</p>
 <p>Handbuch LEICKE Bluetooth-Lautsprecher DJ ROXXX DAB+ Radio</p> <p>Produktnummer: EP18227</p>	<p>LEICKE DJ ROXXX DAB+ Radio Handbuch und Funktionen</p> <p>Umfassendes Benutzerhandbuch für das LEICKE DJ ROXXX DAB+ Radio, das Funktionen, Einrichtung, Bedienung und Fehlerbehebung für diesen tragbaren Bluetooth-Lautsprecher und Digitalradio detailliert beschreibt. Enthält technische Spezifikationen und Sicherheitshinweise.</p>
 <p>User's Manual LEICKE Music Beanie for smartphones with Bluetooth</p> <p>Product number: WD67221 + WD67223 + WD67224</p>	<p>LEICKE Music Beanie User Manual - Bluetooth Beanie for Smartphones (WD67221, WD67223, WD67224)</p> <p>LEICKE Music Beanie User's Manual: This guide provides comprehensive information on the LEICKE Music Beanie (models WD67221, WD67223, WD67224), a Bluetooth 2.1+EDR wearable audio device for smartphones. Learn about package contents, technical specifications, charging, pairing instructions, device functions, washing care, safety guidelines, FCC compliance, and disposal. Find contact details for LEICKE GmbH.</p>
 <p>Bedienungsanleitung Bluetooth-TWS-Headphones Pro 3 mit ANC</p> <p>Produktnummer: EP20206</p>	<p>LEICKE Pro 3 TWS ANC Bluetooth Earphones User Manual</p> <p>User manual for LEICKE Pro 3 True Wireless Stereo (TWS) Bluetooth earphones with Active Noise Cancellation (ANC). Learn about package contents, technical specifications, functions like pairing, ANC mode, music control, and safety instructions.</p>