

[manuals.plus](#) /› [Karlsson](#) /› [Karlsson Sense Wall Clock KA5657GD Instruction Manual](#)

Karlsson KA5657GD

Karlsson Sense Wall Clock (Model KA5657GD) Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Karlsson Sense Wall Clock, model KA5657GD. Please read these instructions carefully before use and retain them for future reference.

SAFETY INFORMATION

- Keep batteries out of reach of children.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries responsibly according to local regulations.
- Do not expose the clock to extreme temperatures or direct sunlight.
- Ensure the clock is securely mounted to prevent falling.

PACKAGE CONTENTS

Please check that all items are present in the package:

- 1 x Karlsson Sense Wall Clock (Model KA5657GD)
- 1 x Instruction Manual (this document)
- *Note: 1 AA battery is required and not included.*

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Insert one (1) AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings in the compartment.

3. Close the battery compartment cover.

2. Mounting the Clock

The Karlsson Sense Wall Clock is designed for wall mounting. Ensure you use appropriate hardware for your wall type (e.g., screw, wall anchor) to securely hang the clock.

- Choose a suitable location on a wall, away from direct heat sources or excessive moisture.
- Install a screw or hook into the wall, ensuring it is strong enough to support the clock's weight (approximately 1.21 pounds / 0.55 kg).
- Carefully hang the clock onto the installed screw/hook using the hanging slot on the back of the clock mechanism.
- Verify the clock is stable and level.



Image: The Karlsson Sense Wall Clock, gold and fan-shaped, displayed on a wall. This image illustrates the product's appearance when mounted.

OPERATING

Setting the Time

1. After installing the battery, the clock hands may start moving automatically.

2. Locate the time-setting knob on the back of the clock mechanism.
3. Gently turn the knob clockwise or counter-clockwise to adjust the hour and minute hands to the correct time.
4. Avoid forcing the hands directly, as this can damage the mechanism.

MAINTENANCE

Cleaning

- Wipe the clock surface with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the finish.

Battery Replacement

- When the clock hands stop moving or begin to slow down, it is time to replace the battery.
- Follow the "Battery Installation" steps in the Setup section to replace the AA battery.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not running	Battery is dead or incorrectly installed.	Replace the battery with a new AA battery, ensuring correct polarity.
Clock runs too slow or fast	Low battery power.	Replace the battery with a new AA battery.
Time is incorrect	Time was not set correctly or was accidentally adjusted.	Refer to the "Setting the Time" section to adjust the time.

SPECIFICATIONS

Feature	Detail
Brand	Karlsson
Model Number	KA5657GD
Color	Gold
Material	Alloy Steel
Display Type	Analog
Product Dimensions	15.75"W x 15.75"H (40cm diameter, 3cm depth)
Power Source	Battery Powered
Batteries Required	1 AA (not included)
Item Weight	1.21 pounds (0.55 Kilograms)
Mounting Type	Wall Mount

Feature	Detail
Special Feature	Silent Clock

WARRANTY AND SUPPORT

Karlsson products are manufactured to high-quality standards. For specific warranty information, please refer to the documentation included with your purchase or contact Karlsson customer support.

For further assistance or inquiries, please visit the official Karlsson website or contact their customer service department.

© 2023 Karlsson. All rights reserved.