

## Canon VIXIA HF R700

# Canon VIXIA HF R700 Full HD Camcorder Instruction Manual

Model: VIXIA HF R700

## 1. INTRODUCTION

---

This manual provides detailed instructions for the Canon VIXIA HF R700 Full HD Camcorder. This device is designed for recording high-definition video with features such as a 57x Advanced Zoom, 1080P video capability, a 3-inch touchscreen, and the DIGIC DV 4 Image Processor. Please read this manual thoroughly before using your camcorder to ensure proper operation and to maximize its performance.

## 2. PACKAGE CONTENTS

---

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact your retailer.

- Canon VIXIA HF R700 Camcorder
- Power Adapter
- Battery Pack (Lithium Ion)
- USB Cable
- HDMI Cable



Image: The Canon VIXIA HF R700 camcorder shown alongside its included accessories: power adapter, battery, USB cable, and HDMI cable.

## 3. SETUP

### 3.1 Charging the Battery

1. Connect the power adapter to the camcorder's DC IN 5.3V port.
2. Plug the power adapter into a wall outlet.
3. The charging indicator light will illuminate. Charging is complete when the light turns off.





Image: Side view of the camcorder highlighting the DC IN 5.3V port for connecting the power adapter.

### **3.2 Inserting an SD Card**

1. Open the memory card slot cover.
2. Insert an SD, SDHC, or SDXC memory card into the slot with the label facing the correct direction until it clicks into place.
3. Close the memory card slot cover.

### **3.3 Attaching the Hand Strap**

Securely attach the hand strap to the designated loop on the side of the camcorder for a firm grip during operation.



Image: The Canon VIXIA HF R700 camcorder with its 3-inch LCD touchscreen open, displaying an image.

## 4. OPERATING THE CAMCORDER

### 4.1 Power On/Off

To power on the camcorder, open the LCD screen. To power off, close the LCD screen or use the power switch if available.

### 4.2 Basic Recording

1. Open the LCD screen to power on the camcorder.
2. Point the lens towards your subject.
3. Press the **START/STOP** button to begin recording. Press it again to stop recording.
4. Use the zoom rocker (W-T) to zoom in (T) or out (W).



Image: Top view of the camcorder, illustrating the zoom rocker (W-T) and other control buttons.

### 4.3 Using the Touchscreen

The 3-inch touchscreen allows for intuitive control over settings, playback, and focusing. Tap icons to select options or swipe to navigate menus.



Image: Frontal view of the camcorder with the LCD screen open, showcasing the lens and the screen interface.

## 4.4 Playback

To view recorded videos, switch the camcorder to playback mode (usually indicated by a play icon). Select the desired video from the list displayed on the touchscreen.

## 5. CONNECTING TO OTHER DEVICES

### 5.1 USB Connection

Use the provided USB cable to connect the camcorder to a computer for transferring video files. The camcorder will appear as a removable storage device.

### 5.2 HDMI Output

Connect the camcorder to an HDTV or monitor using an HDMI cable to view your recordings on a larger screen.



Image: Side view of the camcorder, illustrating the various connectivity ports including USB and HDMI.

## 6. MAINTENANCE

---

- **Cleaning the Lens and Screen:** Use a soft, lint-free cloth specifically designed for optical surfaces. Avoid abrasive materials or harsh chemicals.
- **Battery Care:** Store the battery in a cool, dry place when not in use. Avoid fully discharging the battery frequently to prolong its lifespan.
- **Storage:** When storing the camcorder for extended periods, remove the battery and store the device in a dry, dust-free environment.

## 7. TROUBLESHOOTING

---

If you encounter issues with your camcorder, refer to the following common solutions:

- **Camcorder does not power on:** Ensure the battery is charged and correctly inserted, or connect the power adapter directly.
- **Recording stops unexpectedly or 'SD card full' error:** Check if the SD card has sufficient free space. If the card is not full, try reformatting the card (this will erase all data) or using a different SD card.
- **Poor image quality:** Ensure the lens is clean and free from smudges. Check lighting conditions and adjust exposure settings if necessary.
- **No sound during playback:** Check the volume settings on the camcorder and the connected playback device (TV/monitor).

For persistent issues, consult the Canon support website or contact customer service.

## 8. SPECIFICATIONS

---

Feature	Specification
Sensor	3.28 Megapixel 1/4.85" CMOS
Effective Pixels	2,073,600 Video; 2,073,600 Photo
Advanced Zoom	57x
Video Capture Resolution	1080p Full HD
Screen Size	3 Inches (Touchscreen)
Image Processor	DIGIC DV 4
Flash Memory Type	SD, SDHC, SDXC
Connectivity Technology	USB
Supported Audio Format	AAC
Product Dimensions	6.9 x 5.1 x 5.5 inches
Item Weight	8 ounces

Feature	Specification
Battery Type	Lithium Ion

## 9. WARRANTY AND SUPPORT

---

This product is typically tested and certified to function like new. For specific warranty details, please refer to the documentation provided at the time of purchase or contact your retailer. For technical assistance or further inquiries, please visit the official Canon support website or contact their customer service department. Keep your proof of purchase for any warranty claims.