Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Amazon /
- > Amazon Echo Buttons User Manual (2-Pack)

Amazon Echo Buttons

Amazon Echo Buttons User Manual

Model: Echo Buttons (2-Pack)

NTRODUCTION

The Amazon Echo Buttons are interactive accessories designed to enhance your experience with compatible Amazon Echo devices. They provide a physical interface for playing games and activating smart home routines through Alexa.

These buttons connect wirelessly to your Echo device, offering a new way to interact with Alexa skills and customize your smart home environment.

WHAT'S IN THE BOX

- 2 Echo Buttons
- 4 AAA Batteries (2 per button)

Warning: Contains small parts. May pose a choking hazard to small children.

SETUP

Install Batteries: Each Echo Button requires 2 AAA batteries. To install, locate the battery
compartment on the underside of the button. You may need a small screwdriver to open the
compartment cover. Insert the batteries according to the polarity indicators (+/-) and securely close
the cover.

2. Pairing with an Echo Device:

- Ensure your compatible Echo device (Echo, Echo Dot, Echo Show, Echo Plus, or Echo Spot) is powered on and connected to the internet.
- · Place the Echo Button near your Echo device.
- Say, "Alexa, set up my Echo Buttons."
- Follow the voice prompts from Alexa to complete the pairing process. The button's light ring

will indicate its pairing status.

3. **Connect Multiple Buttons:** You can connect up to 4 Echo Buttons with a compatible Echo device using Bluetooth. Repeat the pairing process for each additional button.

echo buttons

A fun companion for your Echo



Image: Two Echo Buttons, ready for setup and use.

OPERATING INSTRUCTIONS

Once paired, Echo Buttons can be used for various interactive experiences:

- Playing Games: Echo Buttons are designed for interactive games with Alexa. When playing a compatible game, press your button to buzz in, answer questions, or perform other game actions as instructed by Alexa. The button's light will often change color to indicate your turn or status.
- Activating Smart Home Routines: You can configure Echo Buttons to trigger specific Alexa smart home routines. For example, a single press could turn on lights, adjust a thermostat, or announce a custom message. To set this up, use the Alexa app to create or modify a routine and select the Echo Button as the trigger.
- Alexa Skill Blueprints: Customize your own trivia game skills using Alexa Skill Blueprints, integrating the Echo Buttons for a personalized interactive experience.

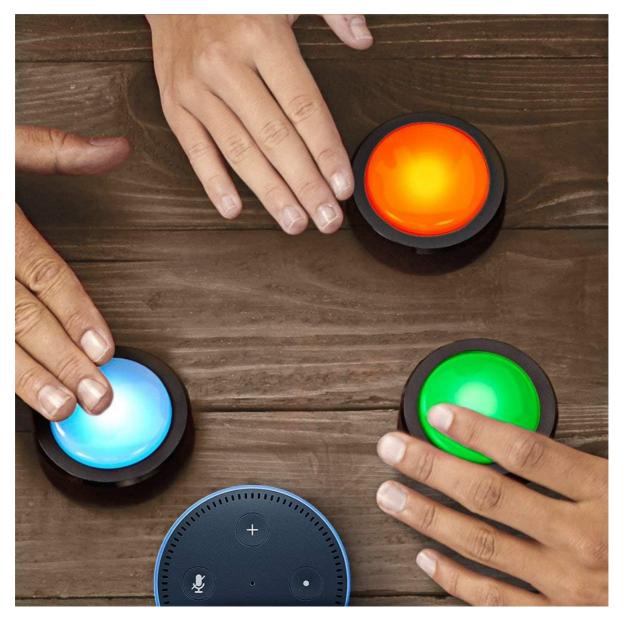


Image: Users interacting with Echo Buttons during a game, with buttons displaying various colors.

Start your routines with the press of a button



Image: An Echo Button used to activate smart home routines, such as announcing dinner or checking the weather.

MAINTENANCE

Battery Replacement: When the Echo Button's light indicates low battery or it fails to respond, it's time to replace the AAA batteries. Follow the battery installation steps outlined in the "Setup" section. Ensure proper disposal of used batteries according to local regulations.

Cleaning: To clean your Echo Buttons, gently wipe them with a soft, dry cloth. Avoid using abrasive cleaners or submerging the device in water.

TROUBLESHOOTING

- Button Not Pairing:
 - Ensure batteries are correctly installed and charged.
 - Verify your Echo device is online and within range (best within 15 feet or 4.5 meters).
 - Try restarting your Echo device by unplugging it for 10 seconds and plugging it back in.
 - If previously paired, try unpairing the button from the Alexa app and then re-pairing.
- Button Not Responding:

- · Check battery level.
- Ensure the button is still paired with your Echo device.
- · Confirm the Alexa skill or routine you are trying to use is active and correctly configured.
- **Bluetooth Connectivity Issues:** Echo Buttons comply with Bluetooth Core Specification version 4.2. If experiencing persistent connectivity problems, ensure there are no significant obstructions between the button and the Echo device, and minimize interference from other wireless devices.

For further assistance, refer to the "Using Echo Buttons with Alexa" or "Using Echo Buttons with Routines" help sections available through Amazon support resources.

SPECIFICATIONS

- Size and Weight: 2.95" x 2.95" x 1.42" (75 mm x 75 mm x 36 mm), 1.83 oz. (52 grams). Actual size and weight may vary by manufacturing process.
- Bluetooth Connectivity: Complies with Bluetooth Core Specification version 4.2 including Basic Rate (BR) and Bluetooth Low Energy (BLE). Works best within 15 feet (4.5 meters) of connected device.
- Power: Each button requires 2 AAA batteries.

WARRANTY AND SUPPORT

Warranty: The Amazon Echo Buttons come with a 90-day limited warranty and service included.

Support: For any issues or additional help with your Echo Buttons, please visit the Amazon support website and search for "Using Echo Buttons with Alexa" or "Using Echo Buttons with Routines."

Related Documents - Echo Buttons





Amazon Echo & Alexa Brand Usage Guidelines for External Partners

Official guidelines for external partners on the proper usage of Amazon Echo and Alexa brand assets, including logos, typography, colors, and representation in marketing materials. Ensure brand consistency and integrity.



Amazon Echo & Alexa Brand Usage Guidelines for Third-Party Marketers

Comprehensive guidelines for third-party marketers on the correct usage of Amazon Echo and Alexa brand assets, including logos, voice, messaging, and product representation, to ensure brand consistency and integrity.

Alexa for Business Administration Guide

aws

Amazon Alexa for Business Administration Guide: Setup, Management, and Features

This administration guide provides comprehensive instructions for setting up, managing, and utilizing Amazon Alexa for Business. It covers device management, user enrollment, skill integration, security, and troubleshooting for enterprise environments.

