



[Manuals.plus](#) /

› [HUBERT](#) /

› HUBERT Airpot Coffee Dispenser POF 76560 User Manual

HUBERT POF 76560

HUBERT® Airpot Coffee Dispenser

Model: POF 76560

INTRODUCTION

Thank you for choosing the HUBERT® Airpot Coffee Dispenser. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new airpot. Please read it thoroughly before first use and retain it for future reference.



Image 1: The HUBERT Airpot Coffee Dispenser, featuring a stainless steel body and black top with a handle and pump mechanism.

IMPORTANT SAFETY INFORMATION

- Always handle with care when filled with hot liquids to prevent burns.
- Do not immerse the entire airpot in water. Refer to cleaning instructions.
- Keep out of reach of children.
- Do not use for carbonated beverages or dry ice, as pressure buildup can cause damage or injury.
- Ensure the lid is securely fastened before transporting.
- Inspect the airpot for any damage before each use. Do not use if damaged.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the airpot from its packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wash the interior liner and all removable parts (lid, pump mechanism) with warm,

soapy water. Rinse thoroughly and dry completely.

3. Assembly:

- Ensure the stainless steel liner is clean and dry.
- Place the lid assembly onto the airpot body, aligning it correctly.
- Twist the lid clockwise until it is securely locked in place.

4. **Pre-heating/Pre-cooling:** For best temperature retention, pre-heat with hot water or pre-cool with cold water for 5-10 minutes before filling with your desired beverage.

OPERATING INSTRUCTIONS

Filling the Airpot

1. Unlock and remove the lid assembly by twisting it counter-clockwise.
2. Pour your prepared hot or cold beverage into the airpot. Do not overfill; leave approximately 1 inch (2.5 cm) of space from the top.
3. Replace the lid assembly and twist clockwise until securely locked.

Dispensing Beverages

- Place a cup or mug under the dispenser spout.
- Press down firmly on the pump lever to dispense the beverage. Release to stop.
- The airpot features a swivel base for easy rotation, allowing dispensing from any angle without lifting.

The stainless steel liner is designed to retain beverage temperature for up to 6 hours.

CARE AND MAINTENANCE

Daily Cleaning

1. After each use, empty any remaining beverage.
2. Remove the lid assembly.
3. Wash the interior liner with warm, soapy water and a soft brush or sponge.
4. Disassemble the pump mechanism (if applicable and designed for disassembly) and wash all parts thoroughly.
5. Rinse all components with clean water until no soap residue remains.
6. Allow all parts to air dry completely before reassembling or storing.

Deep Cleaning (Monthly or as needed)

- For stubborn stains or odors, use a mixture of warm water and a mild cleaning solution specifically designed for beverage containers, or a solution of baking soda and water.
- Let the solution soak for 15-30 minutes, then scrub and rinse thoroughly.
- Do not use abrasive cleaners, bleach, or harsh chemicals, as these can damage the stainless steel liner and seals.

Storage: Store the airpot with the lid slightly ajar to allow air circulation and prevent odors.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Beverage not dispensing or dispensing slowly.	<ul style="list-style-type: none">Lid not securely closed.Pump mechanism clogged.Airpot nearly empty.	<ul style="list-style-type: none">Ensure lid is twisted tightly and locked.Clean the pump mechanism thoroughly.Refill the airpot.
Beverage not staying hot/cold.	<ul style="list-style-type: none">Lid not sealed properly.Airpot not pre-heated/pre-cooled.Airpot left open for extended periods.	<ul style="list-style-type: none">Check lid for proper sealing and ensure it's locked.Pre-heat with hot water or pre-cool with cold water before filling.Keep the lid closed when not dispensing.
Leaking from lid.	<ul style="list-style-type: none">Lid not securely fastened.Seal/gasket damaged or missing.Overfilling.	<ul style="list-style-type: none">Ensure lid is twisted tightly and locked.Inspect and replace seal/gasket if damaged.Do not overfill the airpot.

SPECIFICATIONS

Model: POF 76560

Brand: HUBERT

Capacity: 2.5 Liters

Liner Material: Stainless Steel

Color: Black (top/base), Stainless Steel (body)

Dimensions (L x W x H): 8.75 inches x 6.25 inches x 13 inches (22.23 cm x 15.88 cm x 33.02 cm)

Item Weight: 9.07 kg (approx. 20 lbs)

Temperature Retention: Up to 6 hours (for hot beverages)

Features: Swivel base, recessed pump, removable lever-style lid

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact HUBERT customer service. Keep your purchase receipt as proof of purchase.

Note: Specific warranty terms may vary by region and retailer.

