Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Amazon Basics /
- Amazon Basics Electric Stainless Steel Kettle for Tea and Coffee, BPA-Free, Fast Boiling, Auto Shut-Off, 1.1 Quarts, 1500W, Black and Silver User Manual

Amazon Basics MK-M110A1A

Amazon Basics Electric Stainless Steel Kettle User Manual

Model: MK-M110A1A

PRODUCT OVERVIEW

The Amazon Basics Electric Stainless Steel Kettle is designed for rapid heating of water for various hot beverages and instant meals. Its compact and sleek design makes it a convenient addition to any kitchen. This kettle prioritizes safety with automatic shut-off and boil-dry protection features.

Key Features:

- Rapid Heating: Powerful 1500W heating element for quick boiling.
- Safety Features: Automatic shut-off and boil-dry protection.
- Food-Grade Materials: 100% BPA-free water-contact components.
- Premium Technology: Equipped with a Strix thermostat for reliability.
- User Friendly: Wide opening for easy filling/cleaning, clear water level indicator.



Figure 1: The Amazon Basics Electric Stainless Steel Kettle in black and silver finish.

SETUP

Unpacking and Initial Cleaning:

- 1. Carefully remove all packaging materials and dispose of them responsibly.
- 2. Wipe the exterior of the kettle with a damp cloth.
- 3. Fill the kettle with clean water to the MAX fill line. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.

Placement:

- Place the power base on a flat, stable, heat-resistant surface.
- Ensure the power cord is not dangling where it can be pulled or tripped over.
- · Keep the kettle away from heat sources and direct sunlight.



Figure 2: Key features and dimensions of the kettle, highlighting its compact and safe design.

OPERATING INSTRUCTIONS

- 1. **Fill the Kettle:** Press the lid release button on the handle to open the lid. Fill the kettle with the desired amount of water, ensuring it is between the MIN (0.5L) and MAX (1.0L) marks on the water level indicator. Close the lid securely.
- 2. Place on Base: Position the kettle firmly onto its power base.
- 3. **Power On:** Plug the power cord into a standard electrical outlet. Press the ON/OFF switch located at the bottom of the handle downwards. The indicator light will illuminate, signaling that the kettle is heating.
- 4. **Boiling Process:** The kettle will rapidly heat the water. Once the water reaches a rolling boil, the kettle will automatically shut off, and the indicator light will extinguish.
- 5. Pouring: Carefully lift the kettle from its base and pour the hot water. The heat-resistant handle ensures safe



Figure 3: The kettle can be easily lifted from its detachable base for cordless pouring.



Figure 4: The kettle features a spout with a removable filter for clean pouring.

MAINTENANCE

Cleaning the Exterior:

- Always unplug the kettle and allow it to cool completely before cleaning.
- Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.

Descaling (Removing Mineral Deposits):

Over time, mineral deposits (limescale) may build up inside the kettle, especially in areas with hard water. Regular descaling is recommended to maintain performance.

- 1. Fill the kettle with a mixture of 1 part white vinegar and 2 parts water.
- 2. Boil the mixture and let it stand for at least 30 minutes, or longer for heavy buildup.
- 3. Empty the kettle and rinse thoroughly with fresh water several times.

4. For stubborn deposits, gently scrub the interior with a non-abrasive brush or sponge.

Filter Cleaning:

- The removable filter can be detached for cleaning. Rinse it under running water to remove any particles.
- Reattach the filter securely before using the kettle.



Figure 5: Exploded view of the kettle highlighting its components and features for easy maintenance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not turn on.	Not plugged in; power switch not pressed; no water in kettle (boil-dry protection activated).	Ensure kettle is properly plugged in and switch is pressed down. Add water to the kettle.

Problem	Possible Cause	Solution
Water not boiling.	Insufficient water; kettle not properly seated on base.	Ensure water level is above MIN mark. Re-seat kettle firmly on the power base.
Kettle turns off too quickly.	Mineral buildup (limescale).	Descale the kettle as per the Maintenance section.
Water has an unusual taste/odor.	New kettle odor; mineral buildup.	Perform initial cleaning steps again. Descale the kettle. Use filtered water.

SPECIFICATIONS

• Brand: Amazon Basics

• Model Name: MK-M110A1A

• Capacity: 1.1 Quarts (approx. 1.0 Liter)

• Power: 1500W

• Material: Stainless Steel (BPA-Free water-contact materials)

• Color: Black and Silver

• Special Feature: Automatic Shut-Off, Boil-Dry Protection

• Product Dimensions: 8"L x 5.52"W x 7.88"H

Item Weight: 1.88 PoundsCable Length: 30 InchesUPC: 841710170092

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official Amazon Basics website or the warranty document provided with your product.

• User Manual (PDF): Download Here

• Warranty (PDF): Download Here

© 2024 Amazon Basics. All rights reserved.

Related Documents - MK-M110A1A

