Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Jolly Jumper /
- Jolly Jumper Classic with Stand: Official User Manual for Model 109

Jolly Jumper 109

Jolly Jumper Classic with Stand Instruction Manual

Model 109

1. Introduction

The Jolly Jumper Classic with Stand is designed to provide a safe and engaging exercise experience for infants. This product supports your baby's development by encouraging spring-loaded motion, which aids in balance, coordination, and muscle strength. The freestanding frame allows for versatile placement within your home or outdoors, without requiring a doorway.

This manual provides essential information for the safe and proper assembly, operation, and maintenance of your Jolly Jumper Classic with Stand.

2. IMPORTANT SAFETY WARNINGS

- Never leave child unattended. Always keep your child in view while they are in the Jolly Jumper.
- Age and Weight Limits: Suitable for infants approximately 3 months of age (when baby can hold their head up unassisted) until just before walking age, or up to a maximum weight of 28 lbs (13 kg). Do not use if your child exceeds these limits.
- Proper Posture: The scientifically designed saddle seat supports proper spinal posture. Ensure your baby's toes touch the ground and heels do not, allowing for correct jumping motion.
- **Secure Setup:** Always ensure all components are securely fastened and the frame is stable before placing your child in the jumper. Regularly inspect the product for any signs of wear or damage.
- Clear Surroundings: Ensure there is ample clear space around the jumper to prevent collisions with furniture, walls, or other objects.
- Avoid Overstimulation: Limit jumping sessions to appropriate durations to prevent overstimulation or fatigue.



Image: Correct and incorrect foot placement for baby in the Jolly Jumper. Ensure only toes touch the ground.

3. ASSEMBLY INSTRUCTIONS

The Jolly Jumper Classic with Stand is designed for quick and easy assembly, requiring no tools. Follow these steps to set up your jumper:

- 1. Unpack all components: You should have the steel frame pieces, the spring, the chain, and the saddle seat.
- 2. Assemble the A-frame: Connect the steel frame pieces by screwing them together. The frame consists of a top bar, two side legs, and two support bars that connect the legs.
- 3. Attach the spring: Securely attach the large spring to the center of the top bar of the assembled frame.
- 4. Connect the chain: Attach the chain to the bottom of the spring.
- 5. Attach the saddle seat: Connect the saddle seat to the chain using the provided clips. Ensure all connections are firm and secure.
- 6. Verify Stability: Before use, gently push on the frame to ensure it is stable and does not wobble.



Image: Fully assembled Jolly Jumper Classic with Stand.

Your browser does not support the video tag.

Video: Official Jolly Jumper assembly and usage demonstration.

4. OPERATING INSTRUCTIONS

To ensure your baby's comfort and safety during use, follow these operating guidelines:

1. Placing Baby in the Jumper:

- Lay your baby down and carefully place them into the saddle seat.
- Secure the overlapping bib with snaps for extra security.
- Fasten the buckled latch and the safety velcro belt to ensure a snug and appropriate fit.
- Ensure the saddle firmly supports your baby's spine, promoting correct upright posture.

2. Adjusting Height:

- Adjust the chain length so that your baby's toes touch the ground, but their heels do not. This allows for proper jumping motion and prevents strain.
- The adjustable height feature allows the jumper to grow with your baby.
- 3. **Supervision:** Always supervise your child while they are in the Jolly Jumper. This product is not a substitute for adult supervision.
- 4. **Movement:** The spring-loaded motion allows your baby to jump freely, aiding in muscle development and coordination. The freestanding design allows for movement in all directions (front-to-back, side-to-side).



5. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and safety of your Jolly Jumper:

- Cleaning the Saddle Seat: The fabric saddle seat is washable. Before washing, ensure all velcro strips are attached to prevent snagging. Follow the care instructions on the product label for best results.
- Cleaning the Frame: Wipe down the steel frame with a damp cloth and mild soap as needed. Avoid abrasive cleaners.
- **Inspection:** Periodically inspect all parts, including the frame connections, spring, chain, and saddle seat, for any signs of wear, damage, or loose components. Discontinue use if any damage is found and contact customer support.
- **Storage:** The steel stand folds flat for compact storage and portability. To fold, unscrew the bolts on the side legs and collapse the frame. Store in a dry place away from extreme temperatures.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Jumper feels unstable or wobbly.	Frame not fully assembled or connections are loose.	Ensure all frame pieces are securely screwed together and the stand is fully extended and locked into place.
Baby's feet are not positioned correctly (e.g., flat-footed or dangling).	Incorrect chain length adjustment.	Adjust the chain length so that only your baby's toes touch the ground, with heels slightly off. Refer to the "Operating Instructions" section.
Difficulty placing or removing baby from the saddle.	Initial unfamiliarity with the harness system.	Practice placing and removing your baby. It may be easier with two people initially. Ensure all straps and buckles are properly loosened before attempting to remove the baby.
Baby is not engaging with the jumper.	Baby may be too young (lacks head control) or too old (approaching walking age/weight limit).	Ensure your baby meets the minimum age requirement (approx. 3 months with unassisted head control) and is within the weight limit (up to 28 lbs). Some babies may take time to adjust.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	109
Product Dimensions (Assembled)	50"L x 43"W x 52"H (127 cm L x 109 cm W x 132 cm H)

Feature	Detail
Maximum Weight Recommendation	28 Pounds (13 kg)
Recommended Age Range	Approximately 3 months (with unassisted head control) to just before walking age.
Material Type	Steel, Plastic, Fabric
Item Weight	11.3 pounds (5.1 kg)
Style	Grey Saddle

8. WARRANTY AND CUSTOMER SUPPORT

For specific warranty details, please refer to the documentation included with your product at the time of purchase. Warranty terms may vary.

If you have any questions, require assistance with assembly, or need to report a defect, please contact Jolly Jumper customer support. Contact information can typically be found on the product packaging or the official Jolly Jumper website.

For more information, visit the Jolly Jumper Store.

Related Documents - 109



Jolly Jumper Manual Status

Notification that the Jolly Jumper manual is currently under development and will be available soon.



Baby Trend My First Jumper Instruction Manual

Comprehensive instruction manual for the Baby Trend My First Jumper activity jumper, covering assembly, safety guidelines, care instructions, parts identification, and disassembly.



Infantino Magic Motion Activity Jumper User Manual

Comprehensive instructions for assembling, using, and caring for the Infantino Magic Motion Activity Jumper. Includes safety warnings, play modes, and troubleshooting.



Baby Trend Smart Steps Bounce N' Play Jumper Instruction Manual

Comprehensive instruction manual for the Baby Trend Smart Steps Bounce N' Play Jumper (Model JP01E45A), including safety guidelines, parts list, assembly instructions, and warranty information.



Baby Einstein Ocean Explorers Curiosity Cove 2-in-1 Activity Jumper User Manual

User manual for the Baby Einstein Ocean Explorers Curiosity Cove 2-in-1 Activity Jumper, providing safety instructions, assembly guide, care tips, battery information, and product features. Includes multilingual safety warnings and detailed parts list.



Neighborhood Symphony Activity Jumper™ - Baby Einstein - Operating and Safety Manual

Comprehensive guide for the Baby Einstein Neighborhood Symphony Activity Jumper™. Includes safety warnings, assembly instructions, operating guide, battery information, care instructions, and parts list. Ensure safe and proper use of your activity jumper.