

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Karaoke USA](#) /

› [Karaoke USA WK760 All-in-One Multimedia Wi-Fi Karaoke System User Manual](#)

Karaoke USA WK760

Karaoke USA WK760 All-in-One Multimedia Wi-Fi Karaoke System

User Manual

INTRODUCTION

The Karaoke USA WK760 is an all-in-one multimedia Wi-Fi karaoke system designed for comprehensive entertainment. This system integrates traditional karaoke functions with modern internet capabilities, allowing users to play media from USB drives or SD cards, stream content from online platforms, and install various applications via its Android operating system. This manual provides essential information for the safe and effective use of your WK760 system.

SAFETY INFORMATION

Please read and understand all safety instructions before operating the device. Retain this manual for future reference.

- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Do not block ventilation openings. Ensure adequate space around the unit for proper airflow.
- Use only attachments/accessories specified by the manufacturer.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.
- Keep the unit away from direct sunlight, heat sources, and strong magnetic fields.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Karaoke USA WK760 Karaoke System Unit
- 2 Microphones
- Power Adapter
- User Manual

PRODUCT OVERVIEW

The WK760 system features a 7-inch TFT High Definition Color Touch Screen for intuitive navigation. It delivers 50W peak power output for clear audio. The system supports various multimedia formats and offers internet connectivity via Wi-Fi, enabling access to online content and applications.



Figure 1: Front view of the Karaoke USA WK760 system, showcasing the 7-inch touch screen and control panel.

Key Features:

- 7" TFT High Definition Color Touch Screen
- 50W Peak Power Output
- Multimedia and Internet Karaoke Player
- Record Vocal and Music Mix from MP3, Built-in Songs to USB or SD Card
- Instant Playback from USB Flash Drive and SD Card
- Wi-Fi Connectivity for streaming and app installation
- Android OS for app compatibility
- 2 Microphone Inputs with holders
- Echo and Volume Controls

- Headphone Output

SETUP

1. Unpacking and Placement

1. Carefully remove the unit and all accessories from the packaging.
2. Place the unit on a stable, flat surface. Ensure there is adequate ventilation around the unit.

2. Power Connection

1. Connect the provided power adapter to the DC IN port on the back of the WK760 unit.
2. Plug the power adapter into a standard electrical outlet (220V AC).

3. Microphone Connection

1. Insert the microphone cables into the MIC 1 and MIC 2 input jacks on the unit.
2. Place the microphones into the integrated holders for convenience.

4. External Display Connection (Optional)

To display content on a larger screen:

1. Connect an HDMI cable (not included) from the HDMI OUT port on the WK760 to an HDMI input on your television or projector.
2. Select the corresponding HDMI input on your external display.

5. Wi-Fi Connection

1. Power on the unit.
2. On the touch screen, navigate to the Settings menu.
3. Select 'Wi-Fi' and turn it on.
4. Choose your desired Wi-Fi network from the list and enter the password if prompted.
5. Once connected, the Wi-Fi icon will indicate a successful connection.

OPERATING INSTRUCTIONS

1. Powering On/Off

- To power on, press the Power button located on the unit.
- To power off, press and hold the Power button until the shutdown options appear on the screen, then select 'Power Off'.

2. Using the Touch Screen

The 7-inch touch screen operates similarly to a smartphone or tablet. Tap icons to open applications, swipe to navigate menus, and use pinch-to-zoom gestures where applicable.

3. Playing Media from USB/SD Card

1. Insert a USB flash drive into the USB port or an SD card into the SD card slot.
2. The system should automatically detect the media. If not, navigate to the 'File Manager' or 'Media Player' application.
3. Browse for your MP3 or other compatible media files and select to play.

4. Internet Karaoke and App Usage

1. Ensure the unit is connected to Wi-Fi.
2. Access pre-installed streaming applications (e.g., YouTube) or download new apps from the Google Play Store (or similar app stores).
3. Search for karaoke tracks or other content within the chosen application.

5. Recording Vocals and Music

1. Ensure a USB drive or SD card is inserted for storage.
2. Play your desired music track.
3. Sing into the microphone.
4. Locate the 'Record' function on the screen or control panel and activate it.
5. Press 'Stop' when finished. The recording will be saved to your USB drive or SD card.
6. Use the 'Playback' function to listen to your recorded performance.

MAINTENANCE

Cleaning

- Always unplug the unit from the power outlet before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces.
- For the touch screen, use a soft, lint-free cloth specifically designed for electronic screens. Do not use abrasive cleaners or solvents.

Storage

- If storing the unit for an extended period, disconnect the power adapter and remove any inserted USB drives or SD cards.
- Store the unit in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your WK760 system, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not power on.	Power adapter not connected or faulty; power outlet not active.	Ensure power adapter is securely connected to the unit and a working electrical outlet. Test the outlet with another device.
No sound from speakers.	Volume too low; mute activated; incorrect audio source selected.	Increase master volume. Check if mute is active. Verify the correct audio input/source is selected.
Microphones not working.	Microphones not connected; microphone volume too low; faulty microphone.	Ensure microphones are securely plugged into the correct jacks. Increase microphone volume. Test with another microphone if available.

Problem	Possible Cause	Solution
Touch screen unresponsive or freezing.	Software glitch; system overload.	Restart the unit by holding the power button. If issues persist, ensure the system software is up to date. Avoid running too many applications simultaneously.
Cannot connect to Wi-Fi.	Incorrect password; out of range; router issue.	Double-check the Wi-Fi password. Move the unit closer to the Wi-Fi router. Restart your Wi-Fi router.
External display shows no signal.	HDMI cable not connected properly; incorrect input selected on TV.	Ensure the HDMI cable is securely connected to both the WK760 and the TV. Select the correct HDMI input on your TV.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	WK760
Display	7" TFT High Definition Color Touch Screen
Power Output	50W Peak
Connectivity	Wi-Fi, USB, SD Card, HDMI Out
Microphone Inputs	2 (with holders)
Operating System	Android OS
Power Source	Battery Powered (Lithium Metal) / AC Adapter
Voltage	220 Volts (AC)
Item Weight	10.89 pounds
Product Dimensions	12.8 x 11 x 19 inches
Color	Silver
Media Format	Multiple Formats

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Karaoke USA website. For technical support or service inquiries, please contact Karaoke USA customer service through their official channels. Keep your purchase receipt as proof of purchase for warranty claims.

