

## Fossil FS5332

# Fossil Men's Rutherford FS5332 Quartz Watch Instruction Manual

Model: FS5332

## INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your Fossil Men's Rutherford FS5332 Quartz Watch. Please read this guide thoroughly to ensure optimal performance and longevity of your timepiece.



Front view of the Fossil Rutherford FS5332 watch, showcasing its black dial, gold-tone case, and brown leather strap.

## SETUP

### 1. Setting the Time and Date

- 1. Pull out the crown:** Gently pull the crown (the small knob on the side of the watch case) to position 2 for date adjustment, or position 3 for time adjustment.



Side view of the watch, highlighting the crown used for setting time and date.

- 2. Adjust the date (if applicable):** If your watch has a date display, rotate the crown clockwise or counter-clockwise in position 2 until the correct date is shown. Avoid setting the date between 9 PM and 3 AM to prevent damage to the movement.
- 3. Adjust the time:** Pull the crown out to position 3. Rotate the crown to move the hands clockwise until the correct time is displayed. Ensure you differentiate between AM and PM for watches with a date function, as the date changes around midnight.
- 4. Push in the crown:** Once the time and date are set, push the crown back into position 1 (normal operating position) to start the watch and ensure water resistance.

### 2. Adjusting the Strap

The leather strap features a traditional buckle closure. To adjust, simply thread the strap through the buckle and secure it in the desired hole for a comfortable fit on your wrist.



The Fossil Rutherford FS5332 watch worn on a wrist, demonstrating fit.

## OPERATING YOUR WATCH

Your Fossil Rutherford FS5332 watch is powered by a reliable quartz movement, offering accurate timekeeping with minimal intervention.

- **Time Display:** The watch displays hours, minutes, and seconds. Some models may also include a date display.
- **Water Resistance:** This watch is water-resistant up to 50 meters (5 ATM). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid operating the crown while the watch is wet or submerged.

## MAINTENANCE

Proper care will help preserve the appearance and function of your watch.

- **Cleaning the Case:** Wipe the watch case and crystal with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying.
- **Leather Strap Care:** Avoid prolonged exposure of the leather strap to water, direct sunlight, and extreme humidity, as these can cause discoloration or damage. Clean the strap with a soft, dry cloth. If it gets wet, allow it to air dry naturally, away from direct heat.
- **Battery Replacement:** The quartz movement is powered by a battery. When the watch stops or the second hand begins to jump erratically (indicating a low battery), it is time for a replacement. We recommend having the battery replaced by a qualified watch technician to ensure the watch's water resistance is maintained.

## TROUBLESHOOTING

If you encounter issues with your watch, please refer to the following common solutions:

- **Watch Not Running:**
  - Check if the crown is fully pushed in to position 1.
  - The battery may need replacement. Consult a professional watch technician.
- **Date Not Changing at Midnight:**
  - The watch may be set to PM instead of AM. Advance the time by 12 hours.

- **Condensation Inside Crystal:**

- This indicates a potential breach in water resistance. Have the watch inspected by a professional immediately.

## SPECIFICATIONS



Rear view of the watch, displaying the stainless steel caseback with model and water resistance markings.

Feature	Detail
Model Number	FS5332
Movement Type	Quartz
Case Material	Stainless Steel
Case Diameter	38 mm
Band Material	Leather
Water Resistance	5 ATM (50 Meters / 165 Feet)
Crystal Type	Mineral Crystal
Battery	1 Lithium Ion battery (included)

## WARRANTY INFORMATION

Your Fossil watch is covered by a limited warranty against defects in materials and workmanship under normal use. The specific terms and duration of the warranty may vary by region. Please refer to the official Fossil website or the warranty card included with your purchase for detailed information.

*This warranty does not cover:*

- Battery life.
- Normal wear and tear.
- Damage resulting from improper handling, lack of care, accidents, or unauthorized repairs.
- Water damage unless marked "water-resistant" and the crown is properly closed.

## CUSTOMER SUPPORT

For further assistance, service, or warranty claims, please contact Fossil customer support or visit their official website.

- **Official Website:** [www.fossil.com](http://www.fossil.com)
- **Service Centers:** Information on authorized service centers can be found on the Fossil website.