

[Manuals.plus](#) /

› [Bright Starts](#) /

› Bright Starts Spin & Giggle Giraffe (Model 10933-2) Instruction Manual

Bright Starts 10933-2

Bright Starts Spin & Giggle Giraffe Instruction Manual

Model: 10933-2

1. PRODUCT OVERVIEW

The Bright Starts Spin & Giggle Giraffe is an interactive toy designed to engage infants and toddlers through counting, music, lights, and ball-popping action. It encourages gross motor skills and teaches cause and effect.





An image of the Bright Starts Spin & Giggle Giraffe toy, featuring its yellow body, orange spots, blue feet, and a clear neck tube containing red, green, and yellow balls. A blue ball is shown separately at the base.

2. SAFETY INFORMATION

- **Age Recommendation:** Suitable for children aged 12 months and up.
- **Adult Supervision:** Always use under adult supervision.
- **Battery Safety:** Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Remove batteries if the toy is stored for a long period or when batteries are exhausted. Dispose of exhausted batteries properly.
- **Choking Hazard:** The included balls are sized for safe play for the recommended age. Ensure no smaller objects are used with the toy that could pose a choking hazard.
- **Material:** Made from non-toxic plastic.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Bright Starts Spin & Giggle Giraffe Toy
- 6 x Colorful Play Balls

4. BATTERY INSTALLATION

The toy requires 4 AA alkaline batteries (not included).

1. Locate the battery compartment on the underside of the giraffe toy.
2. Using a Phillips head screwdriver, loosen the screw on the battery compartment cover.
3. Remove the cover.
4. Insert 4 new AA alkaline batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
5. Replace the battery compartment cover and tighten the screw securely.

5. OPERATING INSTRUCTIONS

5.1. For Sitting Babies (12+ Months)

Sitting babies can interact with the giraffe by dropping balls into its mouth.

1. Place the giraffe toy on a flat, stable surface.
2. Encourage your baby to drop one of the colorful play balls into the giraffe's open mouth.
3. The toy will respond with counting, music, and lights as the ball travels down the giraffe's neck.
4. To activate additional sounds and melodies, your infant can press the button or bat at the roller located on the giraffe's tie.



A young child, wearing a peach top and purple pants, is shown dropping a purple ball into the giraffe's open mouth. This illustrates the ball-dropping feature for interactive play.

5.2. For Toddlers

Toddlers can activate the spinning and ball-popping action.

1. Ensure balls are loaded into the giraffe's neck.
2. Press the red horns located on top of the giraffe's head.
3. The giraffe will spin around, and the balls will pop out from its feet, encouraging chasing and gross motor skill development.



A young child is shown pressing the red horns on top of the giraffe's head, which activates the spinning and ball-popping mechanism. The giraffe is yellow with orange spots and blue feet.



A baby, wearing a red shirt and jeans, is kneeling next to the giraffe toy, smiling. Colorful balls are seen emerging from the giraffe's feet, demonstrating the ball-popping action.



A dynamic image of the giraffe toy with multiple colorful balls (red, blue, yellow) in motion, appearing to eject from the giraffe's blue feet openings. This highlights the toy's spinning and ball-release feature.

6. CARE AND MAINTENANCE

- **Cleaning:** Wipe the toy clean with a damp cloth and mild soap. Do not immerse in water.
- **Drying:** Air dry thoroughly before storage or next use.
- **Storage:** Store in a cool, dry place away from direct sunlight.
- **Battery Removal:** Remove batteries if the toy will not be used for an extended period.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toy does not turn on or respond.	Batteries are dead or incorrectly installed.	Replace with new AA alkaline batteries, ensuring correct polarity.
Balls do not pop out or toy does not spin.	Insufficient battery power or mechanism obstruction.	Replace batteries. Ensure no foreign objects are obstructing the spinning mechanism or ball pathways.
Sound is distorted or too low.	Low battery power.	Replace batteries.

8. SPECIFICATIONS

- **Model Number:** 10933-2
- **Product Dimensions:** 24.89 x 28.96 x 46.48 cm
- **Item Weight:** 1.65 kg
- **Material Type:** Plastic
- **Additional Product Features:** Non Toxic
- **Power Source Type:** Battery
- **Batteries Required:** Yes, 4 AA alkaline batteries
- **Recommended Age:** 12 months and up

9. WARRANTY AND CUSTOMER SUPPORT

Bright Starts products are manufactured to high-quality standards. For specific warranty information, please refer to the documentation included with your purchase or visit the official Bright Starts website.

If you have any questions, concerns, or require assistance with your Spin & Giggle Giraffe, please contact Bright Starts customer support. Contact details can typically be found on the product packaging or the brand's official website.



