



[Manuals.plus](#) /

› [Lenovo](#) /

› [Lenovo K6 Note Smartphone User Manual](#)

Lenovo K6 Note

Lenovo K6 Note Smartphone User Manual

Model: K6 Note

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Lenovo K6 Note smartphone. Please read this manual thoroughly before using your device to ensure proper setup and functionality.



Image: Lenovo K6 Note smartphone, showcasing its gold finish from both front and a slight angle of the back, highlighting the camera and fingerprint sensor.

SETUP

1. Inserting SIM Cards and MicroSD Card

The Lenovo K6 Note supports dual Nano SIM cards and an optional microSD card for expanded storage.

1. Locate the SIM/microSD card tray on the side of the device.
2. Use the provided SIM ejector tool to open the tray.
3. Carefully place your Nano SIM cards into the designated slots. Ensure the gold contacts face downwards.

4. If using a microSD card, insert it into its dedicated slot.
5. Gently push the tray back into the device until it clicks into place.

Note: This is an international model. Verify compatibility with your local carrier's GSM bands (850/900/1800/1900 HSDPA, LTE bands 1, 3, 5, 7, 8, 20, 38, 40, 41) before inserting SIM cards. It is not compatible with CDMA carriers such as Verizon, Sprint, or Boost.

2. Initial Power On and Configuration

1. Press and hold the Power button until the Lenovo logo appears.
2. Follow the on-screen prompts to select your language, connect to a Wi-Fi network, and set up your Google account.
3. Configure security settings, including fingerprint recognition.

OPERATING INSTRUCTIONS

1. Basic Navigation

- **Power Button:** Press to turn the screen on/off. Press and hold to power off or restart.
- **Volume Buttons:** Adjust media volume, call volume, or notification volume.
- **Touchscreen:** Tap to select, swipe to scroll, pinch to zoom.

2. Camera Operation

The Lenovo K6 Note features a 16 MP rear camera with dual CCT flash and an 8 MP front camera.

1. Open the Camera application from the home screen or app drawer.
2. Tap the screen to focus on a subject.
3. Tap the shutter button to capture a photo.
4. Switch between front and rear cameras using the camera toggle icon.



Image: Front view of the Lenovo K6 Note smartphone, displaying its screen with app icons and time.

3. Fingerprint Sensor

The fingerprint reader provides secure and quick access to your device.

1. Navigate to *Settings > Security > Fingerprint*
2. Follow the on-screen instructions to register your fingerprints.
3. Once registered, you can unlock your phone by placing your finger on the sensor.

4. Audio Enhancement (Dolby Atmos)

Your device features Dolby Atmos audio enhancement for an improved listening experience.

- Access Dolby Atmos settings through the *Settings* menu or quick settings panel.
- Adjust audio profiles for music, movies, or voice to suit your preference.

MAINTENANCE

1. Battery Management

- To maximize battery life, avoid extreme temperatures.
- Use the original charger provided with your device.
- Close unused applications running in the background.
- Adjust screen brightness to a comfortable level.

2. Software Updates

Regular software updates provide security enhancements and new features.

- Check for updates via *Settings > About phone > System updates*
- Ensure your device is connected to Wi-Fi and has sufficient battery charge before initiating an update.

3. Cleaning Your Device

- Use a soft, lint-free cloth to clean the screen and body.
- Avoid using harsh chemicals or abrasive materials.

TROUBLESHOOTING

Problem	Solution
Device does not power on.	Ensure the battery is charged. Connect the device to its charger and wait a few minutes before attempting to power on again.
Poor network signal or no service.	Check if SIM cards are correctly inserted. Verify that your carrier's network is available in your area. Restart the device.
Fingerprint sensor not responding.	Ensure your finger is clean and dry. Re-register your fingerprint if the issue persists.
Applications are crashing or freezing.	Clear the cache of the problematic application (<i>Settings > Apps > [App Name] > Storage > Clear cache</i>). Restart the device.

SPECIFICATIONS

- **Model Name:** K6 Note
- **Operating System:** Android 6.0 (Marshmallow)
- **Processor:** 1.4GHz Octa-core
- **RAM:** 3 GB
- **Internal Storage:** 32 GB (approx. 27 GB user accessible)

- **Expandable Storage:** microSD, up to 128 GB (optional)
- **Display:** 5.5-inch Full HD (13.97 cm) IPS
- **Rear Camera:** 16 MP with Dual CCT Flash
- **Front Camera:** 8 MP
- **Battery:** 4000 mAh Li-poly (built-in)
- **SIM Support:** Dual Nano SIM
- **Network Connectivity:** GSM, HSDPA, 4G LTE (Bands: 1, 3, 5, 7, 8, 20, 38, 40, 41)
- **Wireless:** Wi-Fi
- **Special Features:** Fingerprint Reader, Dolby Atmos Audio, Gravity Sensor, Proximity Sensor, Light Sensor, Vibrator, Gyroscope
- **Dimensions:** 15.09 x 0.84 x 7.59 cm
- **Weight:** 168 g

WARRANTY AND SUPPORT

This Lenovo K6 Note is an international model. It does not come with a US warranty. For warranty information specific to your region, please refer to the documentation provided at the point of purchase or contact your local Lenovo support center.

For further assistance or technical support, please visit the official Lenovo support website or contact their customer service.

Lenovo Support Website: support.lenovo.com

