

[Manuals.plus](#) /

› [Epson](#) /

› Epson T786 DURABrite Ultra Ink Cartridge Combo Pack User Manual

Epson T786XL-BCS


Epson T786 DURABrite Ultra Ink Cartridge Combo Pack User Manual

Model: T786XL-BCS

INTRODUCTION

This manual provides essential information for the installation, operation, and maintenance of your Epson T786 DURABrite Ultra Ink Cartridge Combo Pack (Model T786XL-BCS). These genuine Epson ink cartridges are designed to work seamlessly with compatible Epson Workforce Pro printers, delivering high-quality, durable prints.

The combo pack includes one high-capacity black cartridge (786XL) and standard capacity color cartridges (786) for Cyan, Magenta, and Yellow. Epson's DURABrite Ultra Ink technology ensures prints are smudge, fade, and water-resistant, performing excellently on both plain and glossy photo paper.

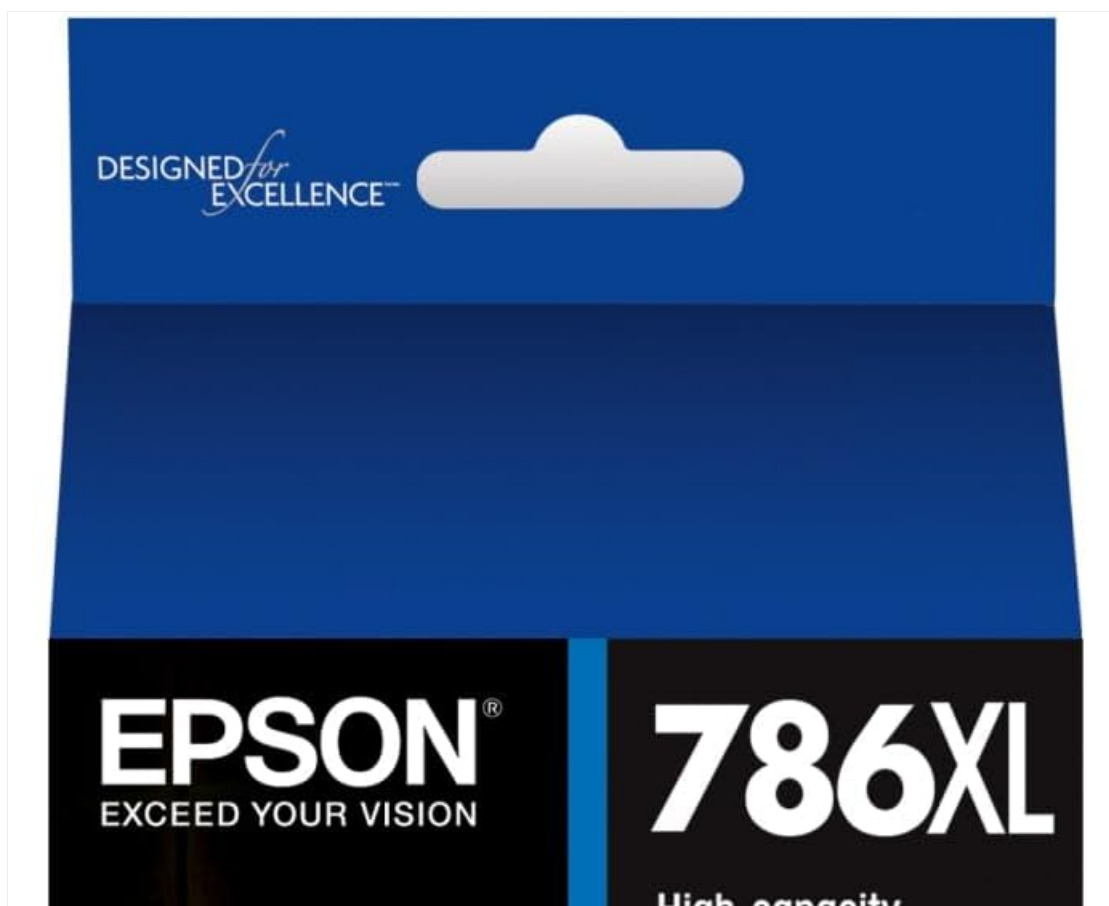 

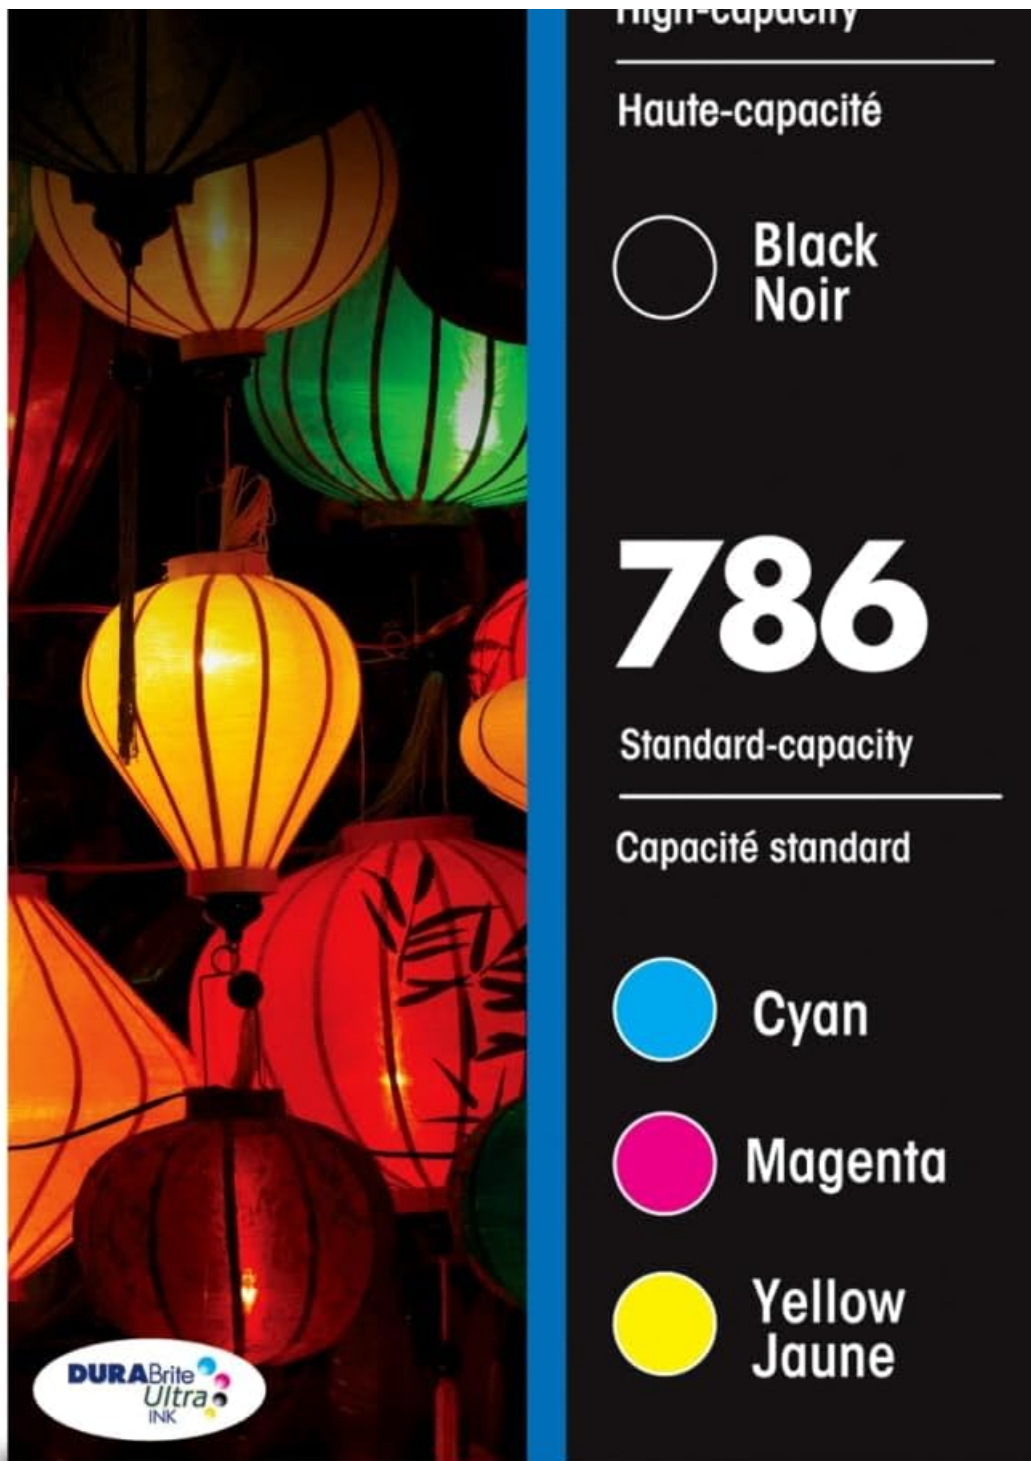 


Image: Front view of the Epson T786XL-BCS DURABrite Ultra Ink Cartridge Combo Pack retail box, showing the black 786XL and color 786 cartridges (Cyan, Magenta, Yellow).

PACKAGE CONTENTS

The Epson T786 DURABrite Ultra Ink Cartridge Combo Pack contains the following:

- 1 x Epson 786XL Black Ink Cartridge (High Capacity)
- 1 x Epson 786 Cyan Ink Cartridge (Standard Capacity)
- 1 x Epson 786 Magenta Ink Cartridge (Standard Capacity)
- 1 x Epson 786 Yellow Ink Cartridge (Standard Capacity)

DESIGNED *for*
EXCELLENCE™

786XL



786



786XL

Black
Noir

BK

786

Cyan

C

786

Magenta

M

786

Yellow
Jaune

Y

EPSON®
EXCEED YOUR VISION

786XL

High-capacity

Haute-capacité

○ Black
Noir

786

Standard-capacity

Capacité standard

● Cyan

● Magenta

● Yellow
Jaune



Image: The Epson T786XL-BCS combo pack box opened, revealing the individual black, cyan, magenta, and yellow ink cartridges inside their packaging.

SETUP AND INSTALLATION

Follow these steps to properly install the ink cartridges into your compatible Epson printer. Refer to your printer's specific user manual for detailed instructions on opening the ink cartridge compartment.

1. **Prepare the Printer:** Ensure your printer is turned on. Open the ink cartridge cover or access door. The print head will move to the replacement position. Wait until it stops moving.
2. **Remove Old Cartridge (if applicable):** Gently press the tab on the old cartridge and lift it straight out of its slot. Dispose of used cartridges responsibly according to local regulations.
3. **Unpack New Cartridge:** Carefully remove the new Epson ink cartridge from its vacuum-sealed packaging.
Caution: Do not touch the green circuit board or the ink supply port on the cartridge.
4. **Shake Cartridge (Black only):** For the black ink cartridge, gently shake it horizontally 4-5 times before opening the package. This helps distribute the ink evenly. Color cartridges do not require shaking.
5. **Insert New Cartridge:** Insert the new cartridge into the correct slot for its color. Push it down firmly until it clicks into place. Ensure it is securely seated.
6. **Close Cover:** Close the ink cartridge cover or access door. The printer will begin initializing the new cartridges. This process may take a few minutes. Do not turn off the printer during this time.
7. **Confirmation:** Once initialization is complete, the printer's display will indicate that the cartridges are ready for use.

For a visual guide on ink cartridge replacement, please consult your printer's specific model manual or the Epson support website.

OPERATING GUIDELINES

Epson DURABrite Ultra Ink is formulated for optimal performance with Epson printers. Here are some guidelines for best results:

- **Genuine Ink:** Always use genuine Epson ink cartridges to ensure consistent print quality, reliability, and to protect your printer's warranty.
- **Individual Cartridges:** Epson's individual ink cartridge system allows you to replace only the color that runs out, reducing waste and saving money.
- **DURABrite Ultra Benefits:**
 - **Smudge Resistant:** Prints dry instantly, making them resistant to smudges.
 - **Fade Resistant:** Provides long-lasting prints that resist fading over time.
 - **Water Resistant:** Offers water-resistant prints, ideal for documents that may encounter moisture.
- **Storage:** Store unopened ink cartridges in their original packaging in a cool, dark place. Avoid extreme temperatures.
- **Print Head Cleaning:** If print quality declines (e.g., missing lines, streaking), perform a print head cleaning cycle through your printer's utility software. This uses a small amount of ink.

ENGINEERED EXCLUSIVELY FOR YOUR EPSON PRINTER



GENUINE EPSON® INK 

Image: Two individuals working in an office setting, with an Epson printer visible, emphasizing that the ink is engineered exclusively for Epson printers.

MAINTENANCE

Proper maintenance ensures the longevity of your printer and the quality of your prints when using Epson ink cartridges.

- **Regular Printing:** Print at least once a week to prevent ink from drying in the print head nozzles.
- **Check Ink Levels:** Monitor ink levels regularly through your printer's software or display. Replace cartridges before they are completely empty to avoid print quality issues.
- **Print Head Alignment:** If prints appear misaligned or blurry, perform a print head alignment from your printer's utility software.
- **Printer Cleaning:** Keep the printer's exterior clean and free of dust. Avoid spraying cleaning solutions directly onto the printer.

RIGOROUS QUALITY TESTING



GENUINE EPSON® INK    

Image: Scientists in a laboratory setting conducting rigorous quality testing on ink, highlighting Epson's commitment to product quality.

TROUBLESHOOTING

Here are solutions to common issues you might encounter with your ink cartridges or printer:

Problem	Possible Cause	Solution
Poor print quality (streaks, missing colors)	Clogged print head nozzles, low ink levels, non-genuine ink.	Perform a print head cleaning cycle. Check ink levels and replace low cartridges. Ensure genuine Epson ink is used.



Problem	Possible Cause	Solution
"Ink cartridge not recognized" error	Cartridge not seated correctly, dirty contacts, faulty cartridge.	Remove and reinsert the cartridge firmly. Clean the cartridge's gold contacts and the printer's contacts with a lint-free cloth. Try a new genuine Epson cartridge if the issue persists.
Prints are faded or incorrect colors	Low ink in one or more color cartridges, incorrect printer settings.	Check ink levels and replace as needed. Verify printer settings for color management and paper type.
Ink smudges after printing	Using non-DURABrite ink, incorrect paper type, or not allowing sufficient drying time (unlikely with DURABrite).	Ensure you are using genuine DURABrite Ultra Ink. Select the correct paper type in printer settings.

If troubleshooting steps do not resolve the issue, refer to your printer's comprehensive manual or contact Epson support.

SPECIFICATIONS

Attribute	Detail
Brand	Epson
Model Name	T786XL-BCS
Series	T786XL-BCS
Ink Color	Black, Cyan, Magenta, Yellow (Combo Pack)
Ink Type	DURABrite Ultra Ink
Ink Base	Water
Page Yield (Black)	Approx. 800 pages (ISO/IEC 24711)
Special Feature	Water Resistant, Smudge Resistant, Fade Resistant
Item Weight	12 ounces (packaging included)
Product Dimensions	7.5 x 3.7 x 4.4 inches
Compatible Devices	Epson WorkForce Pro WF-5690, WF-5620, WF-5110, WF-5190, WF-4640, WF-4630 (and other select Epson Workforce Printers)

  GENUINE EPSON **QUALITY** AND **PERFORMANCE**

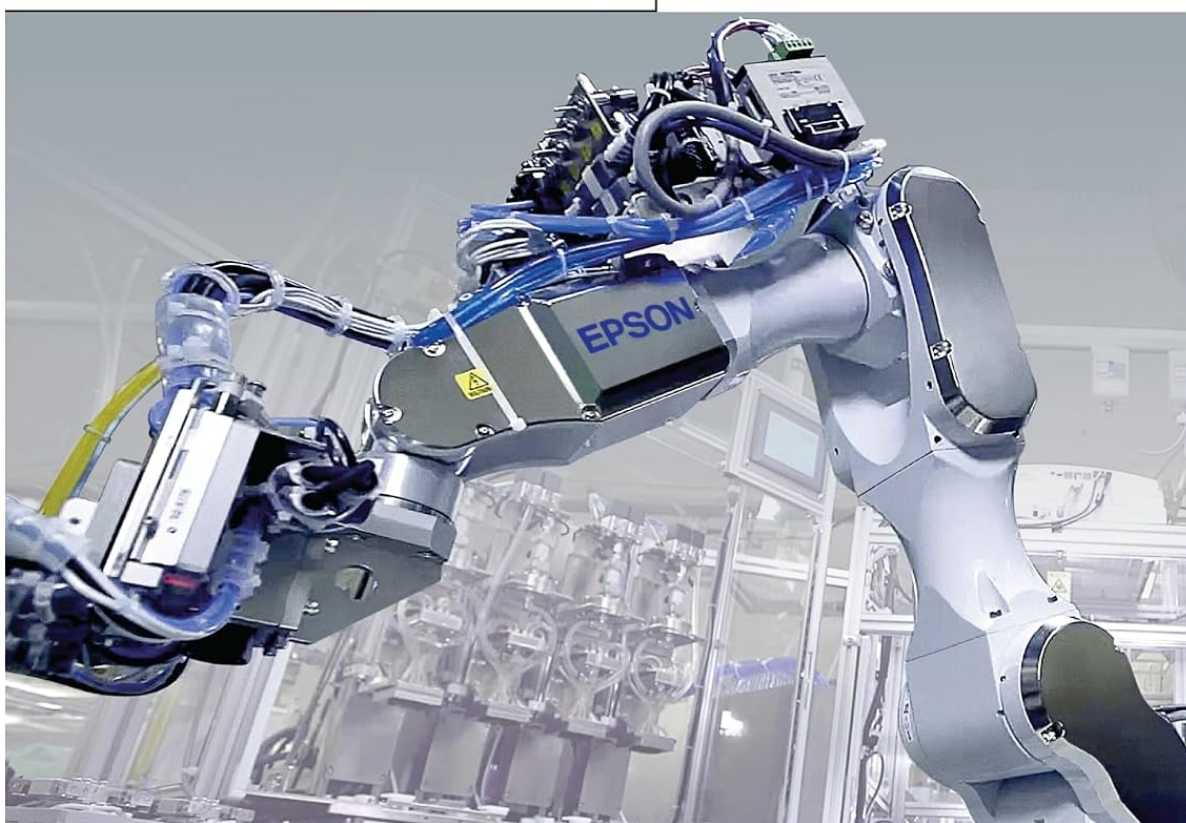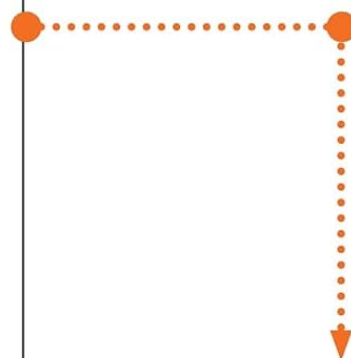

GENUINE EPSON® INK



Image: A robotic arm in a manufacturing environment, symbolizing the genuine Epson quality and performance in the production of their ink cartridges.

WARRANTY AND SUPPORT

Epson genuine ink cartridges are covered by Epson's standard warranty. For specific warranty details related to your region and product, please refer to the official Epson website or the documentation included with your printer. For technical support, troubleshooting assistance, or to find authorized service centers, please visit the official Epson support website or contact their customer service. Using genuine Epson ink helps ensure your printer's warranty remains valid.

Epson Support: <https://epson.com/support>

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B072JLH66N>

More documents and user manuals: <https://manuals.plus/>