

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [MAX](#) /

› [MAX LED Partybar4 RGBW Light Set with Stand - Instruction Manual](#)

MAX PartyBar4

MAX LED Partybar4 RGBW Light Set with Stand - Instruction Manual

Model: PartyBar4 | Brand: MAX

1. INTRODUCTION

Thank you for purchasing the MAX LED Partybar4. This versatile RGBW light set is designed to create dynamic and colorful light shows for various events. It features four PAR spots with RGBW LEDs, multiple operating modes, and comes with a sturdy stand for easy setup. This manual provides essential information for safe operation, setup, and maintenance of your device. Please read it thoroughly before use and keep it for future reference.

PAR LIGHT EFFECT

CREATE A COLOURFUL LIGHTSHOW

WITH **4-IN-1 LEDS**



Image 1.1: The MAX LED Partybar4, showcasing its four PAR spots with vibrant purple illumination.

2. SAFETY INSTRUCTIONS

- Read all instructions carefully before operating the device.
- Keep this manual for future reference.
- Ensure the power supply matches the voltage specified on the device.
- Do not expose the device to rain or moisture to prevent fire or electric shock.
- Always disconnect from the mains power supply before cleaning or servicing.
- Do not open the housing; there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- Avoid direct eye exposure to the light source, as it can cause eye damage.
- Ensure proper ventilation around the unit to prevent overheating.
- Position the device on a stable surface or mount it securely using appropriate hardware.

3. PRODUCT OVERVIEW

3.1 Components

- LED Partybar4 unit with 4 PAR spots
- Adjustable tripod stand
- Wireless remote control
- Power cable
- User manual

3.2 Key Features

- 4 PAR spots with RGBW LEDs for vibrant color mixing.
- Plug and Play design for quick setup.
- Multiple operating modes: Sound-activated, Auto, DMX, and Master/Slave.
- Pre-programmed shows for instant effects.
- Wireless remote control for convenient operation.
- Integrated control panel with LED display for easy settings adjustment.
- Sturdy, adjustable tripod stand with a maximum height of 1.8m.

EASY TO CONTROL
AND TO **ADJUST COLOURS & FUNCTIONS**



Image 3.1: The MAX LED Partybar4 with its included wireless remote control, highlighting ease of color and function adjustment.

max
MUSIC

CONTROL PANEL WITH LED DISPLAY

WITH DMX & STAND-ALONE MODE



- 8 DMX CHANNELS

max
MUSIC

Image 3.2: Detailed view of the control panel, featuring power input, DMX connections, and the LED display for mode selection.

4. SETUP

4.1 Assembling the Stand

1. Unfold the tripod legs and ensure they are fully extended and stable.
2. Loosen the height adjustment knob on the stand.
3. Extend the central pole to the desired height, ensuring it is securely locked in place. The maximum height is 1.8 meters.
4. Tighten the height adjustment knob firmly.

STURDY TRIPOD EASILY ADJUSTABLE



- MAXIMUM HEIGHT OF 1,8M

max
MUSIC

Image 4.1: The sturdy tripod stand, illustrating its adjustable height mechanism for optimal positioning.

4.2 Mounting the Partybar4 Unit

1. Carefully place the Partybar4 unit onto the top of the assembled tripod stand.
2. Secure the unit to the stand using the provided mounting hardware (if applicable) to prevent accidental dislodgement.
3. Adjust the angle of the PAR spots as desired by loosening and tightening their side knobs.

4.3 Power Connection

1. Connect the power cable to the "POWER IN" socket on the Partybar4 unit.
2. Plug the other end of the power cable into a suitable mains power outlet.
3. Ensure the power switch on the unit is in the "OFF" position before connecting to power.

4.4 DMX Connection (Optional)

For advanced control, connect a DMX controller to the "DMX IN" port using a standard 3-pin DMX cable. If linking multiple

units, connect the "DMX OUT" of the first unit to the "DMX IN" of the next unit in a daisy chain.

5. OPERATING MODES

The MAX LED Partybar4 offers several operating modes, which can be selected via the control panel on the unit or the wireless remote control.

5.1 Control Panel Operation

Use the "MENU", "UP", "DOWN", and "ENTER" buttons on the control panel to navigate through the settings and select your desired mode. The LED display will show the current mode or setting.

5.2 Remote Control Operation

The included wireless remote control provides convenient access to various functions:

- **ON/OFF:** Power on or off.
- **AUTO/MUTE:** Activates automatic program mode.
- **SOUND/SEEK:** Activates sound-activated mode.
- **DMX:** Selects DMX control mode.
- **PAR/FLASH:** Controls PAR spot flash function.
- **LED/COLOR:** Adjusts LED colors or color mixing.
- **MOTOR/SEN:** Adjusts motor speed or sound sensitivity.
- **+/-:** Adjusts parameters (speed, sensitivity, DMX address).

5.3 Automatic Mode

In Automatic mode, the Partybar4 cycles through pre-programmed light shows. You can adjust the speed of these shows using the remote control or control panel.

PRE-PROGRAMMED LIGHTSHOWS

SOUND ACTIVATED & AUTO MODE

- WITH ADJUSTABLE SENSITIVITY AND SPEED

max
UDIO

Image 5.1: An example of a pre-programmed light show, demonstrating dynamic blue and white light effects.

5.4 Sound-Activated Mode

In Sound-activated mode, the light effects react to the beat of the music detected by the built-in microphone. Adjust the sensitivity using the remote control or control panel to fine-tune its response.

5.5 DMX Mode

For professional control, use DMX mode. Set the DMX start address via the control panel. The Partybar4 uses 8 DMX channels, allowing precise control over colors, dimming, strobe, and program selection from an external DMX controller.

5.6 Color Mixing

The RGBW LEDs allow for a wide spectrum of colors. In certain modes, you can mix red, green, blue, and white to create custom hues.

RGBW COLOUR MIXING

FOR A GREAT COMBINATION OF PARTYLIGHTS



- HIGH-INTENSITY LEDs IN DIFFERENT COLOURS

max
MUSIC

Image 5.2: Illustration of RGBW color mixing capabilities, producing a vibrant blue light effect.

6. MAINTENANCE

6.1 Cleaning

- Always disconnect the device from the power supply before cleaning.
- Use a soft, lint-free cloth to wipe the exterior of the unit.
- For lenses, use a specialized lens cleaning solution and a soft cloth to avoid scratches.
- Do not use abrasive cleaners or solvents.

6.2 Storage

- Store the device in a dry, dust-free environment when not in use.
- If storing for extended periods, consider using the original packaging or a protective case.
- Ensure the tripod is collapsed and secured to prevent damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable disconnected; power outlet faulty; unit switch off.	Check power cable connection; try a different outlet; ensure power switch is ON.
Lights not responding to music (Sound-activated mode)	Microphone sensitivity too low; music volume too low; incorrect mode selected.	Increase microphone sensitivity; increase music volume; ensure Sound-activated mode is active.
Remote control not working	Battery depleted; obstruction between remote and unit; remote not pointed at IR receiver.	Replace remote control battery (CR2); remove obstructions; ensure remote is pointed at the IR receiver on the unit.
DMX control issues	Incorrect DMX address; faulty DMX cable; DMX controller issue; unit not in DMX mode.	Verify DMX address settings; check DMX cable connections; test with another DMX controller; ensure DMX mode is selected on the unit.

8. SPECIFICATIONS

Feature	Detail
Model Number	PartyBar4
Light Source	RGBW LEDs
DMX Channels	8
Operating Modes	Auto, Sound-activated, DMX, Master/Slave
Power Source	Mains power cable
Product Dimensions	20 x 20 x 9 cm
Item Weight	7.3 Kilograms
Tripod Max Height	1.8 meters
Remote Control Battery	1 CR2 battery (included)
Certifications	CE

9. OFFICIAL PRODUCT VIDEO

Video 9.1: A Closer Look at the MAX LED Partybar4. This video provides a detailed visual overview of the product's features and components.

10. WARRANTY AND SUPPORT

The MAX LED Partybar4 comes with a standard manufacturer's warranty. Please refer to the warranty card included in your packaging for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact your retailer or the MAX customer service department. Keep your proof of purchase for all warranty-related

inquiries.

Note: The manual provided with the item may not be available in Dutch. This document serves as a comprehensive English instruction guide.

© 2024 MAX. All rights reserved.