

Poeland X-33P

Poeland Christmas Laser Projector Lights (Model X-33P) - Instruction Manual

Brand: Poeland | Model: X-33P

INTRODUCTION

The Poeland Christmas Laser Projector Light (Model X-33P) is designed to provide vibrant and dynamic decorative lighting for outdoor and indoor environments. Featuring red, green, and blue laser lights, this projector offers various lighting modes and a wide coverage area, enhancing the ambiance for holidays, parties, and garden decoration.

Key Features:

- **Red+Green+Blue Laser Projection:** Classic laser projector with three vibrant colors for spectacular lighting effects.
- **Remote Control:** Allows selection of lighting mode, color, speed, and timer settings (2, 4, 6, 8 hours).
- **Waterproof Design (IP65):** Suitable for outdoor use in various weather conditions, including rain and snow.
- **Security Lock:** Includes a security kit with a stainless steel cable and lock to deter theft.
- **Versatile Mounting:** Comes with an indoor base and an outdoor ground stake for flexible installation.
- **Wide Coverage:** Projects over 2500 square feet with more than 1000 points of light.
- **Cold-Resistant:** Designed to operate effectively in cold temperatures.

SETUP INSTRUCTIONS

Package Contents:



Image: Package contents including the projector, remote control, power adapter, ground stake, indoor base, and security lock.

Before installation, ensure all components are present:

- Laser Projector Unit
- Remote Control
- Power Adapter
- Ground Stake
- Indoor Base
- Security Lock Kit (cable and keys)
- Mounting Screws (for wall/post mounting)

Installation Options:

1. Ground Installation (Outdoor):

1. Attach the ground stake to the bottom of the projector unit by screwing it clockwise until secure.
2. Select a suitable location in your garden or yard. Ensure the projection area is clear of obstructions.

3. Firmly insert the ground stake into the soil. For harder ground, a rubber mallet may be used.
4. Adjust the angle of the projector head to direct the lights onto your desired surface (e.g., house, trees).
5. Connect the power adapter to the projector and then plug it into a weather-protected outdoor power outlet.



Image: Projector installed in the ground, illuminating a house and surrounding bushes with colorful laser dots.

2. Base Installation (Indoor/Outdoor):

1. Screw the projector unit onto the indoor base.
2. Place the unit on a flat, stable surface indoors or outdoors (e.g., desk, patio).
3. Alternatively, the base can be mounted to a wall or post using the provided screws.
4. Adjust the projector head to achieve the desired lighting effect.
5. Connect the power adapter to the projector and plug it into a power outlet.

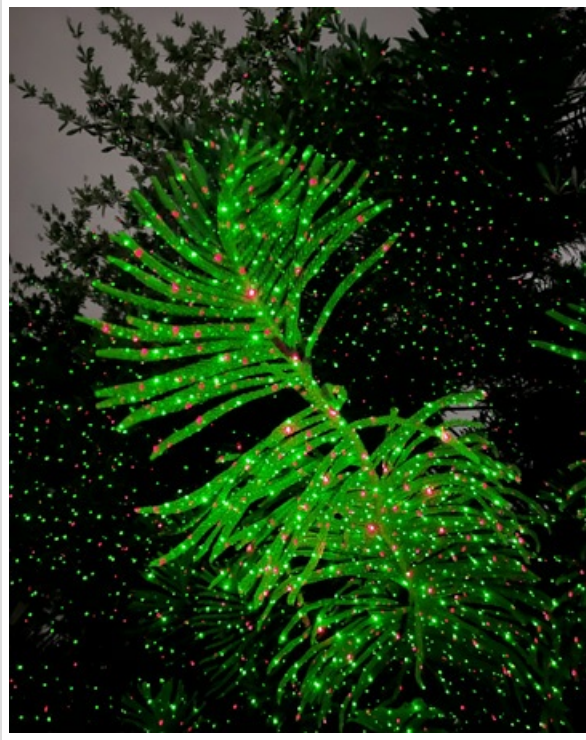


Image: Projector unit shown with the indoor base, suitable for tabletop or wall mounting.

3. Security Lock Installation:

1. Thread the stainless steel cable through the designated loop on the projector unit.
2. Secure the cable around a fixed object such as a tree, pole, or mailbox post.
3. Insert the bolt of the lock into the keyhole and turn the key 90 degrees clockwise to secure it.

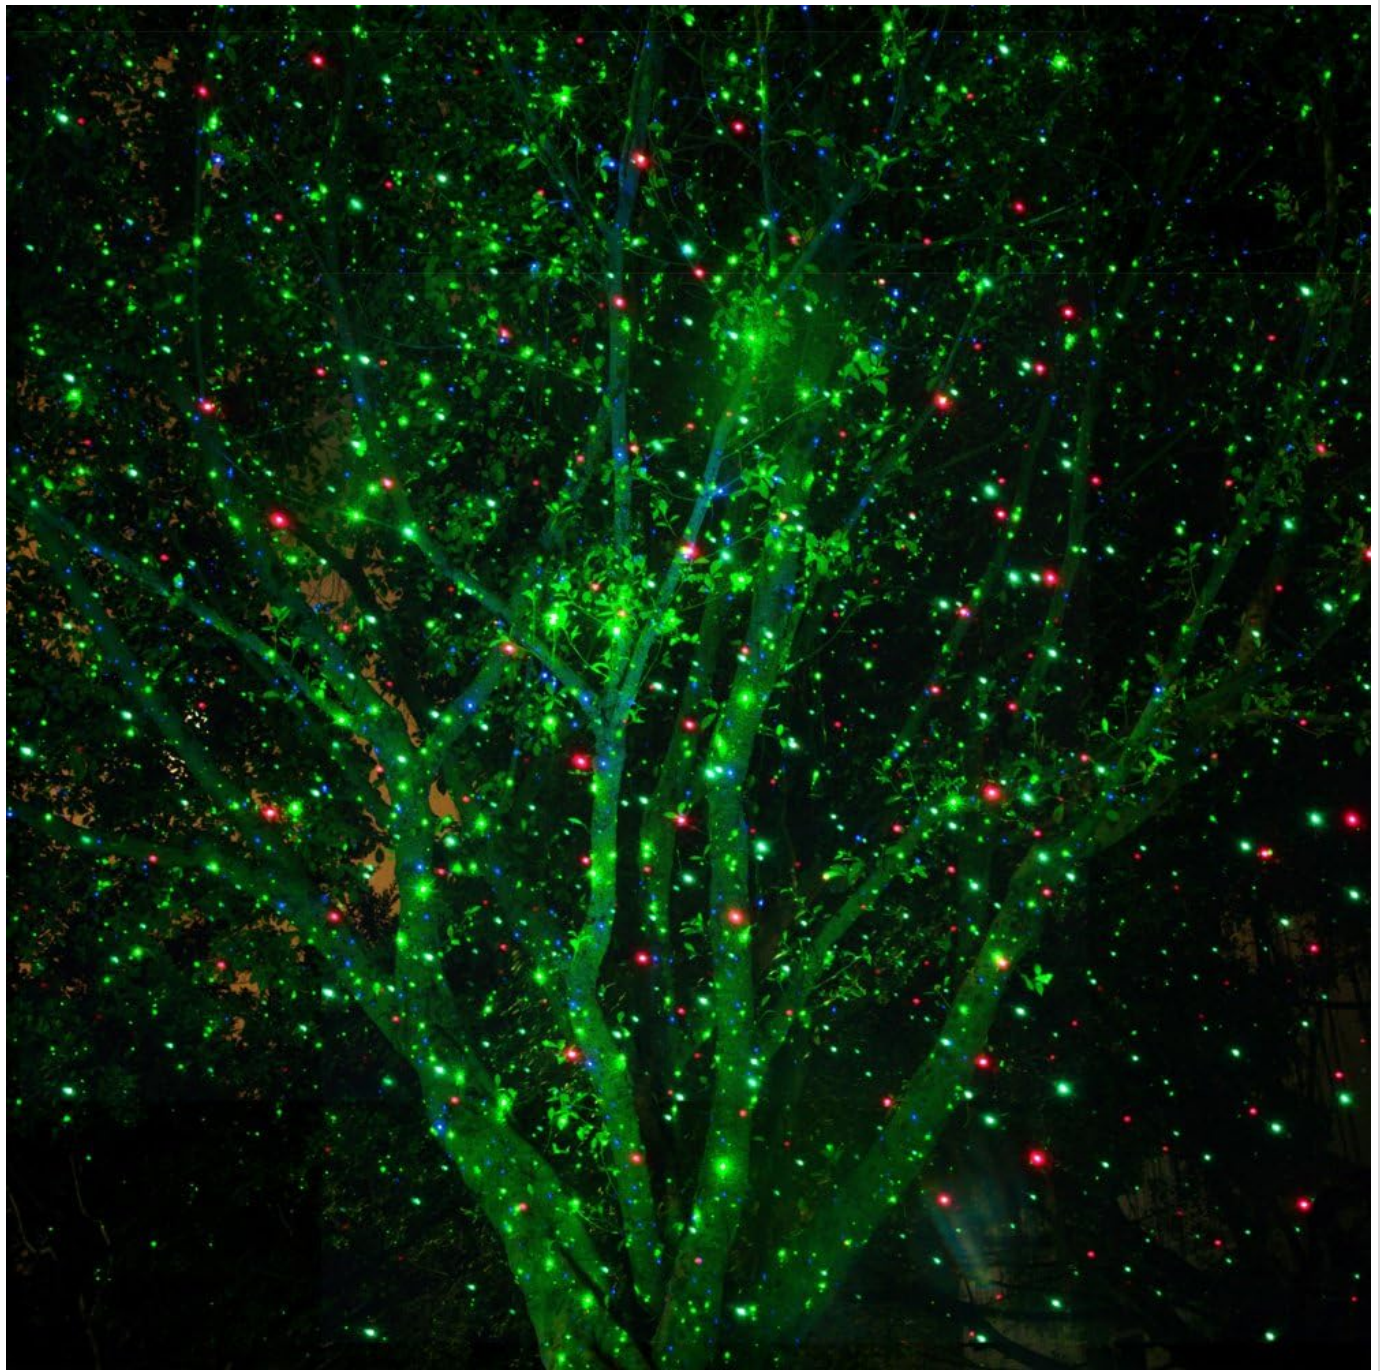


Image: Detailed steps illustrating how to attach the security cable and lock the projector to a fixed outdoor object.

OPERATING INSTRUCTIONS

The Poeland Laser Projector is operated using the included remote control. Ensure the projector is powered on before using the remote.



Image: The remote control unit with buttons for various functions including power, individual color selection (Red, Green, Blue), RGB combination, flash mode, speed adjustment, and timer settings.

Remote Control Functions:

- **Power Button (Red Circle):** Turns the projector ON or OFF.
- **Color Selection:**
 - **R (Red):** Activates red laser lights.
 - **G (Green):** Activates green laser lights.
 - **B (Blue):** Activates blue laser lights.
 - **RGB:** Activates all three colors simultaneously.
- **Flash:** Toggles the flashing effect of the lights.
- **Auto:** Cycles through various pre-programmed lighting patterns and colors automatically.
- **Speed Control (+/-):** Adjusts the speed of the light movement or flashing effect.
- **Timer Settings (2h, 4h, 6h, 8h):** Sets the projector to automatically turn off after the selected duration. The projector must remain in a powered-on state for the timer to function.

Optimal Projection:

For best results, position the projector at an appropriate distance from the projection surface. A greater distance will result in a wider coverage area but may reduce light intensity. Conversely, a closer distance will increase intensity over a smaller area.



Image: A diagram illustrating the projection range, showing approximately 900 sq ft coverage at 10 ft distance and 2500 sq ft coverage at 20 ft distance.

Video Demonstration:

Your browser does not support the video tag.

Video: Official Poeland video demonstrating the outdoor garden laser lights, showcasing various projection patterns and colors on trees and buildings.

MAINTENANCE

- **Cleaning:** Periodically wipe the projector lens with a soft, dry cloth to ensure clear projection. Avoid using abrasive cleaners.
- **Storage:** When not in use for extended periods, store the projector in a cool, dry place away from direct sunlight.
- **Weather Protection:** Although waterproof, ensure the power adapter connection is protected from excessive moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Projector does not turn on.	No power supply or loose connection.	Check power adapter connection and ensure it's plugged into a working outlet. Press the power button on the remote.
Remote control is unresponsive.	Remote batteries are low or depleted. Obstruction between remote and projector.	Replace remote control batteries. Ensure a clear line of sight to the projector's sensor.
Lights are dim or not covering desired area.	Projector too far from surface or lens is dirty.	Move the projector closer to the projection surface. Clean the lens with a soft cloth.
Specific colors are not displaying.	Individual color setting selected or internal issue.	Press the RGB button on the remote. If problem persists, contact customer support.

SPECIFICATIONS

- **Model Number:** X-33P

- **Color:** Red, Green, Blue
- **Material:** Metal, Plastic
- **Light Source Type:** Laser
- **Power Source:** Corded Electric
- **Voltage:** 120 Volts
- **Wattage:** 24 Watts
- **Item Weight:** 2.69 Pounds
- **Product Dimensions:** 7.2"L x 7.5"W x 5.4"H
- **Mounting Type:** Wall Mount, Ground Stake
- **Special Features:** Remote Control Compatibility, Color Changing, Automatic Timer, Instant On
- **Waterproof Rating:** IP65
- **Manufacturer:** Shenzhen X Photoelectric Technology Co., Ltd
- **UPC:** 768390641837

WARRANTY AND SUPPORT

Warranty: This product comes with a 12-month warranty from the date of purchase.

For technical support, troubleshooting assistance, or warranty claims, please contact Poeland customer service through their official channels or the retailer where the product was purchased.

© 2023 Poeland. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

