

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Transformers](#) /

› [Transformers Studio Series Grimlock Action Figure \(Model E0773\) Instruction Manual](#)

Transformers E0773

Transformers Studio Series Grimlock Action Figure (Model E0773) Instruction Manual

INTRODUCTION

This manual provides instructions for the Transformers Studio Series Grimlock action figure, model E0773. This figure converts between robot and Tyrannosaurus Rex modes, offering versatile display and play options.

SAFETY INFORMATION

Warning:

This product may contain sharp points and small parts that are choking hazards. It is not suitable for children under 8 years of age. Adult supervision is recommended for younger users.

PACKAGE CONTENTS

- Transformers Studio Series Grimlock Action Figure (Model E0773)
- Instruction Manual (this document)
- Character-themed backdrop (may vary)



Front view of the Transformers Studio Series Grimlock action figure packaging, showing the figure in robot mode.

ASSEMBLY AND TRANSFORMATION

Your Grimlock figure can transform between two distinct modes: Robot Mode and Tyrannosaurus Rex Mode. The transformation process involves approximately 30 steps. Refer to the visual guide below and the embedded video for detailed instructions.

Robot Mode



The Grimlock figure in its robot mode, showcasing its detailed design and articulation. This mode features a powerful, knight-like appearance with spiked forearms and shoulder armor.

Tyrannosaurus Rex Mode



The Grimlock figure transformed into its Tyrannosaurus Rex mode. This mode features a detailed dinosaur sculpt with articulated limbs and a menacing jaw.

Transformation Video Guide

Your browser does not support the video tag.

Official product video demonstrating the transformation of the Grimlock figure between its robot and dinosaur modes. This video provides a visual guide to the key steps and articulation.

OPERATING INSTRUCTIONS

The Grimlock action figure is designed for posing and imaginative play. Both robot and dinosaur modes feature multiple points of articulation for dynamic display and interaction.

- Articulation:** Carefully move joints at the shoulders, elbows, hips, and knees to achieve desired poses. Avoid excessive force to prevent damage to the figure.
- Stability:** When posing the figure, ensure it is balanced, especially in robot mode, to prevent it from falling over.

- **Accessory Integration:** If any accessories are included, attach them securely to the designated ports on the figure.



Rear view of the Grimlock figure in robot mode, highlighting the intricate detailing and potential articulation points for posing.

MAINTENANCE

Proper care will help maintain the condition and longevity of your Grimlock action figure.

- **Cleaning:** Wipe the figure with a soft, dry cloth to remove dust. Do not use harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the paint or plastic.
- **Storage:** Store the figure away from direct sunlight, extreme temperatures, and high humidity to prevent material degradation, discoloration, or warping.
- **Handling:** Handle the figure with care, especially during transformation, to avoid breaking small parts or chipping paint.



The Grimlock figure displayed in robot mode with its included backdrop, illustrating proper display and handling for longevity.

TROUBLESHOOTING

Problem: Parts detach during transformation or posing.

Solution: Some parts are designed to detach and reattach for transformation or to prevent breakage under stress. Carefully reattach any detached parts by aligning them with their corresponding pegs or slots. Refer to the transformation steps in this manual or the video guide if unsure.

Problem: Figure does not hold a pose.

Solution: Ensure all joints are fully engaged and the figure's weight is evenly distributed. Adjust the pose to find a stable center of gravity. Over time, joints may loosen due to normal wear and tear.



The Grimlock figure in dinosaur mode with its backdrop, demonstrating a stable pose for display.

SPECIFICATIONS

| Feature | Detail |
|--------------------|---------------------|
| Model Number | E0773 |
| Brand | Transformers |
| Product Dimensions | 9.5 x 4 x 11 inches |
| Item Weight | 0.01 ounces |
| Recommended Age | 8 years and up |
| Manufacturer | Hasbro |



An image showing the approximate size of the Grimlock figure, providing a visual reference for its dimensions.

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the manufacturer's official website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2023 Hasbro. All rights reserved. Transformers and all related characters are trademarks of Hasbro.