

GlocalMe U3B-black

GlocalMe Triforce Mobile Hotspot User Manual

Model: U3B-black | Brand: GlocalMe

INTRODUCTION

The GlocalMe Triforce Mobile Hotspot (Model U3B-black) is a wireless portable WiFi device designed for seamless internet connectivity across over 200 countries. Utilizing patented Cloud SIM technology, it intelligently selects the best local network, eliminating the need for physical SIM cards and roaming charges. This manual provides comprehensive instructions for setting up, operating, and maintaining your device.

Key Features:

- No SIM Card Needed:** Patented Cloud SIM technology for intelligent network selection.
- Global Coverage:** Access 4G internet in over 200 countries.
- High-Speed Connectivity:** Fast and stable 4G internet for streaming, calls, and navigation.
- Power Bank Function:** Built-in 7000 mAh battery provides power for other devices.
- Multi-Device Connection:** Connect up to 10 devices simultaneously.



Figure 1: Front and back view of the GlocalMe Triforce Mobile Hotspot, highlighting its sleek design and integrated charging cables. The serial number 012345678912345 is located on the back label.

SETUP GUIDE

1. Charging the Device

Before initial use, fully charge your GlocalMe Triforce device. Use the provided USB cable and a compatible power adapter (not included). The device features a 7000 mAh battery, offering extended usage and power bank capabilities.

2. Powering On/Off

To power on, press and hold the power button located on the side of the device until the screen illuminates. To power off, press and hold the power button until the shutdown prompt appears, then confirm.

3. Initial Activation & Account Setup

Upon first power-on, the device will guide you through the initial setup. You will need to create or log in to your GlocalMe account. This account manages your data packages and device settings.

Your browser does not support the video tag.

Video 1: A brief demonstration of the GlocalMe device's physical appearance and power-on sequence.

4. Connecting to the Hotspot

On your smartphone, laptop, or tablet, search for available Wi-Fi networks. Select the network named "GlocalMe_XXXX" (where XXXX is a unique identifier for your device). Enter the default password provided on the device screen or in the user manual. You can change the Wi-Fi name and password later via the device's settings or the GlocalMe app.



Figure 2: The GlocalMe mobile application interface, used for managing device settings and data plans.

OPERATING YOUR DEVICE

1. Data Package Management

The GlocalMe Triforce operates on a pay-as-you-go model with no contract or roaming charges. Purchase data packages directly through the device's touchscreen interface or the GlocalMe mobile application. Options include daily, monthly, regional, or global data plans.

2. Intelligent Network Selection

The device automatically selects the strongest and most stable 4G network available in your current location. This ensures optimal connectivity without manual intervention.



Figure 3: The GlocalMe device provides SIM-free Wi-Fi access, ideal for international travel.

3. External SIM Card Compatibility

For specific local data needs, the device supports external SIM cards. Open the SIM card slot cover and insert your micro or nano SIM card. The device will prioritize the external SIM if inserted and active.

Your browser does not support the video tag.

Video 2: Official GlocalMe video demonstrating the mobile hotspot's use in various travel scenarios.

ADVANCED FEATURES

Power Bank Functionality

With its robust 7000 mAh battery, the GlocalMe Triforce can also serve as a power bank to charge your other devices. It includes integrated USB-C, Lightning, and Micro USB cables for convenience.

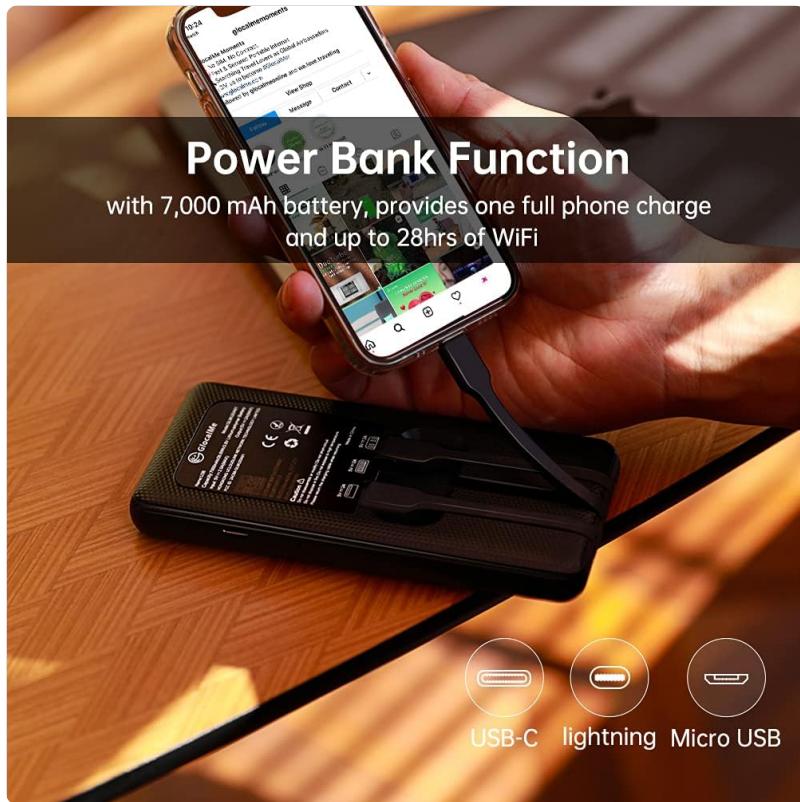


Figure 4: The GlocalMe Triforce functioning as a power bank, charging a smartphone via its built-in cables.

Multi-Device Connectivity

The hotspot supports simultaneous connection for up to 10 devices, including smartphones, tablets, and laptops, making it ideal for group travel or family use.

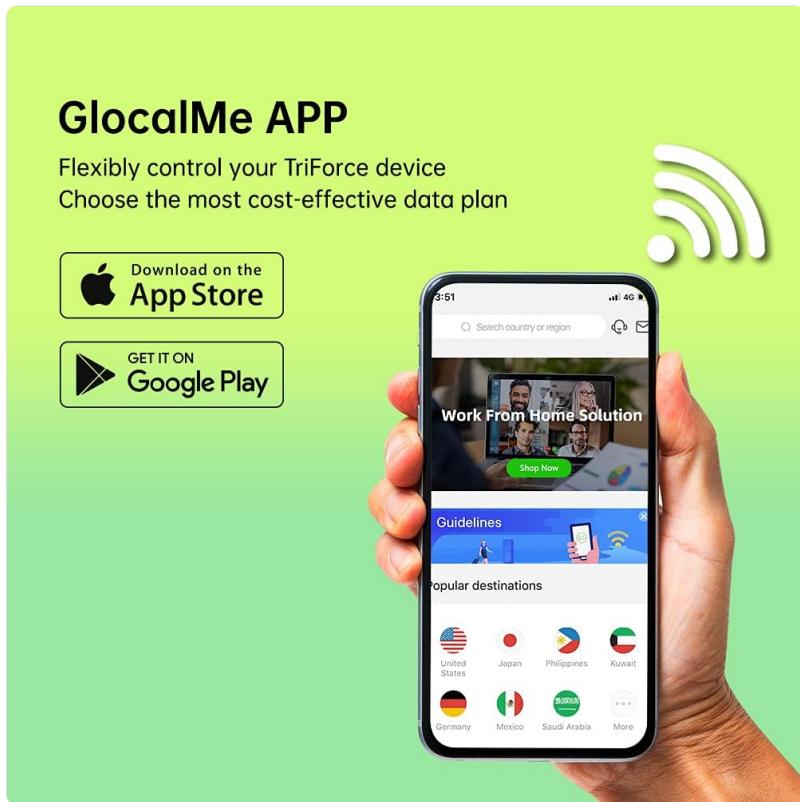


Figure 5: Illustrates the GlocalMe hotspot's ability to connect multiple devices simultaneously, perfect for shared internet access.

MAINTENANCE AND CARE

Cleaning

Wipe the device with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials that could damage the surface.

Storage

Store the device in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, ensure the battery is charged to approximately 50% to prolong its lifespan.

Battery Care

To maximize battery longevity, avoid fully discharging the device frequently. Charge it regularly and avoid leaving it plugged in for prolonged periods after it's fully charged.

TROUBLESHOOTING

No Internet Connection

- Ensure your data package is active and has sufficient balance.
- Check the device's signal strength. If the signal is weak, try moving to an area with better network coverage.
- Restart the GlocalMe device and your connected devices.
- If using an external SIM, ensure it is properly inserted and active.

Slow Connection Speed

- Verify that you are in a 4G coverage area.
- Reduce the number of connected devices.
- Check your data plan for any speed limitations after a certain usage threshold.

Device Overheating

- If the device feels warm, it's normal during heavy use. If it becomes excessively hot, disconnect all devices and power off the hotspot. Allow it to cool down before resuming use.
- Ensure the device is not covered or in an enclosed space that prevents proper ventilation.

TECHNICAL SPECIFICATIONS

Feature	Specification
Model Name	U3B-black
Product Dimensions	5.83 x 2.72 x 0.62 inches
Item Weight	8.5 ounces
Battery	1 Lithium Ion batteries required (included)
Wireless Communication Technologies	4G, Wi-Fi
Connectivity Technologies	Wi-Fi, USB

Special Features	Slim, Pocket Size, Power Bank Function
Color	Black
Manufacturer	GlocalMe
Wireless Communication Standard	802.11a/b/g/n
Compatible Devices	Smartphone, Tablets, Laptops
Antenna Type	Internal

WARRANTY AND SUPPORT

Warranty Information

GlocalMe products typically come with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging or visit the official GlocalMe website for detailed warranty terms and conditions.

Customer Support

For technical assistance, troubleshooting, or general inquiries, please contact GlocalMe customer support. Support is available 24/7 via email and hotline.

Official GlocalMe Website: www.GlocalMe.com

For account-related queries or data package purchases, use the GlocalMe mobile application or log in to your account on the official website.

Related Documents

	<p>GlocalMe TriForce Quick Start Guide: Setup, Features, and Compliance</p> <p>Comprehensive quick start guide for the GlocalMe TriForce portable WiFi hotspot and power bank. Learn how to set up your device, connect to Wi-Fi, use the power bank feature, and understand safety and compliance information.</p>
	<p>GlocalMe Numen Air Quick Start Guide: Setup and Usage</p> <p>Your essential guide to setting up and using the GlocalMe Numen Air mobile WiFi hotspot. Learn to connect via Cloud SIM or physical SIM, manage data plans, and access global internet.</p>
	<p>GlocalMe UPP Quick Start Guide: Connecting to the Internet</p> <p>This guide provides instructions on how to set up and use the GlocalMe UPP device, including Cloud SIM and physical SIM card usage, network optimization, and regulatory information.</p>
	

2 Create a GlocalMe Account (In App)

- Click [Login] → [Register]
- Follow the steps to register a new account (Only an account using an email or mobile number)



3 Purchase In-App GlocalMe Data Plans

- Choose the data plans that suit your needs (GlocalMe app has 4 data plans: 1GB, 2GB, 3GB, 4GB)
- Follow the steps to purchase the data plan



4 Link Device with GlocalMe App

- Open GlocalMe App and click [My Device] → [Activate Device]
- Scan the device QR code on the back of the U3 module



Data Flow Protection Reminder

This product has a 'Data Flow Protection' feature which is by default to prevent connection to the Internet when data usage is due to automatic system and application updates. While the function is turned on, it might cause poor performance of the device. You can turn off the function in the GlocalMe app. If needed you can temporarily remove the restriction via setting in the module of the browser.

5 Turn On U3

- Press and hold the power button for 3 seconds if you cannot turn on the device by pressing the power button on the front of the device
- Once the light on the front of the device is on, it means your device is ready to connect



6 Connect To Wi-Fi

- Find the Wi-Fi network name and password at the back of U3
- On your mobile device under Wi-Fi settings search for the network and connect



How To Use A Physical SIM Card?

(It is advised to use our SIM card service, but it also supports the use of local SIM cards)

1 Insert The SIM Card

- Please turn off your device when inserting/removing SIM card
- Open the SIM card tray with a pin and insert the SIM card as shown in the picture below (U3 device only supports Nano SIM cards)



2 Unlock SIM Card If PIN protected

- If the SIM card is in PIN protected, please enter your mobile device unlock PIN (Default PIN is 12345678, Default unlock PIN is 12345678)

Username: admin, Password: admin

Please follow the steps below to unlock the SIM card



3 Set The APN Manually

- If you still cannot connect to the network after the above steps, please enter the APN manually. Go to [Settings] → [SIM card management] → [APN settings] → [Add manually] and enter the APN of your SIM card operator and click save.



4 SIM Card Selection

- Connect your mobile phone / laptop to GlocalMe WiFi and visit 192.168.1.1 to enter the section of SIM Card Selection



【U3 Light Indicator】



1 Battery Check

- Press power button once for checking the battery level

2 Signal Check

- Press power button twice for checking the signal level



Manage My Device

Web: 192.168.1.1
Username: admin
Password: admin

