

TecTake 402528

TecTake Triple Fabric Wardrobe Instruction Manual

Model: 402528

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your TecTake Triple Fabric Wardrobe. Designed for maximum storage in minimal space, this practical wardrobe features a stable steel frame and a robust fabric cover, ensuring quick access to your clothing while protecting it from dust and dirt. Its lightweight design makes it ideal for various settings, including bedrooms, hallways, basements, or student accommodations. The wardrobe includes a clothes rail and 12 compartments across 5 levels, offering versatile storage for shirts, trousers, underwear, shoes, and more. Assembly is straightforward, utilizing a simple plug-in system that requires no tools.

2. SAFETY WARNINGS

Please read and understand all safety warnings before assembling or using the product. Failure to follow these instructions may result in injury or damage to the product.

- Always assemble the product according to the provided instructions.
- Do not overload the clothes rail beyond **25 kg**.
- Each individual compartment has a maximum load capacity of **5 kg**. Do not exceed this limit.
- Keep the product away from wet environments unless properly protected. The fabric cover offers basic dust protection but is not waterproof.
- Always supervise children when they are near the product to prevent tip-over risks. Ensure the wardrobe is stable and placed on a flat, level surface.
- Do not climb on or hang from the wardrobe frame or clothes rail.

3. PACKAGE CONTENTS

Before beginning assembly, ensure all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Folding Wardrobe Fabric Cover
- Steel Frame Rods (various lengths)
- Plastic Connectors
- Fabric Shelves
- Clothes Rail
- Assembly Instructions (this manual)

4. SETUP AND ASSEMBLY

Assembly of the TecTake Triple Fabric Wardrobe is designed to be simple and tool-free. Follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Verify all components are present as per the package contents list.
2. **Assemble the Base Frame:** Begin by connecting the shortest steel rods with the plastic connectors to form the base rectangle of the wardrobe. Ensure all connections are secure.
3. **Build Vertical Supports:** Insert longer steel rods into the vertical openings of the base connectors to create the first level of vertical supports.
4. **Add First Level of Shelves:** Place the fabric shelves onto the assembled frame, ensuring they are taut and properly supported by the rods.
5. **Continue Building Upwards:** Repeat steps 3 and 4, adding more vertical rods and fabric shelves layer by layer, following the structure shown in the assembly diagram. Pay attention to the different compartment sizes for the middle and side sections.
6. **Install Clothes Rail:** Once the main frame is built to the desired height, insert the clothes rail into its designated connectors in the central section. Ensure it is firmly in place.
7. **Attach Fabric Cover:** Carefully drape the fabric cover over the assembled steel frame. Align the top, sides, and bottom. Secure the cover to the frame using the integrated ties or loops, typically found at the bottom and corners.
8. **Secure Zippers and Velcro:** Close the front door curtains using the zippers and secure them with the Velcro fasteners to protect contents from dust.



Figure 4.1: Wardrobe frame structure before fabric cover installation.



Figure 4.2: Detail of the plug-in connection system for the frame.



Figure 4.3: Details of the fabric cover features, including zippers and securing mechanisms.

5. OPERATING INSTRUCTIONS

Using your TecTake Triple Fabric Wardrobe is straightforward:

- **Accessing Contents:** Unzip the front door curtains to open the wardrobe. The curtains can be rolled up and secured with the integrated Velcro fasteners to keep the wardrobe open for easy access.
- **Storing Clothes:**
 - Use the central clothes rail for hanging garments such as dresses, shirts, trousers, and coats. Ensure the weight does not exceed 25 kg.
 - Utilize the 12 fabric compartments for folded clothing, shoes, accessories, and other items. Distribute weight evenly and do not exceed 5 kg per compartment.
- **Protecting Contents:** When not in use, zip up the front door curtains completely to protect your clothes from dust and dirt.



Figure 5.1: Wardrobe with front cover open, showing internal storage.



Figure 5.2: Wardrobe with front cover closed.



Figure 5.3: Wardrobe with front cover open, showing empty shelves.

6. MAINTENANCE

To ensure the longevity and appearance of your TecTake Triple Fabric Wardrobe, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the fabric cover and steel frame with a dry cloth to remove dust and light dirt. For stubborn spots on the fabric, a slightly damp cloth with mild soap can be used, but ensure it dries completely to prevent mildew.
- **Avoid Moisture:** Do not expose the wardrobe to excessive moisture or direct water, as this can damage the fabric and potentially rust the steel frame.

- **Check Connections:** Periodically check all plastic connectors and steel rods to ensure they remain securely fitted. Re-secure any loose connections to maintain stability.
- **Load Management:** Always adhere to the specified weight limits for the clothes rail (25 kg) and individual compartments (5 kg) to prevent structural damage.

7. TROUBLESHOOTING

If you encounter any issues with your TecTake Triple Fabric Wardrobe, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Wardrobe feels unstable or wobbly.	Loose connections between rods and connectors; uneven surface; overloaded.	Ensure all rods are fully inserted into connectors. Place the wardrobe on a flat, level surface. Reduce weight if overloaded.
Fabric shelves sag.	Overloaded compartment.	Reduce the weight on the sagging shelf. Ensure weight does not exceed 5 kg per compartment.
Clothes rail bends.	Overloaded clothes rail.	Remove some items from the clothes rail. Ensure total weight does not exceed 25 kg.
Zippers are stuck or difficult to move.	Fabric caught in zipper; zipper needs lubrication.	Gently pull fabric away from the zipper path. Apply a small amount of zipper lubricant (e.g., wax or silicone spray) to the teeth.

If the problem persists after attempting these solutions, please contact TecTake customer support for further assistance.

8. SPECIFICATIONS

Detailed technical specifications for the TecTake Triple Fabric Wardrobe:

Feature	Detail
Model Number	402528
Overall Dimensions (W x H x D)	150 x 175 x 45 cm (59.1 x 68.9 x 17.7 inches)
Material	Steel (frame), Polypropylene (fabric cover and shelves)
Number of Compartments	12 (10 small, 2 large)
Small Compartment Dimensions (W x H x D)	44 x 34 x 44 cm (17.3 x 13.4 x 17.3 inches)
Large Compartment Dimensions (W x H x D)	62 x 34 x 44 cm (24.4 x 13.4 x 17.3 inches) and 62 x 134 x 44 cm (24.4 x 52.8 x 17.7 inches)
Clothes Rail Load Capacity	Max. 25 kg (55 lbs)
Compartment Load Capacity	Max. 5 kg (11 lbs) per compartment
Product Weight	4.6 kg (10.1 lbs)

Feature	Detail
Special Features	Foldable, lightweight, easy tool-free assembly, 3 door curtains with Velcro and zippers.

9. WARRANTY AND SUPPORT

TecTake products are manufactured with quality and durability in mind. While specific warranty details are not provided in this manual, please retain your proof of purchase for any warranty claims.

For technical support, missing parts, or any other inquiries regarding your TecTake Triple Fabric Wardrobe, please contact TecTake customer service through the retailer where you purchased the product or visit the official TecTake website for contact information.

You can visit the TecTake Store for more information:[TecTake Store on Amazon](#)