

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Enbrighten](#) /
- › [Enbrighten Premium Color Changing String Lights User Manual](#)

Enbrighten 37790

Enbrighten Premium Color Changing String Lights Instruction Manual

Model: 37790

Brand: Enbrighten

1. INTRODUCTION

Thank you for choosing Enbrighten Premium Color Changing String Lights. This product is designed to provide versatile and durable outdoor lighting, featuring 16 vibrant color options, custom two-color combinations, and warm vintage white illumination. The shatterproof acrylic bulbs are weather-resistant, ensuring long-lasting performance. This manual provides essential information for safe installation, operation, and maintenance of your string lights.



Image 1.1: Enbrighten Premium Color Changing String Lights, showcasing the lights, remote control, and product packaging.

2. PACKAGE CONTENTS

Please verify that all components are present before beginning installation:

- 48ft String Lights with 24 Shatterproof Acrylic Bulbs
- Wireless Remote Control
- Instruction Manual (this document)

3. SAFETY INFORMATION

WARNING: Read and understand all instructions before installing and using this product. Failure to follow these


instructions may result in electric shock, fire, or serious injury.

- Ensure the power source matches the product's voltage (120 Volts).
- Do not submerge the string lights or power adapter in water. While weatherproof, direct submersion can cause damage.
- Always unplug the lights from the power outlet before installation, maintenance, or when not in use.
- Do not connect more than 750 feet of string lights end-to-end. Exceeding this limit may overload the circuit.
- Inspect the string lights for any damage to the cord, bulbs, or plug before each use. Do not use if damaged.
- Keep children and pets away from the string lights during operation.
- Use only with a GFCI protected outlet for outdoor installations.

4. SETUP AND INSTALLATION

The Enbrighten string lights are designed for easy installation on various surfaces. Mounting hardware (hooks, nails, screws, guide wires) is not included.

1. **Plan Your Layout:** Determine the desired path for your string lights. The 48-foot string includes 24 bulbs.
2. **Mounting Options:** The bulbs can be hung using the integrated mounting tabs on each socket. Common methods include:
 - Mounting on a flat surface (e.g., eaves, pergolas, balconies) using screws or nails.
 - Hanging from above using hooks or guide wires for suspended installations across yards or landscapes.
3. **Connecting Multiple Strands:** Each strand is linkable end-to-end. Connect additional strands by plugging the male end of one string into the female end of another. You can link up to 750 feet of Enbrighten Cafe Lights.
4. **Power Connection:** Once installed, plug the string lights into a standard 120V AC power outlet. Ensure the outlet is easily accessible and protected from direct moisture.

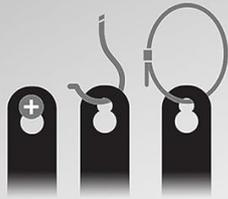

Easy Installation and Flexible Mounting Options


Mounting on a flat surface or hang from above.

(Mounting hardware not included)



▶ 24 Lights, 48ft.

24.00 in.

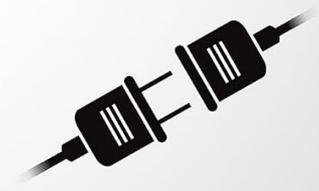

Connect Multiple Strings

Heavy-duty, grounded cord plugs into any standard outlet. Link multiple Café Lights™ up to 750 feet.

Image 4.1: Detailed diagram illustrating the dimensions of the string lights and the method for connecting multiple strands end-to-end.


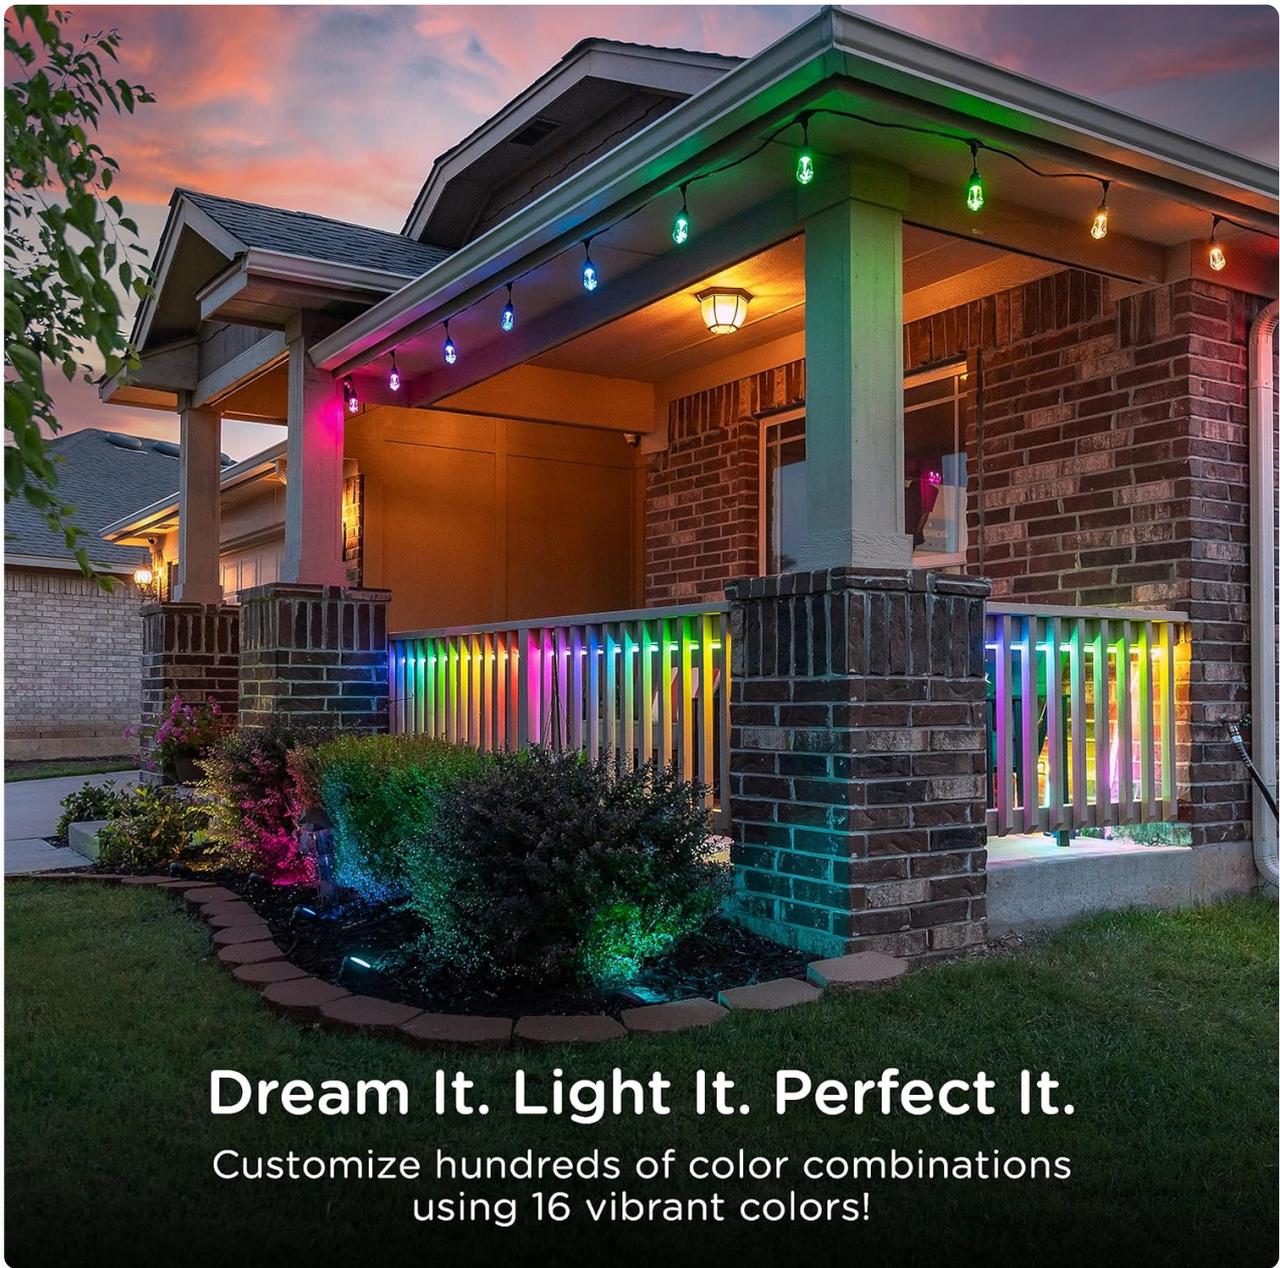


Image 4.2: Example installation of Enbrighten string lights on a residential porch, demonstrating the color-changing capabilities.

5. OPERATING INSTRUCTIONS

Your Enbrighten string lights come with a wireless remote control for convenient operation. The remote allows you to manage colors, modes, dimming, and timers.

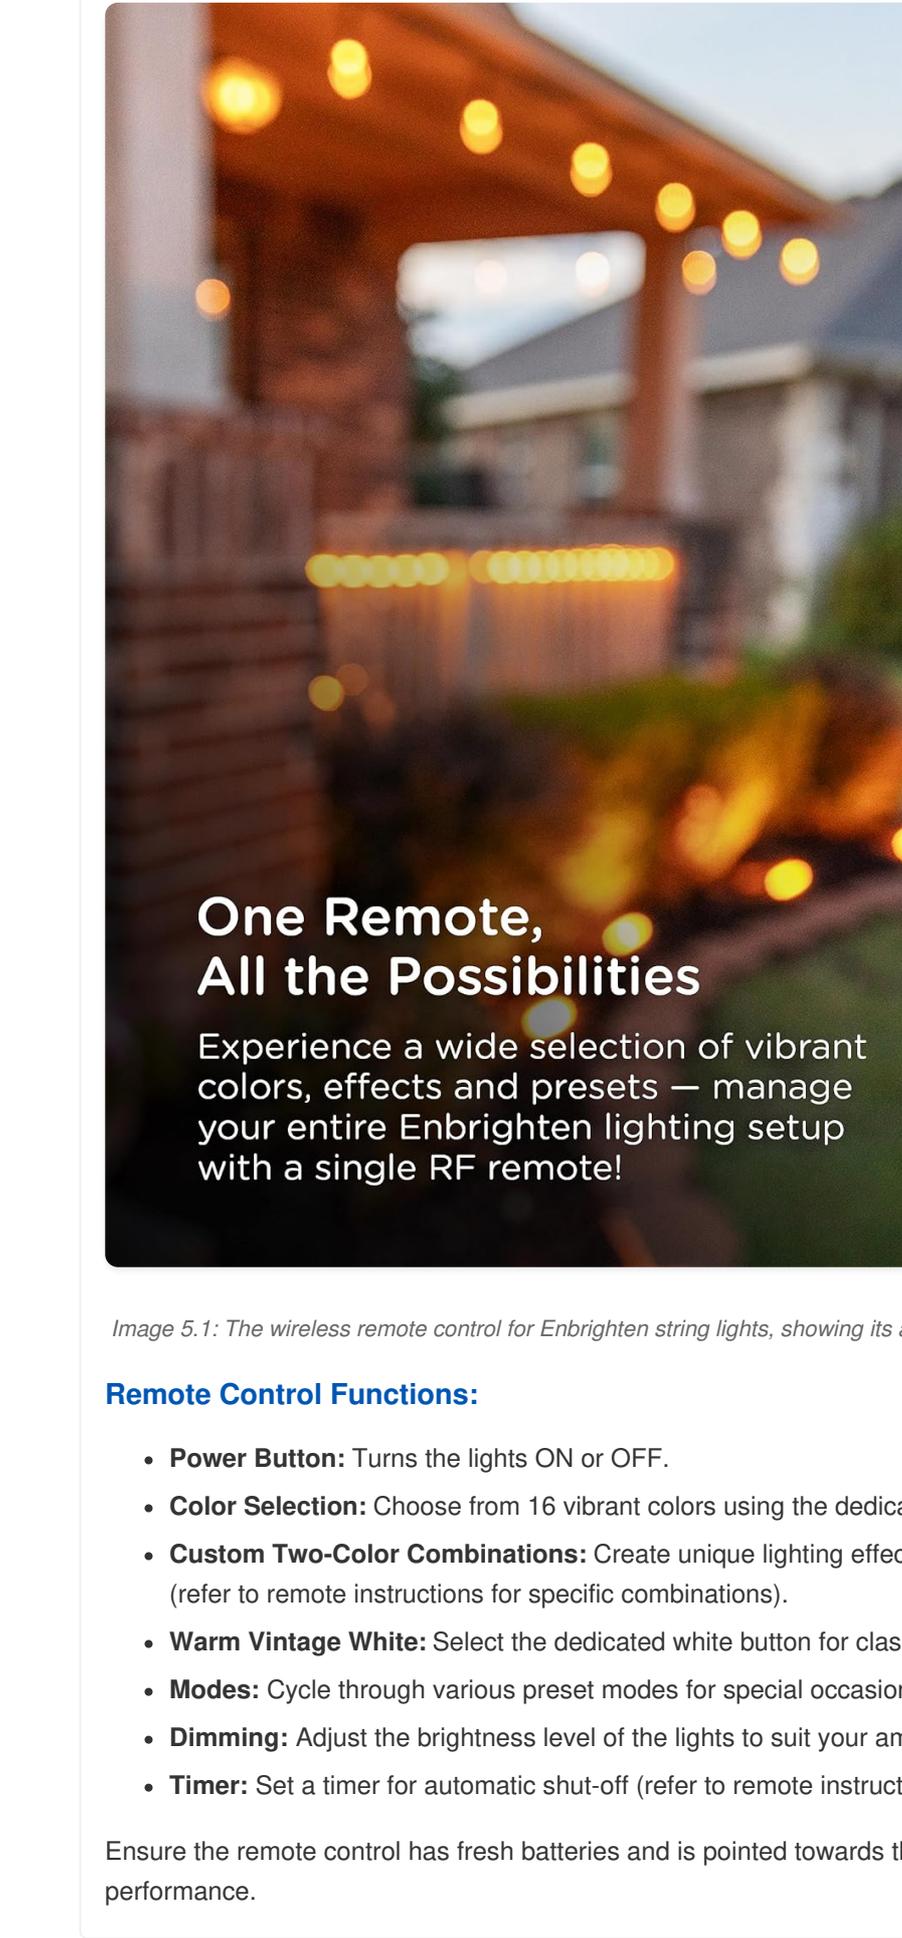

One Remote, All the Possibilities

Experience a wide selection of vibrant colors, effects and presets — manage your entire Enbrighten lighting setup with a single RF remote!

Image 5.1: The wireless remote control for Enbrighten string lights, showing its array of buttons for color and function selection.

Remote Control Functions:

- **Power Button:** Turns the lights ON or OFF.
- **Color Selection:** Choose from 16 vibrant colors using the dedicated color buttons.
- **Custom Two-Color Combinations:** Create unique lighting effects by selecting two colors simultaneously (refer to remote instructions for specific combinations).
- **Warm Vintage White:** Select the dedicated white button for classic warm illumination.
- **Modes:** Cycle through various preset modes for special occasions, holidays, or dynamic effects.
- **Dimming:** Adjust the brightness level of the lights to suit your ambiance.
- **Timer:** Set a timer for automatic shut-off (refer to remote instructions for available timer settings).

Ensure the remote control has fresh batteries and is pointed towards the light string's receiver for optimal performance.

6. MAINTENANCE

The Enbrighten string lights are designed for durability and minimal maintenance.

- **Cleaning:** Disconnect from power. Wipe bulbs and cord with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Bulb Replacement:** The LED bulbs are designed for a lifetime of use and are impact-resistant. They are not user-replaceable. If a bulb is damaged, the entire string should continue to function.
- **Storage:** If storing the lights for an extended period, coil them neatly and store in a cool, dry place away from direct sunlight and extreme temperatures.



enbrighten®
GUARANTEE*
Lighting for Life

Never Replace a Bulb

Impact Resistant
Durable acrylic bulbs won't break if dropped, stepped on or in severe weather.

Year-Round
Commercial grade and ETL listed for permanent outdoor installations.

120V | **LED** | **1 WATT** PER LIGHT | **2200K** WARM WHITE

Image 6.1: Features of Enbrighten lights, emphasizing impact resistance and suitability for year-round outdoor installation.

7. TROUBLESHOOTING

If you experience issues with your Enbrighten string lights, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lights do not turn on.	No power to the outlet, loose connection, remote battery dead.	Check the power outlet with another device. Ensure all connections are secure. Replace remote control batteries.
Remote control not responding.	Remote battery dead, obstruction, out of range.	Replace remote control batteries. Ensure no obstructions between remote and light string. Move closer to the light string.
Inconsistent colors or flickering.	Loose connection, power fluctuation.	Check all connections along the string. Ensure the power source is stable. Unplug and replug the lights.
Lights are dim.	Dimming function activated.	Use the remote control to increase brightness.

8. SPECIFICATIONS

Feature	Detail
Model Number	37790
Length	48 feet
Number of Bulbs	24
Bulb Type	Shatterproof Acrylic, Edison-style
Light Source Type	LED
Voltage	120 Volts
Wattage	12 watts (total for string)
Light Color Options	16 colors, custom 2-color combinations, warm vintage white
Special Features	Shatterproof, Color Changing, Weather Resistant, Remote Controlled, Linkable, Dimmable
Max Linkable Length	Up to 750 feet
Indoor/Outdoor Usage	Indoor, Outdoor
Control Method	Remote Control, Button Control
Connectivity Technology	Radio Frequency (RF)
Item Weight	6 Pounds

Feature	Detail
Product Dimensions	3.5 x 11 x 9 inches (packaging)
UPC	030878377904

9. WARRANTY AND SUPPORT

Enbrighten offers a **Limited Lifetime Warranty** on these LED Color-Changing Cafe Lights. This warranty covers defects in material and workmanship under normal use and service.

For detailed warranty information, claims, or technical support, please contact Enbrighten customer service. Refer to the product packaging or the official Enbrighten website for current contact information.

Online Resources:

- Visit the Enbrighten Store on Amazon: [Enbrighten Store](#)
- For additional support or FAQs, please visit the manufacturer's website.