

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ZOJIRUSHI](#) /

› [ZOJIRUSHI Electric Airpot CD-WBQ40 4.0 Liter Instruction Manual](#)

ZOJIRUSHI CD-WBQ40

ZOJIRUSHI Electric Airpot CD-WBQ40 4.0 Liter Instruction Manual

Model: CD-WBQ40 | Capacity: 4.0 Liters

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your ZOJIRUSHI Electric Airpot, Model CD-WBQ40. Please read this manual thoroughly before first use and retain it for future reference.

2. SAFETY PRECAUTIONS

WARNING: Failure to follow these safety instructions may result in fire, electric shock, serious injury, or property damage.

- Always connect the airpot to a grounded electrical outlet with the correct voltage (220 Volts).
- Do not immerse the airpot body, power cord, or plug in water or other liquids.
- Keep out of reach of children. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities.
- Do not operate the airpot if the power cord or plug is damaged, or if the appliance malfunctions or has been dropped or damaged in any manner.
- Place the airpot on a stable, flat, heat-resistant surface, away from edges and out of reach of children.
- Do not fill above the maximum water level indicator.
- Exercise caution when handling hot water or steam. The exterior surface may become hot during operation.
- Unplug the airpot from the outlet when not in use and before cleaning.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your ZOJIRUSHI Electric Airpot.



Figure 3.1: Front view of the ZOJIRUSHI Electric Airpot CD-WBQ40, showing the water level window and control panel area.



Figure 3.2: Close-up of the control panel with buttons for REBOIL, TEMP SET, DISPENSE, SLOW, UNLOCK, and TIMER, along with the LCD temperature display.



Figure 3.3: Rear view of the ZOJIRUSHI Electric Airpot CD-WBQ40, showing the power cord connection and caution labels.

4. SETUP

1. **Unpack:** Carefully remove the airpot and all accessories from the packaging.
2. **Initial Cleaning:** Before first use, wash the inner pot and lid thoroughly with warm water and a mild

dishwashing detergent. Rinse well and wipe dry. Refer to the "Maintenance" section for detailed cleaning instructions.

3. **Placement:** Place the airpot on a stable, level, and heat-resistant surface. Ensure there is adequate ventilation around the unit.
4. **Power Connection:** Insert the power cord securely into the airpot's power inlet, then plug the other end into a grounded 220V electrical outlet.

5. OPERATING INSTRUCTIONS

5.1 Filling with Water

1. Open the lid by pressing the lid release button.
2. Fill the inner pot with fresh water up to the "MAX" water level indicator. Do not overfill.
3. Close the lid securely until it clicks into place.

5.2 Boiling Water

- Once filled and plugged in, the airpot will automatically begin the boiling process. The display will show the current water temperature.
- The boiling process is complete when the water reaches 98°C (208°F) and the boiling indicator light turns off.

5.3 Setting Keep Warm Temperature

The airpot offers four keep-warm temperature settings:

- **98°C (208°F):** Ideal for hot beverages like coffee and black tea.
- **90°C (195°F):** Suitable for green tea and instant noodles.
- **80°C (175°F):** Perfect for delicate teas and baby formula.
- **60°C (140°F):** For warm water needs.

1. Press the **TEMP SET** button repeatedly until your desired temperature appears on the display.
2. The airpot will maintain the selected temperature after boiling.

5.4 Dispensing Water

The airpot features an electric dispensing system.

1. Ensure the airpot is plugged in and the water is at the desired temperature.
2. Press and hold the **UNLOCK** button.
3. While holding **UNLOCK**, press the **DISPENSE** button to release water. Release both buttons to stop dispensing.
4. For a slower flow, suitable for brewing coffee, press the **SLOW** button while dispensing.

5.5 Energy Saving Timer

The timer function allows you to set the airpot to automatically start boiling after a set number of hours (6 or 10 hours), saving energy during periods of non-use.

1. With the airpot plugged in, press the **TIMER** button.
2. Press **TIMER** again to toggle between 6 hours and 10 hours, or to turn the timer off.
3. The airpot will display the selected timer setting and will begin boiling after the set time has elapsed.

5.6 Reboil Function

If the water temperature has dropped below the desired keep-warm setting, or if you wish to reboil the water, press the **REBOIL** button. The airpot will quickly bring the water back to boiling temperature.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your airpot.

6.1 Exterior Cleaning

- Unplug the airpot and allow it to cool completely.
- Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or scrubbers.
- Ensure no water enters the electrical components.

6.2 Interior Cleaning (Inner Pot)

- Unplug the airpot and empty any remaining water.
- Use a soft sponge or cloth with mild dish soap to clean the inner pot.
- Rinse thoroughly with clean water.
- For mineral deposits (scale), use a descaling agent specifically designed for electric kettles or airpots, following the product's instructions. Alternatively, a solution of citric acid can be used.

6.3 Lid and Dispensing Spout Cleaning

- The lid may be detachable for easier cleaning. Refer to the specific instructions in your full product manual for lid removal.
- Clean the lid and dispensing spout with a small brush or cloth to remove any residue.
- Ensure all parts are dry before reassembling.

7. TROUBLESHOOTING

If you encounter issues with your airpot, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Airpot does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure power cord is securely plugged into a working 220V outlet. Check circuit breaker.
Water is not boiling or heating.	Insufficient water; lid not closed properly; heating element issue.	Check water level. Ensure lid is securely closed. If problem persists, contact customer support.
Water dispensing is weak or slow.	Mineral buildup in spout; air vent blocked; low water level.	Clean the dispensing spout and air vent. Ensure sufficient water in the pot.
Unusual odors or tastes.	New unit odor; mineral buildup; improper cleaning.	Perform initial cleaning. Descale the inner pot. Ensure regular cleaning.

Problem	Possible Cause	Solution
Exterior surface is hot.	Normal operation for some models; insulation issue.	While some warmth is normal, excessive heat may indicate an issue. Exercise caution. If concerned, contact customer support.

If the problem persists after attempting these solutions, please contact ZOJIRUSHI customer support.

8. SPECIFICATIONS



Figure 8.1: Diagram illustrating the approximate dimensions of the ZOJIRUSHI Electric Airpot CD-WBQ40.

Model Number	CD-WBQ40
Capacity	4.0 Liters
Voltage	220 Volts
Wattage	750 Watts
Material	Stainless Steel
Keep Warm Settings	98°C, 90°C, 80°C, 60°C
Timer Settings	6 - 10 hours
Product Dimensions (L x W x H)	22 cm x 29 cm x 28 cm

9. WARRANTY AND SUPPORT

For warranty information, product registration, or technical assistance, please refer to the warranty card included with your product or visit the official ZOJIRUSHI website. You may also contact ZOJIRUSHI customer support directly for further assistance.

ZOJIRUSHI Official Website: www.zojirushi.com

