

## Fisher-Price FPM23

# Fisher-Price Baby Playmat Rainforest Music & Lights Deluxe Gym Instruction Manual

## INTRODUCTION

---

Welcome to the Fisher-Price Baby Playmat Rainforest Music & Lights Deluxe Gym. This activity gym is designed to provide a stimulating and engaging environment for newborns and infants, supporting their developmental milestones through interactive play. This manual will guide you through the assembly, operation, and care of your new playmat.

## SETUP

---

Follow these steps to assemble your Rainforest Music & Lights Deluxe Gym:

1. Unpack all components from the box. Ensure all parts listed in the packaging are present.
2. Lay the soft playmat flat on a clean, safe surface.
3. Insert the two arch tubes into the designated slots on the playmat. Ensure they are securely fastened.
4. Attach the toucan unit to the top of the assembled arches. The toucan requires 2 AA batteries (not included) for its music and light features. Open the battery compartment, insert batteries with correct polarity, and close securely.
5. Attach the various repositionable toys (soft monkey, mirror, soft jingle lion, rollerball snail, clacker zebra, etc.) to the loops on the arches or directly to the mat as desired.



Figure 1: Fully assembled Fisher-Price Rainforest Music & Lights Deluxe Gym.



Figure 2: Components of the playmat laid out for assembly.

## Setup Demonstration Video

Your browser does not support the video tag.

Video 1: A user demonstrates the assembly and disassembly of the playmat, highlighting how the arches detach from the mat for easy cleaning and storage.

## OPERATING INSTRUCTIONS

The Rainforest Music & Lights Deluxe Gym offers multiple modes of play to grow with your baby:

- **Lay & Play:** For newborns, place your baby on their back to interact with the hanging toys and the overhead toucan. The toucan's music and lights can be activated by baby's movement or set to play continuously for up to 20 minutes.
- **Tummy Time:** Encourage tummy time by placing your baby on their stomach. Reposition toys to the mat level or use the soft giraffe for support. The crinkle leaf on the mat provides additional sensory engagement.
- **Take-Along:** The toucan unit is removable and portable. Press its wing or give it a gentle shake to activate tunes and lights, providing entertainment on the go. Other toys can also be detached and used individually.

The playmat features interactive elements:

- **Motion-Activated Music & Lights:** In short-play mode, the toucan responds to your baby's kicks

and movements with fun sound effects and musical ditties, along with lights from its beak.

- **Sensory Exploration:** The mat and toys offer a variety of textures, colors, and sounds, including a soft, satiny mat border, a large crinkle leaf, and dangling satiny butterflies that move with touch.



Figure 3: Baby interacting with the removable toucan toy.



Figure 4: Baby enjoying tummy time with the playmat's mirror.

## Operation Demonstration Video

Your browser does not support the video tag.

Video 2: A user reviews the playmat, demonstrating the toucan's music and light features, the machine-washable mat, and the various hanging toys.

## MAINTENANCE

---

Proper care ensures the longevity and hygiene of your playmat:

- **Mat Cleaning:** The playmat is machine-washable. Detach the arches and toys before washing. Use a gentle cycle with cold water and mild detergent. Air dry or tumble dry on low heat.
- **Toy Cleaning:** Wipe down plastic toys with a damp cloth and mild soap. Air dry thoroughly. Soft toys can be spot cleaned or hand washed.
- **Battery Replacement:** Replace the 2 AA batteries in the toucan unit when sounds or lights become faint or stop working.



Figure 5: The playmat is machine-washable for easy cleaning.

## TROUBLESHOOTING

---

If you encounter any issues with your playmat, please refer to the following common solutions:

- **No Sound/Lights from Toucan:** Check if the batteries are correctly installed and not depleted. Replace with fresh 2 AA batteries if necessary. Ensure the power switch is in the 'on' position.
- **Arches Not Standing Firmly:** Ensure both ends of the arch tubes are fully inserted into the designated pockets on the playmat.
- **Toys Not Attaching:** Verify that the toy rings are properly clipped onto the loops on the arches or mat.

## SPECIFICATIONS

---

| Feature            | Detail                    |
|--------------------|---------------------------|
| Product Dimensions | 30.5 x 32.5 x 27.5 inches |

| Feature            | Detail                           |
|--------------------|----------------------------------|
| Item Model Number  | FPM23                            |
| Batteries Required | 2 AA batteries (for toucan unit) |
| Battery Life       | Approximately 50 Hours           |
| Material Type      | Plastic, Fabric                  |
| Care Instructions  | Machine-washable mat             |
| Item Weight        | 3.97 pounds                      |
| UPC                | 887961611854                     |
| Age Range          | Newborn (0+ Months)              |

## WARRANTY AND SUPPORT

---

Fisher-Price products are manufactured to high-quality standards. For specific warranty information, please refer to the documentation included with your purchase or visit the official Fisher-Price website. If you require further assistance, have questions, or need to report a defect, please contact Fisher-Price customer support through their official channels. Keep your proof of purchase for warranty claims.

For more information, visit the [Fisher-Price Store](#).