

ER CHEN LD1118

ER CHEN Honeybee Fairy String Lights (Model LD1118) Instruction Manual

INTRODUCTION

This manual provides instructions for the ER CHEN Honeybee Fairy String Lights, Model LD1118. These battery-powered LED string lights are designed for decorative purposes, suitable for both indoor and outdoor use. Please read these instructions carefully before use and retain them for future reference.

PACKAGE CONTENTS

- 1 x ER CHEN Honeybee Fairy String Lights (10ft, 20 LED)
- 1 x Battery Box (requires 3 AA batteries, not included)

SETUP

Battery Installation

1. Locate the battery box attached to the string lights.
2. Open the battery compartment cover.
3. Insert 3 AA batteries (not included), ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Placement

Uncoil the string lights carefully. Position the lights in your desired indoor or outdoor location. If used outdoors, ensure the battery box is placed in a protected area to avoid direct exposure to heavy rain or moisture.



An overview of the ER CHEN Honeybee Fairy String Lights, showing the 10-foot string with 20 honeybee-shaped LED lights and the attached battery box.

An official product video demonstrating the ER CHEN Honeybee Fairy String Lights, showing the battery installation and the lights being switched on and off.

OPERATING INSTRUCTIONS

Once batteries are installed, use the switch located on the battery box to turn the lights **ON** or **OFF**. Some models may feature multiple lighting modes (e.g., steady on, flashing); cycle through these modes using the same switch if available.



The honeybee LED lights glowing with a warm white light in a dark environment, showcasing their decorative effect.

MAINTENANCE

- To clean the lights, gently wipe with a dry, soft cloth. Do not immerse the lights or battery box in water.
- When not in use for extended periods, remove batteries to prevent leakage and corrosion.
- Store the string lights in a cool, dry place away from direct sunlight.


TROUBLESHOOTING

Problem	Solution
Lights not turning on	Check battery polarity. Replace old batteries with new ones. Ensure the switch on the battery box is in the 'ON' position.
Lights are dim	Replace batteries with fresh ones.

Problem	Solution
Some LEDs not working	Inspect for any visible damage to the wire or individual LED units. If damage is present, discontinue use.

SPECIFICATIONS

- **Model Number:** LD1118
- **Total Length:** 3 meters (10 feet)
- **Number of LEDs:** 20
- **LED Type:** Honeybee shaped
- **Honeybee Size:** Approximately 38mm (height) x 35mm (width)
- **Material:** High quality PVC
- **Power Source:** 3 x AA Batteries (not included)
- **Light Color:** Warm White
- **Voltage:** 4.5 Volts
- **Item Weight:** Approximately 0.25 Pounds (4 ounces)
- **Indoor/Outdoor Use:** Yes
- **UPC:** 767520193581

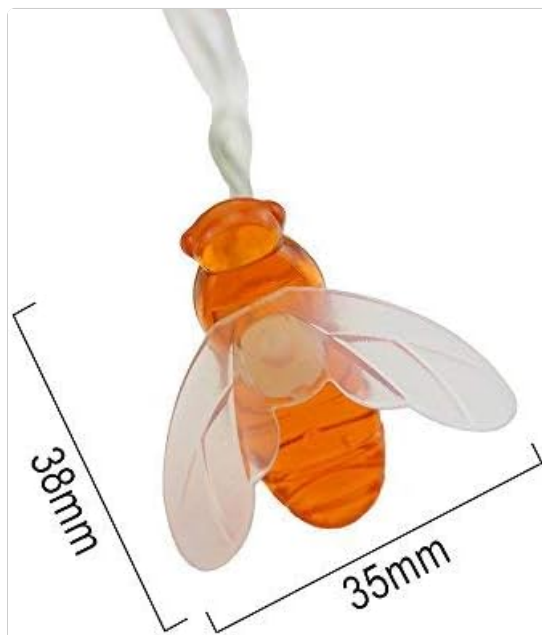

A detailed view of one honeybee-shaped LED light, indicating its approximate dimensions of 38mm in height and 35mm in width.

WARRANTY AND SUPPORT

ER CHEN offers a 6-month warranty for this product from the date of purchase. This warranty covers manufacturing defects. It does not cover damage caused by misuse, accidents, or unauthorized modifications.

For support, warranty claims, or any questions regarding your ER CHEN Honeybee Fairy String Lights, please contact ER CHEN customer service through your retailer or the official ER CHEN store page.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question