

**Gillette B072M5FFZ5**

# Gillette ProGlide Shield Men's Razor User Manual

Model: B072M5FFZ5

## PRODUCT OVERVIEW

The Gillette ProGlide Shield razor is engineered for a comfortable and smooth shaving experience. It features advanced lubrication and flexible technology to adapt to facial contours. This package includes one razor handle and four blade refills.

### Key Features:

- **5 Antifriction Blades:** Thinnest, finest blades for less tug and pull compared to Sensor3.
- **Comfortglide Lubrication:** Lubrication strips before and after the blades help shield skin from irritation.
- **FlexBall Handle Technology:** Responds to facial contours for maximum contact and virtually every hair.
- **Precision Trimmer:** Located on the back of the cartridge for hard-to-reach areas and precise styling of facial hair.
- **Microfins:** Gently stretch and smooth the skin while microcombs guide hair to the blades.



Image: The Gillette ProGlide Shield razor handle and four blade refills packaged in a box, highlighting the product

## SETUP

---

The Gillette ProGlide Shield razor handle is designed for easy blade attachment. Ensure the handle is clean and dry before attaching a new blade cartridge.

### Attaching a Blade Cartridge:

1. Remove a new blade cartridge from its packaging.
2. Align the razor handle with the new cartridge.
3. Push the handle firmly into the cartridge until it clicks into place.

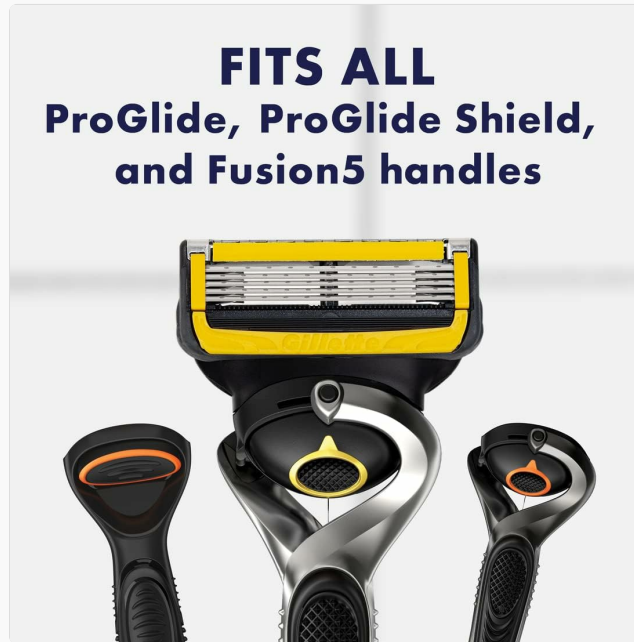


Image: Illustration showing the compatibility of ProGlide Shield refills with various Gillette 5-blade razor handles, including ProGlide and Fusion5.

## OPERATING INSTRUCTIONS

---

For optimal performance and comfort, follow these steps for shaving:

1. Wet the area to be shaved with warm water.
2. Apply shaving cream or gel evenly to the skin.
3. Hold the razor at a 30-degree angle to the skin.
4. Glide the razor gently over the skin, following the direction of hair growth.
5. Rinse the blade under running water after each stroke to prevent clogging.
6. Repeat as necessary for a close and comfortable shave.

### Using the Precision Trimmer:

The Precision Trimmer on the back of the cartridge is ideal for shaping facial hair and reaching difficult areas like under the nose or sideburns.

- Flip the razor head to expose the single blade trimmer.
- Use short, precise strokes to trim and define edges.

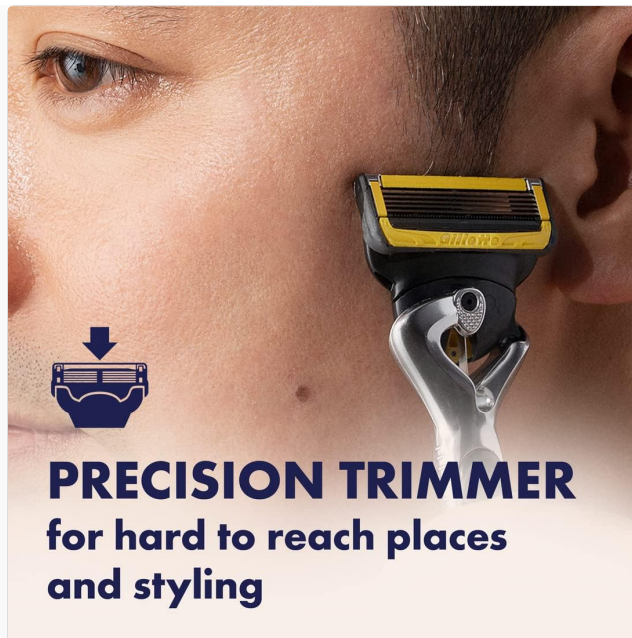


Image: Close-up of the Gillette ProGlide Shield razor head, illustrating the precision trimmer feature on the back of the cartridge for detailed styling.

## MAINTENANCE

Proper maintenance extends the life of your razor blades and ensures a consistent shave.

- After each use, rinse the razor thoroughly under running water to remove hair and shaving cream.
- Do not tap the razor against the sink or wipe the blades, as this can damage the delicate blade edges.
- Store the razor in a dry place, ideally with the blades facing up, to allow them to air dry.

## BLADE REPLACEMENT

It is recommended to replace your blade cartridge when the lubrication strips fade or when you feel the blades are no longer providing a smooth shave. Each refill can last up to one month, depending on usage.

### Steps for Replacing a Blade:

1. Locate the release button on the razor handle, typically near the top of the handle where the cartridge attaches.
2. Press the release button to detach the used blade cartridge.
3. Dispose of the used cartridge safely.
4. Attach a new blade cartridge as described in the "Setup" section.

## COMPATIBILITY

Gillette ProGlide Shield blade refills are designed to fit all Gillette 5-blade razor handles, with the exception of GilletteLabs handles. This ensures broad compatibility if you own other Gillette 5-blade razor handles.

## TROUBLESHOOTING

If you encounter issues with your Gillette ProGlide Shield razor, consider the following:

- **Dull Blades:** If the shave feels rough or causes pulling, the blade may be dull. Replace the blade cartridge.
- **Skin Irritation:** Ensure you are using sufficient shaving cream or gel. Shave with the grain of your hair, especially if you have sensitive skin. Consider replacing the blade if irritation persists.
- **Clogged Blades:** Rinse the blades frequently during shaving to prevent hair and cream buildup. Do not tap the razor.
- **Razor Not Gliding Smoothly:** Check if the lubrication strips are faded. If so, replace the blade. Ensure your skin is adequately lubricated with shaving cream or gel.

## SPECIFICATIONS

Feature	Detail
Product Dimensions	1.85 x 6.42 x 3.86 inches
Item Weight	2.51 ounces
Brand	Gillette
Number of Blades	5
Recommended Uses	Shaving, Trimming
Skin Type	Normal
Manufacturer	Procter & Gamble
UPC	047400660939
ASIN (Model)	B072M5FFZ5

## WARRANTY & SUPPORT

For information regarding product warranty, returns, or customer support, please refer to the manufacturer's official website or contact their customer service department. Keep your purchase receipt for any warranty claims.

For additional information or assistance, visit the [Gillette Store on Amazon](#).