



[Manuals.plus](#) /

› [Samsonite](#) /

› Samsonite Winfield 2 20-Inch Hardside Carry-on Spinner Luggage Instruction Manual

Samsonite 56844-2849

Samsonite Winfield 2 20-Inch Hardside Carry-on Spinner Luggage Instruction Manual

Model: 56844-2849

INTRODUCTION

This manual provides essential information for the proper use, maintenance, and care of your Samsonite Winfield 2 20-Inch Hardside Carry-on Spinner Luggage. Please read these instructions thoroughly before first use to ensure optimal performance and longevity of your product.



Image: Samsonite Winfield 2 20-Inch Hardside Carry-on Spinner Luggage in Brushed Anthracite. This image displays the

luggage in its upright position, showcasing its brushed anthracite finish and spinner wheels.

SETUP

Setting the TSA Combination Lock

Your Samsonite Winfield 2 luggage is equipped with an integrated TSA-approved combination lock for enhanced security. The factory default code is 0-0-0.

1. Open the lock by ensuring the dials are set to the factory default code (0-0-0).
2. Locate the small reset button, usually found near the dials. Use a ballpoint pen or a similar pointed object to press and hold this button.
3. While holding the reset button, set the three dials to your desired personal combination.
4. Release the reset button. Your new combination is now set.

Important: Remember your combination. There is no key provided for this lock, as TSA agents use a master key for inspection. If you forget your combination, you may need to try all 1000 combinations (000-999) or contact Samsonite customer support for assistance.



Image: A visual guide demonstrating the four steps to set a TSA combination lock on the luggage, showing the dials and the reset button.

OPERATING INSTRUCTIONS

Telescoping Handle Operation

The luggage features a multi-stage telescoping pull handle for comfortable maneuvering.

- To extend the handle: Press the button located on the top of the handle and pull upwards until it locks into your desired height.
- To retract the handle: Press the button again and push the handle downwards until it is fully recessed.

Using the Spinner Wheels

Your Winfield 2 luggage is equipped with four multi-directional spinner wheels, allowing for effortless 360-degree mobility.

- For upright rolling: Push the luggage alongside you on all four wheels. This reduces strain on your arm and shoulder.
- For tilted rolling: Tilt the luggage onto two wheels and pull it behind you, similar to traditional two-wheeled luggage. This is useful on uneven surfaces.



Image: A close-up view of the luggage's multi-directional spinner wheels, highlighting their design for effortless movement.

Packing the Interior

The fully-lined interior is designed for organized packing.

- **Main Compartment:** Utilize the cross-straps to secure your clothing and prevent shifting during transit.
- **Divider Panel:** A privacy curtain with zippered organizational pockets separates the two main compartments, providing additional storage for smaller items or separating clean and dirty clothes.



Image: The interior of the luggage is shown open, revealing packed clothes secured by cross-straps and a zippered divider panel with mesh pockets.

Expansion Feature

For additional packing capacity, your luggage includes an expansion zipper.

- To expand: Unzip the expansion zipper located along the perimeter of the luggage.
- To compress: Zip the expansion zipper closed.

MAINTENANCE

Cleaning the Hardside Exterior

The 100% polycarbonate shell is designed for durability and easy cleaning.

- Wipe down the exterior with a soft cloth dampened with mild soap and water.
- Avoid using abrasive cleaners or solvents, as these can damage the finish.
- The brushed pattern helps to hide minor scuffs and scratches that may occur during travel.

Wheel and Zipper Care

- Regularly check the spinner wheels for any debris or hair that may impede smooth rolling. Clean as necessary.
- Ensure zippers are free from obstructions. If a zipper becomes stiff, a small amount of silicone spray or wax can be applied to the teeth.

TROUBLESHOOTING

Common Issues and Solutions:

- **Stuck Telescoping Handle:** Ensure no items inside the luggage are obstructing the handle mechanism. Press the release button firmly while gently wiggling the handle.
- **Wheels Not Rolling Smoothly:** Check for debris (hair, lint) wrapped around the wheel axles. Clean thoroughly. If wheels are damaged, refer to warranty information.
- **Zipper Malfunction:** Ensure the zipper teeth are aligned. If the zipper is stuck, try gently moving the slider back and forth. Do not force it.
- **Forgotten TSA Lock Combination:** As mentioned in the Setup section, there is no master key for users. You will need to try combinations or contact Samsonite customer support for guidance.

For issues not resolved by these steps, please refer to the Warranty and Support section.

SPECIFICATIONS

Model Number	56844-2849
Product Dimensions	9.5 x 14.5 x 23 inches
Packing Dimensions	20.0" x 13.5" x 9.5"
Overall Dimensions	23.0" x 14.5" x 9.5"
Item Weight	6.7 pounds
Material	100% Polycarbonate
Wheels	Four Multi-directional Spinner Wheels
Lock Type	Side-mounted TSA Combination Lock

WARRANTY AND SUPPORT

The Samsonite Winfield 2 luggage comes with a **10-Year Limited Warranty** against defects in materials and workmanship. Samsonite products are rigorously tested to ensure they meet stringent quality standards. This warranty covers manufacturing defects but typically does not cover damage caused by misuse, airline

handling, or normal wear and tear. For specific warranty claims or to locate an authorized repair center, please visit the official Samsonite website or contact their customer service department.

Online Support: www.samsonite.com

PRODUCT VIDEOS

Samsonite Winfield 2 Hardside Luggage Overview

Your browser does not support the video tag.

Video: An official overview of the Samsonite Winfield 2 Hardside Luggage, showcasing its features and design. This video highlights the durability and functionality of the luggage.