

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [HOMCOM](#) /

› [HOMCOM 31" Tilt Out Laundry Hamper Instruction Manual](#)

HOMCOM 834-118

HOMCOM 31" Tilt Out Laundry Hamper Instruction Manual

Model: 834-118 | Brand: HOMCOM

INTRODUCTION

Thank you for purchasing the HOMCOM 31" Tilt Out Laundry Hamper. This versatile storage cabinet is designed to enhance organization in your bathroom or laundry room, offering a discreet solution for laundry and additional storage space. Please read this manual thoroughly before assembly and use to ensure proper installation and safe operation.

IMPORTANT SAFETY INFORMATION

- **Read all instructions:** Ensure you understand all assembly and usage instructions before proceeding.
- **Keep children away:** Small parts can be a choking hazard. Keep children and pets away during assembly.
- **Use on a level surface:** Assemble and place the unit on a flat, stable surface to prevent tipping.
- **Do not overload:** The maximum weight capacity is 66 lbs. Do not exceed this limit to prevent damage or injury.
- **Regular maintenance:** Periodically check all connections and fasteners to ensure they remain tight.
- **Avoid moisture:** While designed for bathrooms, avoid prolonged exposure to excessive moisture to prevent material damage.

PACKAGE CONTENTS

Please verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Cabinet panels (top, bottom, sides, back)
- Tilt-out door with handle
- Removable fabric hamper bag
- Assembly hardware (screws, dowels, hinges, etc.)

- Instruction manual

ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. It is recommended to have two people for certain steps.

Step 1: Prepare Components

Unpack all components and lay them out on a clean, soft surface (e.g., a blanket or cardboard) to prevent scratches. Identify each part using the provided parts list (if included in your physical manual).



Image: Front view of the assembled HOMCOM 31" Tilt Out Laundry Hamper.

Step 2: Assemble the Cabinet Frame

Connect the side panels to the bottom and top panels using the provided hardware. Ensure all connections are secure but do not overtighten screws initially. The sturdy legs are integrated into the design, providing stability and elevation.



Image: Close-up view of the sturdy legs, providing elevation for the hamper.

Step 3: Install the Tilt-Out Door

Attach the tilt-out door to the cabinet frame using the designated hinges. Ensure the door opens and closes smoothly. Install the metal handle onto the door.



Image: Detailed view of the metal handle on the tilt-out door.

Step 4: Insert the Fabric Hamper

Place the removable fabric hamper bag into the tilt-out compartment. Ensure it is properly seated and secured within the frame.

TI LT OUT HAMPER

Perfect for storage of bathroom accessories or laundry accessories



Image: The tilt-out door is open, revealing the removable fabric hamper, ready for use.

Step 5: Finalize Assembly

Once all parts are assembled, gently tighten all screws. Place the cabinet in its desired location, ensuring it is stable and level. The top surface features a curved edge design.



Image: The top surface of the hamper, featuring a decorative curved edge, used for additional storage.

Assembly Video

For a visual guide on assembly and features, please watch the official product video below:

Your browser does not support the video tag.

Video: Official HOMCOM product video demonstrating the features and assembly of the 31" Tilt Out Laundry Hamper.

OPERATING INSTRUCTIONS

Using the Tilt-Out Hamper

1. To deposit laundry, gently pull the handle on the front door. The door will tilt forward, revealing the fabric hamper.
2. Place dirty clothes into the removable fabric bag.
3. To close, push the door back into its upright position until it is securely closed.

Removing the Hamper Bag

1. Open the tilt-out door.
2. Lift the fabric hamper bag out of its frame using its integrated handles.

3. Transport the bag to your laundry area.
4. After emptying, place the bag back into the frame and close the tilt-out door.



Image: A user placing laundry into the open tilt-out hamper.

MAINTENANCE

- **Cleaning the Cabinet:** Wipe the MDF cabinet surfaces with a damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Cleaning the Hamper Bag:** The fabric hamper bag can be spot cleaned or hand washed with mild detergent. Allow it to air dry completely before returning it to the cabinet.
- **Hardware Check:** Periodically check all screws and connections to ensure they are tight. Retighten if necessary.
- **Moisture Control:** In humid environments like bathrooms, ensure adequate ventilation to prevent moisture buildup inside the cabinet.

TROUBLESHOOTING

- **Door not closing properly:** Check hinges for alignment and ensure no items are obstructing the door's path.

- **Unit wobbles:** Ensure the cabinet is placed on a level surface. Check and tighten all assembly screws.
- **Unpleasant odors:** Regularly empty and clean the fabric hamper bag. Ensure the cabinet is in a well-ventilated area.

SPECIFICATIONS

Feature	Detail
Brand	HOMCOM
Model Number	834-118
Overall Dimensions	15.5" W x 12" D x 31" H
Material	MDF
Color	White
Weight Capacity	66 lbs
Installation Method	Free standing
Included Components	Pull Out Basket

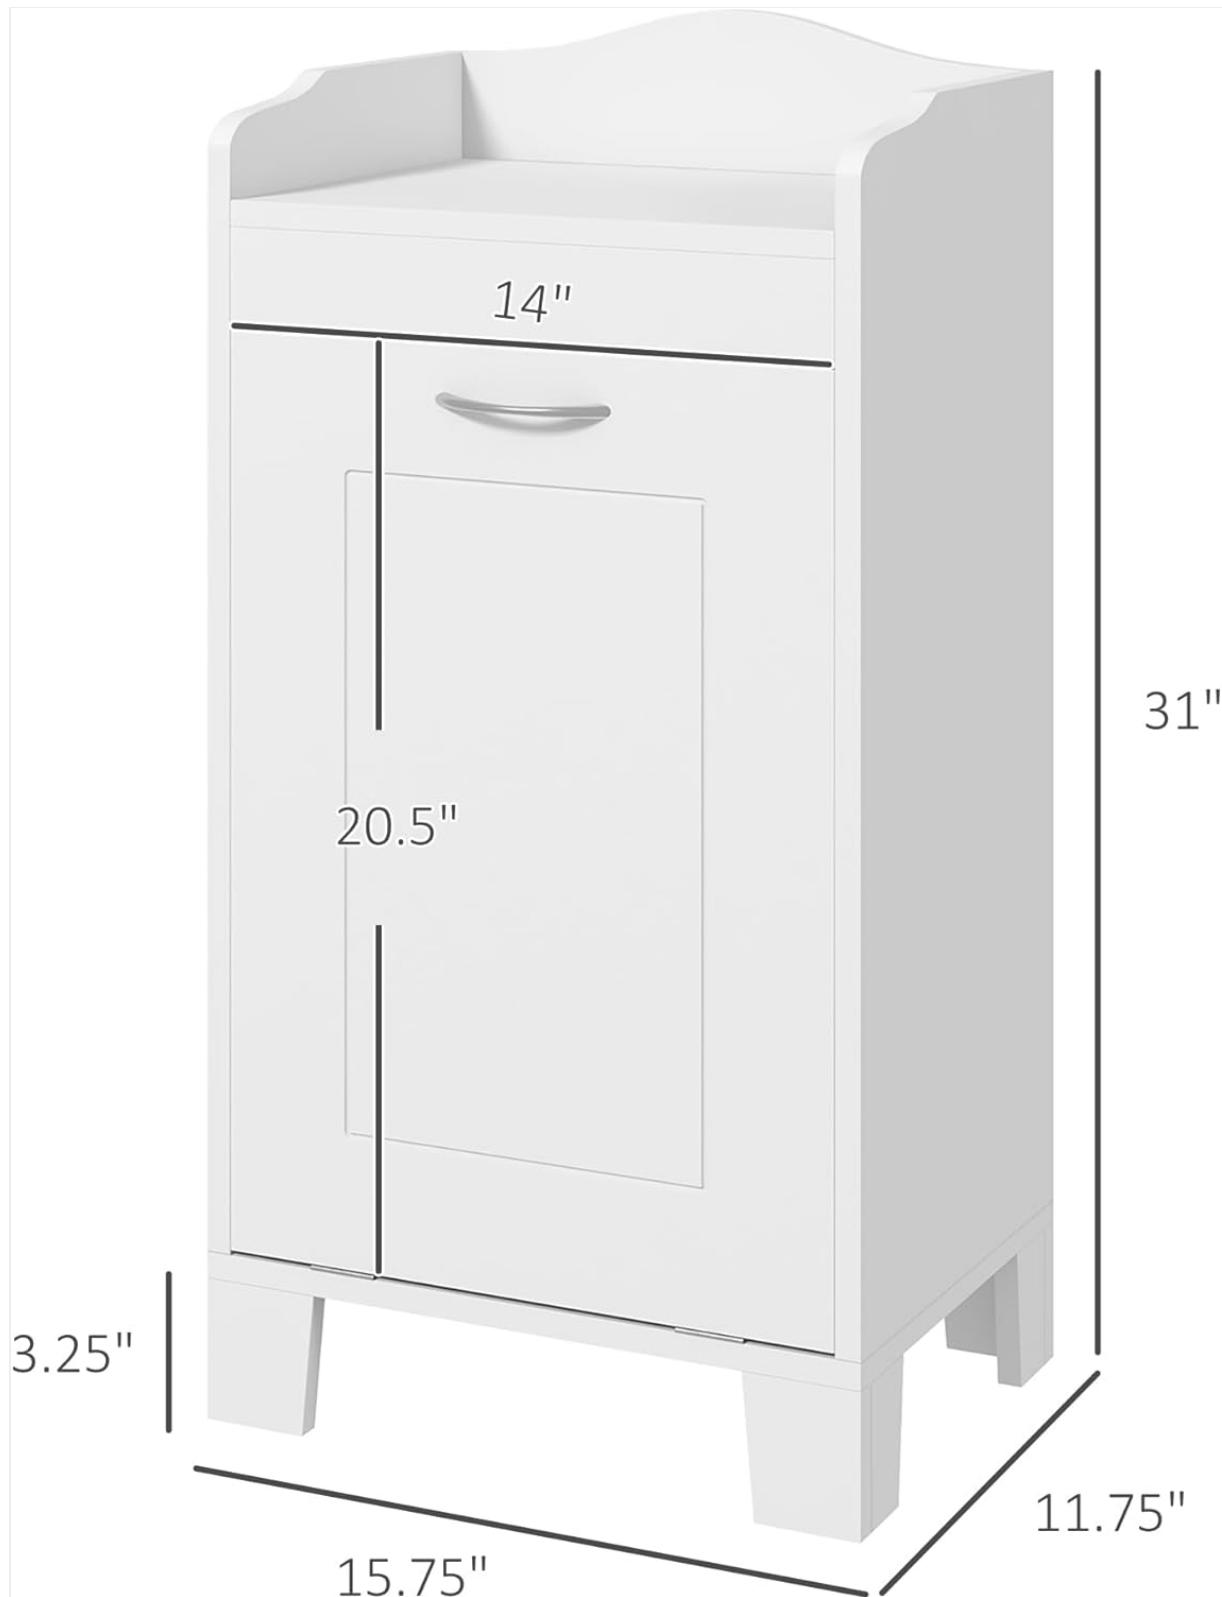


Image: Dimensional diagram of the HOMCOM 31" Tilt Out Laundry Hamper.

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided with your purchase documentation or visit the official HOMCOM website. Keep your proof of purchase for any warranty claims.

