

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GOURMETmaxx](#) /

› [GOURMETmaxx 01644 Air Fryer Grill Basket Instruction Manual](#)

GOURMETmaxx 01644

GOURMETmaxx 01644 Air Fryer Grill Basket Instruction Manual

Model: 01644 | Brand: GOURMETmaxx

1. INTRODUCTION

This manual provides instructions for the proper use and maintenance of your GOURMETmaxx 01644 Air Fryer Grill Basket. Please read these instructions carefully before first use and retain them for future reference.

The GOURMETmaxx Air Fryer Grill Basket is designed for fat-reduced cooking in your oven, allowing hot air to circulate around food for crispy results. Its non-stick coating prevents food from sticking and simplifies cleaning. It is suitable for preparing items such as fries, chicken nuggets, and other oven-ready foods.

2. SAFETY INSTRUCTIONS

- Always use oven mitts or heat-resistant gloves when handling the hot grill basket.
- Ensure the basket is placed on a stable oven rack.
- Always place a baking sheet or drip tray directly underneath the grill basket to catch any dripping fat or food particles. This helps keep your oven clean.
- Do not use abrasive cleaners, metal scouring pads, or sharp objects on the non-stick coating to avoid damage.
- Keep the product out of reach of children.
- This product is intended for household use only.

3. PRODUCT COMPONENTS

The GOURMETmaxx 01644 Air Fryer Grill Basket includes:

- One (1) GOURMETmaxx Air Fryer Grill Basket (Square, 33x28x5cm)



Image: The empty GOURMETmaxx Air Fryer Grill Basket, showcasing its square shape and mesh design, ready for use.

4. SETUP AND FIRST USE

- 1. Unpack:** Carefully remove the grill basket from its packaging.
- 2. Initial Cleaning:** Before first use, wash the basket thoroughly with warm soapy water and a soft sponge. Rinse well and dry completely.
- 3. Oven Placement:** Place the grill basket on an oven rack inside your oven. Ensure a baking sheet or drip tray is positioned directly underneath the basket to collect any drippings during cooking. This is crucial for maintaining oven cleanliness.

5. OPERATING INSTRUCTIONS

The GOURMETmaxx Air Fryer Grill Basket is designed to promote even cooking and crispiness by allowing 360° hot air circulation around your food.

- 1. Preheat Oven:** Preheat your oven to the temperature recommended for the food item you are preparing.
- 2. Load Food:** Arrange your food items (e.g., pre-fried fries, chicken nuggets, vegetables) evenly in a single layer within the grill basket. Avoid overcrowding to ensure optimal hot air circulation.
- 3. Insert into Oven:** Using oven mitts, carefully slide the loaded grill basket into the preheated oven. Confirm that the drip tray is correctly positioned underneath.
- 4. Cooking Process:** Cook for the recommended duration for your specific food. The mesh design facilitates hot air reaching all sides of the food, which helps achieve even cooking and a crispy texture.

without the need for frequent turning.

5. **Removal:** Once cooking is complete, use oven mitts to carefully remove the hot grill basket from the oven.



Image: The GOURMETmaxx Air Fryer Grill Basket containing a serving of golden fries and crispy chicken nuggets.



Image: A whole roasted chicken cooking in the GOURMETmaxx Air Fryer Grill Basket, positioned within an oven, demonstrating its capacity for larger items.



Die heiße Luft verteilt sich rundherum, von allen Seiten, oben & unten – für krosse Pommes frites u.v.m.

Image: A visual representation of how hot air circulates completely around food in the grill basket, ensuring thorough and even cooking from all sides.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will help preserve the non-stick properties and extend the lifespan of your GOURMETmaxx Air Fryer Grill Basket.

- **Cool Down:** Always allow the basket to cool completely after use before attempting to clean it.
- **Hand Washing:** For best results and to prolong the non-stick coating, hand wash with warm, soapy water and a soft sponge or cloth.
- **Dishwasher Safe:** The grill basket is designed to be dishwasher safe for your convenience.
- **Drying:** Ensure the basket is thoroughly dry before storing to prevent water spots or rust.
- **Storage:** Store in a dry place, away from direct heat or moisture.



Image: A set of three icons indicating key features: non-stick coating, suitability for low-fat grilling/baking/toasting, and dishwasher compatibility for easy cleaning.

7. TROUBLESHOOTING

If you encounter any issues while using your GOURMETmaxx Air Fryer Grill Basket, consider the following common solutions:

- **Food Not Crispy Enough:**

- Ensure your oven is preheated to the correct temperature.
- Avoid overcrowding the basket; food should be in a single layer for optimal air circulation.
- For best results, use an oven with a convection (fan-assisted) setting, as this enhances hot air distribution.

- **Food Sticking to the Basket:**

- While the basket features a non-stick coating, some foods, especially those with high sugar content or certain marinades, may still benefit from a light spray of cooking oil before placement.
- Ensure the basket is clean and free of old food residues before each use.

- **Difficulty Cleaning Stubborn Residue:**

- Soak the basket in warm, soapy water for a period before attempting to clean. This will help loosen any baked-on food.
- Use a soft brush or sponge; avoid abrasive materials.

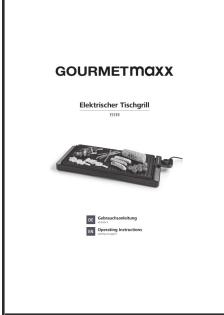
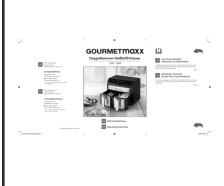
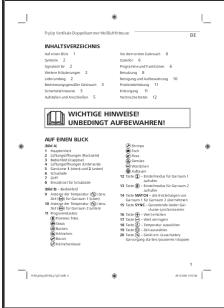
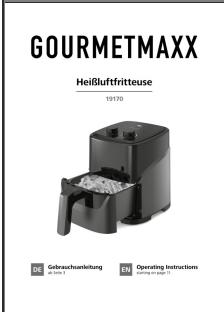
8. SPECIFICATIONS

Feature	Detail
Brand	GOURMETmaxx
Model Number	01644
Color	Black
Dimensions (L x W x H)	Approx. 33 x 28 x 5 cm (Square)
Weight	290 g
Material	Stainless steel with non-stick coating
Operation	Manual (Oven Accessory)
Special Features	Non-stick coating, 360° air circulation effect, Dishwasher safe

9. WARRANTY AND SUPPORT

For detailed warranty information, product registration, or customer support, please refer to the specific documentation included with your purchase. You may also visit the official GOURMETmaxx website or contact their customer service department directly. Warranty terms and conditions may vary based on your region and the retailer from whom the product was purchased.

Related Documents - 01644

	<p>GOURMETMAXX 15139 Electric Table Grill User Manual and Operating Instructions Comprehensive user manual and operating instructions for the GOURMETMAXX 15139 Electric Table Grill. Learn about intended use, safety precautions, operation, cleaning, disposal, and technical specifications.</p>
	<p>GourmetMaxx Double Chamber Hot Air Fryer Operating Instructions Comprehensive operating instructions for the GourmetMaxx Double Chamber Hot Air Fryer, covering setup, usage, safety, troubleshooting, and technical specifications. Learn how to use its 10 preset programs for grilling, frying, baking, and more.</p>
	<p>Gourmetmaxx Electric Table Grill 15139 - Operating Instructions User manual for the Gourmetmaxx Electric Table Grill (Model HY-6325, Article 15139), providing detailed information on safe operation, features, cleaning, disposal, and technical specifications.</p>
	<p>GOURMETmaxx FryUp Vertical Double Chamber Hot Air Fryer - User Manual Comprehensive user manual for the GOURMETmaxx FryUp Vertical Double Chamber Hot Air Fryer, model ZHAF-960A. Includes setup, operation, safety instructions, cleaning, troubleshooting, and technical specifications.</p>
	<p>Gourmetmaxx Digital Air Fryer 15021 Operating Instructions This document provides operating instructions for the Gourmetmaxx Digital Air Fryer 15021. It covers safety information, intended use, device components, operating procedures, cleaning, and disposal.</p>
	<p>GOURMETMAXX 19170 Air Fryer Operating Instructions User manual for the GOURMETMAXX 19170 Air Fryer, providing detailed instructions on setup, operation, safety precautions, cleaning, and technical specifications.</p>