

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Energizer](#) /
- › [Energizer WeatherReady Floating Handheld LED Light Instruction Manual](#)

Energizer WRESA41E

Energizer WeatherReady Floating Handheld LED Light Instruction Manual

Model: WRESA41E

Brand: Energizer

PRODUCT OVERVIEW

The Energizer WeatherReady Floating Handheld LED Light is a versatile and durable lighting solution designed for various situations, including emergencies and outdoor activities. It features multiple lighting modes and is built to withstand challenging environmental conditions.



Image: The Energizer WeatherReady Floating Handheld LED Light, showcasing its compact and robust design.

SETUP

Battery Installation

Your Energizer WeatherReady LED Light requires four (4) AA batteries for operation. These batteries are typically included with the product.

1. Locate the battery compartment cap at the bottom of the flashlight.
2. Unscrew the cap by turning it counter-clockwise.
3. Insert four (4) AA batteries into the compartment, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cap and screw it clockwise until it is securely tightened. Ensure it is fully sealed to maintain the waterproof integrity of the device.



LANTERN MODE

Image: A close-up view of the flashlight's base, showing the battery compartment and the process of inserting AA batteries.



Energizer



RUNS ON
FONCTIONNE
AVEC

4

OR ON
OU

2

For best performance
use 4AA batteries

Pour une performance optimale,
utilisez 4 piles AA



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

BATTERY WARNING: Do not install backwards, charge, put in fire or mix with used or other battery types - may explode or leak causing injury. **Replace all batteries at the same time.**

AVERTISSEMENT AU SUJET DES PILES: N'installez pas la pile à l'envers, ne la chargez pas, ne la jetez pas au feu ou ne la mélangez pas avec des piles usées ou d'autres types de piles - elle risque d'exploser ou de fuir, entraînant des blessures. **Remplacez toutes les piles en même temps.**

ADVERTENCIA SOBRE LAS PILAS: No las instale al revés, las cargue, las arroje al fuego ni las mezcle con pilas usadas o con otros tipos de pilas - pueden explotar o experimentar fugas causando lesiones. **Reemplace todas las pilas a la vez.**

WARNING: This product contains a magnet that may interfere with the operation of certain pacemakers and other medical devices.


AVERTISSEMENT: Ce produit contient un aimant qui peut créer des interférences avec certains stimulateurs cardiaques et autres appareils médicaux.

ADVERTENCIA: Este producto contiene un imán que podría interferir con el funcionamiento de algunos marcapasos y otros dispositivos médicos.


©2021 Energizer. Energizer, Energizer Bunny design, and certain graphic designs are trademarks of Energizer Brands, LLC and related subsidiaries.

©2021 Energizer. Energizer, le dessin du lapin Energizer et certains dessins graphiques sont des marques de commerce de la société Energizer Brands, LLC et de ses filiales connexes.

©2021 Energizer. Energizer, el diseño del conejo de Energizer y ciertos diseños gráficos son marcas comerciales de Energizer Brands, LLC y de sus subsidiarias.

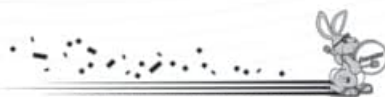

DIRECTIONAL SPOT MODE/MODE FAISCEAU DIRECTIONNEL/MODO DIRECCIONAL

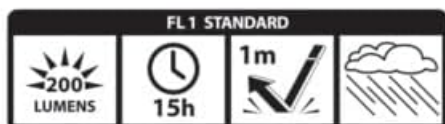

AREA MODE/MODE RAYONNEMENT/MODO SUPERFICIE

Results based on using 4 Energizer MAX® alkaline batteries.
Résultats basés sur l'utilisation de 4 piles alcalines Energizer MAX®.
Los resultados se basan en el uso de 4 pilas alcalinas Energizer MAX®.

www.energizer.ca

ESSA411
WRESA41E
UPN -153366

manufactured for/
Fabriqué pour/
Fabricado para:
Energizer Brands, LLC, St. Louis, MO 63141.
Energizer Canada, Inc., Mississauga, Ontario L5N 6J5.
TM Used under lic./MC Usager lic.

Light made in China
Batteries made in Singapore
Lampe fabriquée en Chine
Piles fabriquées à Singapour
Linterna fabricada en China
Pilas fabricadas en Singapur

Image: The back of the product packaging, illustrating the requirement for 4 AA batteries for optimal performance.

OPERATING INSTRUCTIONS

The Energizer WeatherReady LED Light features a single power button to cycle through its various lighting modes.

Power On/Off and Mode Selection

1. **First Press:** Activates the *Dual Mode*, illuminating both the front flashlight beam and the side lantern panel. This provides a wide, 270-degree area of illumination, useful for tasks requiring light in multiple directions.
2. **Second Press:** Switches to *Lantern Mode*, where only the side panel illuminates. This mode is ideal for lighting up a general area, such as a tent or a room during a power outage.
3. **Third Press:** Activates the *Flashing Red Light Mode*. This mode is designed for emergency signaling, making the user visible in low-light conditions or to alert others.
4. **Fourth Press:** Turns the light OFF.



FLASHLIGHT
MODE

Image: A hand demonstrating the flashlight mode, where the front beam provides focused illumination.



LANTERN MODE

Image: The flashlight in lantern mode, with its side panel emitting a broad, diffused light.



Image: A person demonstrating the dual mode, showing both the forward beam and downward area light in use.

MAINTENANCE

Cleaning

To clean the exterior of the flashlight, wipe it with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the plastic housing or the lens.

Battery Care

When the light output begins to dim, replace all four (4) AA batteries with new ones. For optimal performance and to prevent battery leakage, remove batteries if the flashlight will not be used for an extended period.

Storage

Store the flashlight in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the battery compartment is securely closed to prevent moisture ingress.



Image: The flashlight resting on a wet surface, illustrating its water-resistant design.

TROUBLESHOOTING

- **Light does not turn on:**

- Check if the batteries are inserted correctly with the proper polarity.
- Ensure the battery compartment cap is fully and securely tightened. A loose cap can prevent electrical contact.
- Replace old or depleted batteries with new ones.

- **Light flickers:**

- Tighten the battery compartment cap firmly.
- Check the battery contacts for corrosion or debris and clean if necessary.

- **Reduced brightness or short runtime:**

- This indicates low battery power. Replace all four (4) AA batteries.

SPECIFICATIONS

Feature	Detail
Brand	Energizer
Model Name	WEATHEREADY LED Flashlight, Lantern and Flashlight Mode
Model Number	WRESA41E
Brightness	100 Lumens
Power Source	Battery Powered
Battery Type	4 AA Alkaline batteries (included)
Voltage	6 Volts
Item Weight	8.18 ounces
Water Resistance Level	Waterproof (IPX7)
Material	Plastic
Item Dimensions (LxWxH)	3.08 x 4.76 x 9.45 inches
Country of Origin	China



Image: Visual representation of the flashlight's impressive runtime: up to 60 hours in flashlight mode and 120 hours in lantern mode.

WARRANTY AND SUPPORT

Warranty Information

Based on available product information, the warranty for this product is stated as "Not applicable." Please refer to the product packaging or contact Energizer directly for any specific warranty details or limitations.

Customer Support

For further assistance, technical support, or inquiries regarding your Energizer WeatherReady Floating Handheld LED Light, please visit the official Energizer website or contact their customer service department. Contact information can typically be found on the product packaging or their official website.

