

BEYBLADE E0955

Beyblade E0955 SwitchStrike Genesis Valtryek V3 Instruction Manual

Model: E0955

[Included](#) [Assembly](#) [Operation](#) [Features](#) [What's
Maintenance
Information](#) [Troubleshooting](#) [Specifications](#) [Safety](#)

1. WHAT'S INCLUDED

Your Beyblade Burst SwitchStrike Genesis Valtryek V3 package contains the following components:

- **1x Beyblade Burst SwitchStrike Right-Spin Top:** This top consists of three main parts:
 - Energy Layer: Genesis Valtryek V3
 - Two-Part Forge Disc: DR26 (also known as 6V)
 - Performance Tip: TA11 (also known as Reboot)
- **1x Beyblade Burst SwitchStrike Right/Left-Spin Launcher:** Used to launch the Beyblade top into battle.
- **Instructions:** This manual provides detailed guidance for assembly, operation, and care.



Image 1.1: Contents of the Beyblade Burst SwitchStrike Genesis Valtryek V3 package, including the top and launcher.

2. ASSEMBLY INSTRUCTIONS

To assemble your Beyblade Burst SwitchStrike top, follow these steps:

1. **Attach the Forge Disc:** Align the Two-Part Forge Disc (DR26) with the Energy Layer (Genesis Valtryek V3). Twist until it locks securely into place.
2. **Attach the Performance Tip:** Connect the Performance Tip (TA11) to the assembled Forge Disc and Energy Layer. Twist until it clicks, ensuring a firm connection.
3. **Prepare the Launcher:** Ensure the right/left-spin launcher is set to the desired spin direction (right-spin for Genesis Valtryek V3).
4. **Attach Top to Launcher:** Insert the assembled Beyblade top into the launcher. Twist the top clockwise until it locks into the launcher mechanism.

Note: The Two-Part Forge Disc is compatible with other Two-Part Forge Discs from the Beyblade Burst series, allowing for customization.

3. OPERATING INSTRUCTIONS

The Beyblade Burst SwitchStrike Genesis Valtryek V3 is designed for use in a Beyblade Burst Beystadium (sold separately).

- 1. Load the Top:** Attach the assembled Beyblade top to the launcher as described in the assembly section.
- 2. Position in Beystadium:** Hold the launcher over the Beyblade Burst Beystadium.
- 3. Launch:** Pull the rip cord firmly to launch the Beyblade top into the Beystadium. The top will spin and engage in battle.
- 4. Winning Conditions:** The first blader to reach 3 points wins the match. Points are awarded for:
 - Knocking an opponent's top out of the ring.
 - An opponent's top stopping spinning.
 - An opponent's top "bursting" into pieces (burst rates vary).

Important: Only use Beyblade Burst tops with a Beyblade Burst Beystadium. Using other surfaces may damage the top or cause injury.

4. SWITCHSTRIKE FEATURES

The Genesis Valtryek V3 top incorporates SwitchStrike features that can activate during battle, altering its performance:

- **In-Battle Tip Change:** The Performance Tip (TA11) may change its configuration during battle, affecting the top's movement and attack patterns. *Note: SwitchStrike feature activations are rare.*
- **Spring Blade Attack:** The Energy Layer features spring-loaded blades that can extend during impact, delivering powerful attacks.

These features introduce dynamic elements to battles, allowing for varied strategies.

5. CARE AND MAINTENANCE

To ensure the longevity and optimal performance of your Beyblade Burst SwitchStrike top and launcher, follow these guidelines:

- **Cleaning:** Wipe components with a dry, soft cloth. Do not use water or cleaning solutions, as this may damage the plastic or internal mechanisms.
- **Storage:** Store the Beyblade top and launcher in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Regularly inspect all parts for signs of wear or damage. Replace any broken or severely worn components to maintain safe operation.
- **Avoid Force:** Do not apply excessive force when assembling or disassembling the top, as this can cause breakage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Top does not spin or spins weakly.	• Top not properly attached to launcher. • Rip cord not pulled firmly enough. • Launcher mechanism worn or damaged.	• Ensure top is securely locked onto the launcher. • Pull the rip cord with a quick, strong motion. • Inspect launcher for damage; replace if necessary.
Top "bursts" too frequently.	• Components not fully locked. • Aggressive launch technique. • Normal variation (burst rates vary).	• Verify all three parts of the top are securely assembled. • Adjust launch strength. • This is an intended feature of Beyblade Burst.
SwitchStrike features not activating.	• Feature activations are rare. • Insufficient impact during battle.	• Continue playing; activations are not guaranteed in every battle. • Ensure battles occur in a Beyblade Burst Beystadium for optimal engagement.

7. PRODUCT SPECIFICATIONS

- **Model Name:** Genesis Valtryek V3
- **Model Number:** E0955
- **Brand:** BEYBLADE (by Hasbro)
- **Components:** Energy Layer (Genesis Valtryek V3), Two-Part Forge Disc (DR26/6V), Performance Tip (TA11/Reboot), Right/Left-Spin Launcher
- **Spin Direction:** Right-spin (for Genesis Valtryek V3 top)
- **Special Features:** SwitchStrike (in-battle tip change, spring blade attack)
- **Material:** Plastic
- **Recommended Age:** 8 years and up
- **Dimensions (Item):** Approximately 38 x 152 x 203 mm (1.5 x 6 x 8 inches)
- **Item Weight:** 40 grams
- **UPC:** 630509815654, 630509631575

8. SAFETY INFORMATION

Please read and adhere to the following safety precautions:

- **Choking Hazard:** Small parts. Not for children under 3 years.
- **Eye Protection:** Always use a Beyblade Burst Beystadium for battles. Do not launch tops near faces or eyes.
- **Supervision:** Adult supervision is recommended during play.
- **Intended Use:** This product is designed for recreational play as described in this manual. Do not modify the product or use it for purposes other than its intended use.
- **Damage:** Discontinue use if any part of the Beyblade top or launcher becomes damaged.

9. WARRANTY AND SUPPORT

For information regarding warranty, replacement parts, or customer support, please refer to the official Hasbro website or contact their customer service department. Contact details are typically found on the product packaging or the manufacturer's official website.

Manufacturer: Hasbro

