



Manuals.plus /

› Mainstay /

› Mainstays 7.5-inch Spotlight Accent Lamp Instruction Manual

## Mainstay 8542000998

# Mainstays 7.5-inch Spotlight Accent Lamp Instruction Manual

Model: 8542000998

## INTRODUCTION

---

This manual provides essential instructions for the safe and efficient use of your Mainstays 7.5-inch Spotlight Accent Lamp. Please read this manual thoroughly before installation and operation, and retain it for future reference.

## SAFETY INFORMATION

---

**WARNING: To reduce the risk of fire, electric shock, or injury to persons, please observe the following safety precautions:**

- Ensure the power source matches the lamp's voltage (120 Volts).
- Do not use this lamp with a dimmer switch as it is not dimmable.
- Always unplug the lamp from the electrical outlet before cleaning or changing the bulb.
- Do not operate the lamp with a damaged cord or plug.
- Avoid placing the lamp in wet or damp locations, as it is not water resistant.
- Use only E26 Medium base incandescent bulbs with a maximum wattage of 60 watts.
- Keep the lamp away from flammable materials.
- This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

## PACKAGE CONTENTS

---

Verify that all components are present before beginning assembly.

- Spotlight Accent Lamp (x2)

- Remote Control (x1)
- Glass Shade (x2)



Image: Mainstays 7.5-inch Spotlight Accent Lamp, showing the lamp unit, remote control, and glass shade. The lamp features a black finish and a compact design.

## SETUP INSTRUCTIONS

1. **Unpack Components:** Carefully remove all items from the packaging. Inspect for any damage.
2. **Install Bulb:** Ensure the lamp is unplugged. Gently screw an E26 Medium base incandescent bulb (max 60 watts, not included) into the lamp socket. Do not overtighten.
3. **Attach Glass Shade:** Carefully place the glass shade over the bulb and secure it according to the lamp's design.
4. **Position Lamp:** Place the lamp on a stable, flat surface. The lamp is designed for floor mount or can be positioned on a shelf. Ensure the cord is not pinched or in a high-traffic area.
5. **Connect to Power:** Plug the lamp's power cord into a standard 120V electrical outlet.

## OPERATING INSTRUCTIONS

The Mainstays Spotlight Accent Lamp is operated via the included remote control.

1. **Power On/Off:** Point the remote control towards the lamp and press the "ON" button to turn the lamp on. Press the "OFF" button to turn it off.
2. **Remote Control Battery:** The remote control requires batteries (not included). Refer to the remote's battery compartment for correct battery type and installation.
3. **Light Direction:** The spotlight head can be adjusted to direct light as desired. Gently pivot the lamp head to achieve the desired accent lighting.

## MAINTENANCE

- **Cleaning:** Disconnect the lamp from the power supply before cleaning. Wipe the lamp with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Bulb Replacement:** Ensure the lamp is unplugged and cool before attempting to replace the bulb. Unscrew the old bulb and replace it with a new E26 Medium base incandescent bulb (max 60 watts).
- **Storage:** If storing the lamp, ensure it is clean, dry, and unplugged. Store in a cool, dry place.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	Lamp is unplugged. Bulb is loose or burnt out. Remote control batteries are dead or incorrectly inserted. Power outlet is not functioning.	Ensure lamp is securely plugged into a working outlet. Tighten or replace the bulb. Replace remote control batteries, ensuring correct polarity. Test the outlet with another appliance.
Remote control not working.	Batteries are dead or incorrectly inserted. Obstruction between remote and lamp. Remote is too far from the lamp.	Replace batteries, check polarity. Remove any obstructions. Move closer to the lamp.

## SPECIFICATIONS

- **Brand:** Mainstay
- **Model Number:** 8542000998
- **Product Dimensions:** 4.13 x 5.43 x 7.55 inches
- **Item Weight:** 2.6 pounds
- **Color:** Black
- **Material:** ALUMINNUM (body), Glass (shade)
- **Power Source:** Corded Electric
- **Voltage:** 120 Volts
- **Wattage:** 60 watts (max)
- **Bulb Base:** E26 Medium
- **Light Source Type:** Incandescent

- **Control Method:** Remote Control
- **Special Feature:** Not Dimmable
- **Indoor/Outdoor Usage:** Indoor
- **Water Resistance Level:** Not Water Resistant
- **Assembly Required:** No

## WARRANTY AND SUPPORT

---

This product is covered by a limited manufacturer's warranty. For specific warranty details, please refer to the documentation included with your purchase or contact Mainstay customer support. Keep your purchase receipt for warranty claims.

For technical assistance or support, please contact Mainstay customer service. Contact information can typically be found on the product packaging or the official Mainstay website.