

[manuals.plus](#) /› [Ipega](#) /› [Ipega PG-9076 Bluetooth Gamepad User Manual](#)

Ipega PG-9076

Ipega PG-9076 Bluetooth Gamepad User Manual

Model: PG-9076 | Brand: Ipega

INTRODUCTION

Welcome to the user manual for your Ipega PG-9076 Bluetooth Gamepad. This versatile wireless controller is designed to enhance your gaming experience across multiple platforms, including Android devices, PCs, and PlayStation 3 consoles.

Key Features

- Bluetooth Connection
- Compatible with Android and PC
- Constructed from durable ABS material
- Built-in rechargeable battery
- Color: Black



The Ipega PG-9076 Bluetooth Gamepad, shown here in its retail packaging, features a telescopic stand to securely hold your smartphone, transforming it into a portable gaming console. The packaging highlights its compatibility with Android, iOS (without jailbreak), PC, and PS3.

SETUP GUIDE

Charging the Gamepad

Before initial use, fully charge the gamepad. Connect the gamepad to a USB power source (e.g., computer USB port, USB wall adapter) using the provided USB cable. The charging indicator light will illuminate. A full charge takes approximately 2 hours.

Pairing with Devices

The PG-9076 supports various connection modes. Ensure the gamepad is sufficiently charged before attempting to pair.

- Android Mode:** Press and hold the 'X' button + 'HOME' button simultaneously until the indicator light flashes rapidly. Search for "PG-9076" in your Android device's Bluetooth settings and connect.
- PC Mode (Bluetooth):** Press and hold the 'LB' button + 'HOME' button simultaneously until the indicator light flashes rapidly. Search for "PG-9076" in your PC's Bluetooth settings and connect.
- PC Mode (2.4GHz Wireless):** Insert the 2.4GHz wireless dongle (if included) into your PC's USB port. The gamepad should automatically connect.
- PS3 Mode:** Connect the gamepad to the PS3 via USB cable. It should be recognized automatically.



This image displays the Ipega PG-9076 Bluetooth Gamepad alongside its USB charging cable and the included user manual, which provides detailed instructions for various connection modes and button functions.

OPERATING INSTRUCTIONS

Basic Controls

The gamepad features standard gaming controls including dual analog sticks, a D-pad, action buttons (A, B, X, Y), shoulder buttons (L1, R1, L2, R2), and function buttons (HOME, SELECT, START, TURBO, CLEAR). Familiarize yourself with the button layout for optimal gameplay.

Game Compatibility

While the PG-9076 is compatible with a wide range of Android and PC games, some applications may require manual button mapping or may not fully support external controllers. Refer to individual game settings for controller configuration options.

Battery Life

The built-in 380mAh battery provides approximately 10 hours of continuous gameplay on a single charge. Battery life may vary based on usage and game intensity.

MAINTENANCE

Cleaning

Use a soft, dry cloth to clean the gamepad. Avoid using abrasive cleaners, solvents, or harsh chemicals, which may damage the surface or internal components.

Storage

Store the gamepad in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. When storing for extended periods, ensure the battery is partially charged.

Battery Care

To prolong battery life, avoid fully discharging the gamepad frequently. Charge it regularly, even if not in use for extended periods (e.g., once every 3 months).

TROUBLESHOOTING

Problem	Solution
Gamepad not connecting/pairing.	Ensure the gamepad is charged. Re-attempt pairing by holding the correct mode button combination. Turn off and on Bluetooth on your device.
Buttons not responding correctly.	Some games may require manual configuration. Check in-game controller settings. Ensure the gamepad is in the correct operating mode for your device.
Input lag/delay.	Ensure your device's Bluetooth connection is stable and not interfered with by other wireless signals. For PC, try using the 2.4GHz wireless dongle for a potentially more stable connection.
Analog sticks or D-pad imprecise.	This can be a characteristic of some units. For critical gaming, consider recalibrating if your system allows, or adjust in-game sensitivity settings.

SPECIFICATIONS

Brand	Ipega
Model	PG-9076
Connectivity	Bluetooth, 2.4GHz Wireless
Compatible Devices	Android, PC, PlayStation 3
Material	ABS
Battery Capacity	380mAh
Battery Voltage	3.7V
Charging Time	Approx. 2 hours
Playtime	Approx. 10 hours
Number of Buttons	17
Product Weight	200g
Package Dimensions	17.9 x 16.3 x 6.7 cm

WARRANTY AND SUPPORT

Warranty Information

For specific warranty terms and conditions applicable to your Ipega PG-9076 Gamepad, please refer to the documentation provided at the time of purchase or contact your retailer directly. Warranty coverage may vary based on region and point of sale.

Customer Support

For technical assistance, troubleshooting beyond this manual, or further inquiries, please contact the seller or manufacturer directly through their official support channels. Have your product model and purchase

details ready when contacting support.

© 2024 Ipega. All rights reserved.