

Amazon Basics KT-3680

Amazon Basics 2 Slice Toaster User Manual

Model: KT-3680

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.
- Oversized foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Always unplug the toaster after use.
- The crumb tray must be in place before operating the toaster.

PRODUCT OVERVIEW

The Amazon Basics 2 Slice Toaster is designed for efficient and convenient toasting of various bread types. It features extra-wide slots and multiple browning settings.



Front view of the Amazon Basics 2 Slice Toaster with two slices of golden-brown toast in the slots.

Designed For Convenience

Extra-wide slots for toasting



Detailed diagram illustrating the dimensions of the toaster, including the extra-wide slots (1.25 inches wide, 5.25 inches long) and the 37-inch power cord with wrap feature.

Components:

- **Toasting Slots:** Two extra-wide slots designed to accommodate various bread types, including bagels and thicker slices.
- **Toasting Lever:** Used to lower bread into the toaster and initiate the toasting cycle. Features an extra-lift function for easy removal of smaller items.
- **Browning Control Dial:** Offers 6 shade settings, from light to dark, to customize toast preferences.
- **Cancel Button:** Immediately stops the toasting cycle.
- **Frozen Button:** Activates a defrosting cycle before toasting frozen bread.

- **Bagel Button:** Toasts only the cut side of bagels for a crispy interior and soft exterior.
- **Removable Crumb Tray:** Located at the back for easy cleaning of crumbs.
- **Power Cord:** 37-inch cord with integrated cord wrap for convenient storage.

Easy, Clean, & Versatile

Buttons light up to show settings



Detailed view of the toaster's control panel, highlighting the Cancel, Frozen, and Bagel buttons, along with the browning control dial and the removable crumb tray location.

SETUP

1. **Unpack:** Carefully remove the toaster and all packaging materials. Retain packaging for future storage or transport.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials such as curtains or walls. Ensure adequate ventilation around the toaster.
3. **First Use:** Before first use, plug the toaster into a standard 120V AC electrical outlet. Set the browning control to a medium setting (e.g., 3 or 4) and operate the toaster without bread. This will burn off any manufacturing residues and odors. A slight smoke or odor is normal during this initial operation. Allow the toaster to cool completely.

OPERATING INSTRUCTIONS

Basic Toasting:

1. Insert one or two slices of bread into the toasting slots. Ensure bread is centered and not overlapping.
2. Select your desired browning level using the browning control dial (settings 1-6). Setting 1 is the lightest, and 6 is the darkest.
3. Press the toasting lever down until it locks into place. The toasting cycle will begin automatically.
4. When the toasting cycle is complete, the toast will automatically pop up. Use the extra-lift lever feature to raise smaller items higher for easier removal.

Customized Toasting

Perfect toast, your way, instantly



Image demonstrating the browning control dial with 6 shade settings for customized toasting.

Special Functions:

- **Cancel Button:** Press the **CANCEL** button at any time to stop the toasting cycle and pop up the bread. The button will illuminate when selected.
- **Frozen Button:** Insert frozen bread and press the **FROZEN** button after lowering the lever. This function adds extra time to defrost the bread before toasting. The button will illuminate when selected.
- **Bagel Button:** Insert bagels with the cut side facing inwards towards the center of the toaster. Press the **BAGEL** button after lowering the lever. This function toasts only the cut side of the bagel. The button will illuminate when selected.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. **Unplug and Cool:** Always unplug the toaster from the electrical outlet and allow it to cool completely before cleaning.
2. **Empty Crumb Tray:** Pull out the removable crumb tray located at the back of the toaster. Discard crumbs and wipe the tray clean with a damp cloth. Ensure the tray is completely dry before reinserting it into the toaster. The crumb tray must always be in place during operation.
3. **Clean Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners, scouring pads, or harsh chemicals, as they may damage the finish.
4. **Internal Cleaning:** Do not insert any objects into the toasting slots for cleaning. If food becomes lodged, unplug the toaster and carefully invert it to shake out the food.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet not working; toasting lever not fully depressed.	Ensure toaster is securely plugged into a working outlet. Press the toasting lever down until it locks.
Toast is too light or too dark.	Browning control setting is incorrect.	Adjust the browning control dial to a higher setting for darker toast or a lower setting for lighter toast.
Smoke coming from toaster.	Crumbs accumulated in crumb tray; food lodged in slots; oversized items.	Unplug toaster and allow to cool. Empty and clean the crumb tray. Carefully remove any lodged food. Do not insert oversized items.
Toast does not pop up.	Toasting lever not fully engaged; mechanical issue.	Ensure the lever is fully depressed and locked. If issue persists, unplug and contact customer support.

SPECIFICATIONS

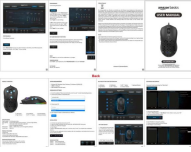 

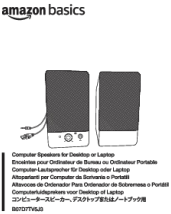 
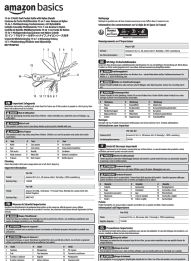 
Brand	Amazon Basics
Model Number	KT-3680
Power	900 Watts
Voltage	120 Volts
Number of Slices	2
Browning Settings	6
Product Dimensions (LxWxH)	10.98" x 6.5" x 7.48" (27.9 cm x 16.5 cm x 19 cm)
Item Weight	2.52 Pounds (1.14 kg)
Power Cord Length	37 inches (94 cm)
UPC	841710170139

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Amazon Basics website or the warranty document provided with your purchase. A PDF version of the warranty is available [here](#).

For further assistance, please visit the [Amazon Basics Store](#) or contact Amazon customer service.

Related Documents - KT-3680

	<p>Amazon Basics AB23AGM128D1 Gaming Mouse User Manual</p> <p>User manual for the Amazon Basics AB23AGM128D1 Gaming Mouse, detailing setup, performance settings, software customization, button mapping, macro functions, and responsible e-waste disposal.</p>
	<p>Amazon Basics Portable Air Conditioner Dehumidifier Manual - Safety, Operation, Installation</p> <p>User manual for Amazon Basics portable air conditioner and dehumidifier (models B07ZHQDF7B, B07ZHQFNX8, B07ZHQTBGs, B07ZHQV1GT). Includes safety guidelines, product features, operating instructions, and installation steps for various window types. Available in multiple languages.</p>
	<p>Amazon Basics Wired Gaming Mouse AB-MO2 User Manual and Setup Guide</p> <p>Comprehensive guide for setting up and using the Amazon Basics Wired Gaming Mouse AB-MO2. Includes installation instructions, button explanations, customization options for DPI and backlighting, cleaning and storage advice, specifications, and e-waste recycling information.</p>
	<p>Amazon Basics B07D7TV5J3 Computer Speakers User Manual</p> <p>This document provides important safety information, connection and operation instructions, cleaning and maintenance guidelines, and technical specifications for the Amazon Basics B07D7TV5J3 computer speakers.</p>
	<p>Amazon Basics 15-in-1 Multi-Tool Pocket Knife: Features, Safety, and Care</p> <p>Discover the Amazon Basics 15-in-1 Multi-Tool Pocket Knife. This guide covers its features, essential safety precautions, cleaning instructions, and importer details. Includes a list of all 15 tools.</p>
	<p>Amazon Basics USB-Powered Computer Speakers Quick Start Guide</p> <p>This quick start guide provides essential setup, operation, and safety information for Amazon Basics USB-Powered Computer Speakers with Dynamic Sound. Covers models B07DDK3W5D, B07DDGBL5T, B07DDGBJ9N, and B07DDDTWDP.</p>