

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TOSHIBA](#) /

› [TOSHIBA AC25CEW-SS 25L Large 6-Slice Convection Toaster Oven Instruction Manual](#)

## TOSHIBA AC25CEW-SS

# TOSHIBA AC25CEW-SS 25L Large 6-Slice Convection Toaster Oven Instruction Manual

Model: AC25CEW-SS | Brand: TOSHIBA

[Overview](#) [Safeguards](#) [Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

## 1. PRODUCT OVERVIEW

The TOSHIBA AC25CEW-SS 25L Large 6-Slice Convection Toaster Oven is a versatile countertop appliance designed for a variety of cooking tasks. Featuring 10 distinct functions and a powerful 1500W output, it offers efficient and even cooking for family meals. Its stainless steel design complements modern kitchens, and the intuitive digital display ensures ease of use.



Image 1: The TOSHIBA AC25CEW-SS 25L Large 6-Slice Convection Toaster Oven in Stainless Steel.

## 2. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, drapes, walls, and the

like, when in operation.

- Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

### 3. SETUP AND FIRST USE

#### 3.1 Unpacking

Carefully remove the toaster oven and all accessories from the packaging. Ensure all components listed in the 'Included Components' section are present. Dispose of packaging materials responsibly.

#### 3.2 Placement

Place the toaster oven on a stable, heat-resistant, and level surface. Ensure adequate clearance from walls, cabinets, and other appliances for proper ventilation. The recommended minimum clearances are approximately 4 inches on the sides and back, and 8 inches above the unit.



Image 2: Toaster oven dimensions and recommended clearances for safe placement.

### 3.3 Initial Cleaning

Before first use, wipe the exterior of the oven with a damp cloth. Wash all removable accessories (baking pan, wire rack, crumb tray, rotisserie kit) in warm, soapy water. Rinse thoroughly and dry completely. Do not immerse the main unit in water.

## 4. OPERATING INSTRUCTIONS

### 4.1 Control Panel Overview

The toaster oven features an intuitive digital display and three control knobs for easy operation.



Image 3: Close-up of the digital display and control knobs.

- **Function Knob:** Rotate to select one of the 10 cooking functions.
- **Temperature Knob:** Rotate to adjust the cooking temperature (150°F–450°F).
- **Time Knob:** Rotate to set the cooking time (up to 2 hours).

- **Start/Cancel Button:** Press to start or cancel a cooking cycle.
- **Light Button:** Activates the interior oven light.
- **Convection Button:** Toggles the convection fan on/off for applicable functions.
- **°C/°F Button:** Switches temperature display between Celsius and Fahrenheit.

## 4.2 Cooking Functions (10-in-1 Versatility)

The oven offers a wide range of cooking options:



Image 4: Visual representation of various cooking presets available on the toaster oven.

- **Toast:** For perfectly browned bread and bagels.
- **Bake:** Ideal for cakes, casseroles, and other baked goods.
- **Broil:** For grilling and browning the top of dishes.
- **Pizza:** Optimized setting for cooking pizzas up to 12 inches.
- **Cookies:** For baking batches of cookies evenly.
- **Defrost:** Gently thaws frozen foods.
- **Reheat:** Warms up leftovers without drying them out.
- **Rotisserie:** For roasting whole chickens or other meats using the rotisserie kit.
- **Keep Warm:** Maintains food at a serving temperature.
- **Convection:** Utilizes a fan to circulate hot air for faster and more even cooking.

## 4.3 Rack Positions and Capacity

The oven features adjustable rack positions to accommodate various food sizes and cooking methods. Refer to the internal markings for recommended rack levels for specific functions.

# EXTRA-LARGE CAPACITY



Image 5: Illustrates the extra-large capacity, fitting up to 6 slices of bread, a 12-inch pizza, or a 4-pound chicken.

- **Upper Rack:** Ideal for broiling, toasting, and quick cooking.
- **Middle Rack:** Suitable for most baking and roasting tasks.
- **Lower Rack:** Best for larger items or slow roasting.

## 4.4 Using the Rotisserie Function

The rotisserie function allows for even roasting of poultry or other meats. The included rotisserie kit consists of a spit, forks, and a lifter.

1. Securely attach the food (e.g., a whole chicken up to 4 pounds) onto the rotisserie spit using the forks.
2. Insert the rotisserie spit into the designated slots inside the oven.
3. Select the 'Rotisserie' function using the Function Knob.
4. Adjust temperature and time as needed.
5. Press the Start/Cancel button to begin cooking.
6. Use the rotisserie lifter to safely remove the hot food and spit after cooking.

## 5. CARE AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your toaster oven.

### 5.1 Cleaning the Interior

Always unplug the oven and allow it to cool completely before cleaning. The interior features a non-stick coating for easier cleaning.

- Wipe the interior walls with a damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads that could damage the non-stick surface.
- For stubborn stains, a paste of baking soda and water can be applied, left for a few minutes, and then wiped clean.

### 5.2 Cleaning Accessories

All included accessories are designed for easy cleaning.



Image 6: Baking pan being placed in a dishwasher.



Image 7: Hand removing the crumb tray for cleaning.



Image 8: Hand cleaning a wire rack under running water.

- **Crumb Tray:** The removable crumb tray should be emptied and cleaned regularly. It can be washed in warm, soapy water or placed in the dishwasher.
- **Baking Pan, Wire Rack, Rotisserie Kit:** These accessories are dishwasher safe. For manual cleaning, use warm, soapy water and a non-abrasive sponge.

### 5.3 Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as they may scratch the stainless steel finish.

## 6. TROUBLESHOOTING

If you encounter any issues with your TOSHIBA AC25CEW-SS toaster oven, please refer to the following common troubleshooting tips:

- **Appliance not turning on:** Ensure the power cord is securely plugged into a working electrical outlet. Check your household circuit breaker.
- **Food not cooking evenly:** Ensure the correct rack position is used for the selected function. For convection cooking, ensure the convection fan is active. Avoid overcrowding the oven.
- **Excessive smoke:** This may be due to food residue or grease buildup. Unplug the oven, allow it to cool, and clean the interior and accessories thoroughly.
- **Controls not responding:** Unplug the appliance for a few minutes, then plug it back in to reset the controls.

If problems persist, please contact customer support.

## 7. PRODUCT SPECIFICATIONS

| Feature            | Detail                   |
|--------------------|--------------------------|
| Brand              | TOSHIBA                  |
| Model Number       | AC25CEW-SS               |
| Colour             | Stainless Steel          |
| Product Dimensions | 48.21 x 39.62 x 27.41 cm |
| Capacity           | 25 Liters                |

|                     |  |
|---------------------|--|
| Power/Wattage       | 1500 watts   |
| Material            | Stainless Steel  |
| Auto shut-off       | Yes  |
| Control Type        | Knob   |
| Door Style          | Dropdown Door  |
| Item Weight         | 7.35 kg  |
| Included Components | 1 toaster oven, 1 baking pan, 2 racks, 1 crumb tray, 1 manual instruction book |

## 8. WARRANTY & SUPPORT

---

The TOSHIBA AC25CEW-SS Convection Toaster Oven comes with a 1-Year Warranty. For any product issues, technical assistance, or warranty claims, please contact TOSHIBA Customer Support. Lifetime customer support is provided to ensure your satisfaction.