

WT 15 Inch Wall Clock

WT 15 Inch Wall Clock Instruction Manual

Model: 15 Inch Wall Clock

1. INTRODUCTION

Thank you for choosing the WT 15 Inch Wall Clock. This clock is designed for clear visibility, featuring large, easy-to-read numbers, making it ideal for individuals with low vision or for use in large rooms and classrooms. This manual provides essential information for the proper setup, operation, and maintenance of your new wall clock.

2. PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- WT 15 Inch Wall Clock Unit
- Instruction Manual (this document)

Note: One AA battery is required for operation and is not included in the package.

3. PRODUCT FEATURES

- Ideal for individuals with poor eyesight.
- Jumbo 2-inch high numbers for easy viewing.
- Crisp white face for maximum contrast.
- Bold, black hour and minute hands with an orange second hand.
- Face protected by a durable plastic lens.
- Durable black plastic frame.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Insert one (1) AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

3. Close the battery compartment cover securely.

Important: Use a fresh, high-quality AA battery for optimal performance. Replace the battery annually or when the clock begins to lose time.

4.2 Setting the Time

1. Locate the time setting knob on the back of the clock, usually a small wheel or dial.
2. Gently turn the knob in either direction to move the hour and minute hands to the correct time.
3. Ensure the hands are not obstructed and move freely.

4.3 Mounting the Clock

The WT 15 Inch Wall Clock is designed for wall mounting. Choose a suitable location that is visible and free from excessive moisture or direct sunlight.

1. Identify the hanging slot or hook on the back of the clock.
2. Securely install a nail or screw into your desired wall location. Ensure the nail/screw is strong enough to support the clock's weight.
3. Carefully hang the clock onto the nail or screw, ensuring it is level and stable.



Image 1: The WT 15 Inch Wall Clock, featuring a black frame, a white dial with bold black numbers, and black hour/minute hands with an orange second hand. The clock is round and designed for clear visibility.

5. OPERATION

Once the battery is installed and the time is set, the WT 15 Inch Wall Clock will begin to operate automatically. The second hand will move continuously, and the hour and minute hands will indicate the current time.

- The clock operates silently, without a ticking sound.
- No further adjustments are typically needed unless the battery is replaced or time changes (e.g., Daylight Saving Time).

6. MAINTENANCE

- **Cleaning:** To clean the clock, gently wipe the frame and plastic lens with a soft, dry, or slightly damp cloth. Avoid using abrasive cleaners or solvents, as these may damage the finish or lens.

- **Battery Replacement:** Replace the AA battery once a year or immediately if the clock starts to run slow or stops.
- **Storage:** If storing the clock for an extended period, remove the battery to prevent leakage and potential damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock is not running or stops intermittently.	Dead or weak battery. Incorrect battery installation.	Replace with a new AA battery. Ensure the battery is inserted with correct polarity (+/-).
Clock runs too fast or too slow.	Weak battery. Environmental factors (extreme temperature).	Replace with a new AA battery. Ensure the clock is placed in a stable room temperature environment.
Hands are stuck or not moving smoothly.	Obstruction or damage to the clock mechanism.	Gently check if the hands are bent or touching each other or the clock face. If so, carefully adjust them. If the issue persists, contact customer support.

8. SPECIFICATIONS

Brand	WT
Model	15 Inch Wall Clock
Color	Black Frame With White Face and Black Numbers
Display Type	Analog
Special Feature	Low Vision Aid
Product Dimensions	15"W x 2"H
Power Source	Battery Powered (1 AA battery required, not included)
Indoor/Outdoor Usage	Indoor
Material	Plastic
Mounting Type	Wall Mount
Manufacturer	TrustedWellness
UPC	852520006174
ASIN	B072Q4R5Z7

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer's return policy or contact the manufacturer, TrustedWellness, directly. Keep your purchase receipt as proof of purchase.

For further assistance, please visit the product page on Amazon or contact your point of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question