

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Well](#) /

› [Well MB07 Airsoft Sniper Rifle User Manual](#)

## Well MB07

# Well MB07 Airsoft Sniper Rifle User Manual

Model: MB07

## INTRODUCTION

This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your Well MB07 Airsoft Sniper Rifle. Please read this manual thoroughly before using the product.



Figure 1: Well MB07 Airsoft Sniper Rifle. This image displays the full length of the black airsoft sniper rifle, highlighting its sleek design and the bolt action mechanism. The orange tip of the barrel is visible on the left.

## SAFETY INFORMATION

**WARNING:** Airsoft rifles are not toys. Misuse may result in serious injury, including eye injury. Always wear appropriate eye protection when operating or near an airsoft rifle. Always treat an airsoft rifle as if it were loaded. Keep fingers off the trigger until ready to fire. Do not point at anything you do not intend to shoot. Keep out of reach of children.

- Always use appropriate eye protection (e.g., ANSI Z87.1 rated goggles).
- Never aim at people or animals.
- Ensure the safety mechanism is engaged when the rifle is not in use.
- Only use 6mm plastic BBs designed for airsoft rifles.
- Do not modify the rifle in any way that would increase its muzzle velocity beyond legal limits.
- Store the rifle unloaded and in a secure location.

## PACKAGE CONTENTS

Verify that all items are present upon unboxing:

- Well MB07 Airsoft Sniper Rifle (1 unit)
- 30-round Capacity Magazine (1 unit)

- Speed Loader (if included, check packaging)
- Cleaning Rod (if included, check packaging)
- User Manual (this document)

## SETUP

---

### 1. Magazine Loading

1. Ensure the rifle is on **SAFE**.
2. Insert the speed loader nozzle into the magazine's BB loading port.
3. Pour 6mm airsoft BBs into the speed loader.
4. Press the plunger on the speed loader to feed BBs into the magazine until it reaches its 30-round capacity. Do not overfill.

### 2. Magazine Insertion

1. Locate the magazine well on the underside of the rifle.
2. Insert the loaded magazine firmly into the magazine well until it clicks into place.
3. Gently tug on the magazine to ensure it is securely seated.

## OPERATING

---

### 1. Cocking the Rifle (Bolt Action)

1. Grasp the bolt handle.
2. Pull the bolt handle upwards to unlock it.
3. Pull the bolt fully rearward until it stops. This action cocks the spring and loads a BB into the chamber.
4. Push the bolt fully forward until it stops.
5. Push the bolt handle downwards to lock it into place. The rifle is now ready to fire.

### 2. Firing

1. Ensure you are wearing eye protection.
2. Aim at a safe target.
3. Move the safety switch from **SAFE** to **FIRE**.
4. Gently squeeze the trigger to fire.

### 3. Adjusting Hop-Up (if applicable)

The Well MB07 may feature an adjustable hop-up system to improve BB trajectory. Consult your rifle's specific design for the hop-up adjustment location, typically a small lever or dial near the barrel or magazine well. Adjust incrementally and test for desired flight path.

## MAINTENANCE

---

### 1. Cleaning the Barrel

1. Ensure the rifle is unloaded and on **SAFE**.
2. Insert a cleaning rod with a small piece of cleaning cloth (or paper towel) through the muzzle end of the barrel.
3. Push the rod through until the cloth exits the hop-up chamber end.

4. Repeat with a fresh piece of cloth until no residue is visible.

## 2. Lubrication

Apply a small amount of silicone-based airsoft lubricant to moving parts such as the bolt assembly and trigger mechanism. Avoid petroleum-based lubricants as they can damage plastic and rubber components.

## 3. Storage

Store the rifle in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure it is unloaded and the safety is engaged before storage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
BBs not firing or rolling out of barrel	<ul style="list-style-type: none"><li>Magazine not inserted correctly</li><li>No BBs in magazine</li><li>Hop-up too high</li><li>Barrel obstruction</li></ul>	<ul style="list-style-type: none"><li>Re-insert magazine firmly</li><li>Load BBs into magazine</li><li>Adjust hop-up down</li><li>Clean barrel</li></ul>
Bolt difficult to cock	<ul style="list-style-type: none"><li>Lack of lubrication</li><li>Debris in bolt assembly</li></ul>	<ul style="list-style-type: none"><li>Apply silicone lubricant to bolt</li><li>Clean bolt assembly</li></ul>
Inconsistent shot accuracy	<ul style="list-style-type: none"><li>Incorrect hop-up setting</li><li>Low quality BBs</li><li>Dirty barrel</li></ul>	<ul style="list-style-type: none"><li>Adjust hop-up</li><li>Use high-quality, polished 6mm BBs</li><li>Clean barrel</li></ul>

## SPECIFICATIONS

Feature	Detail
Operation	Bolt Action (Spring-Piston)
Build Material	Aluminum Outer Barrel / ABS Plastic Body
Firing Modes	Single Shot / Bolt Action
Muzzle Velocity	460 - 480 FPS (with 0.20g BBs)
Magazine Capacity	30 Rounds
Weight	5.5 lbs
Overall Length	45.5 inches (Retracted / Extended)
Barrel Material	Aluminum
UPC	193939102102

## WARRANTY AND SUPPORT

For warranty information or technical support, please contact the retailer or manufacturer directly. Keep your proof of purchase for any warranty claims.

Manufacturer: Well

---

© 2024 Well. All rights reserved.