

[Manuals.plus](#) /

› [GEORGE KOVACS](#) /

› George Kovacs P1301-655-L Coastal Current LED Mini Pendant User Manual

GEORGE KOVACS P1301-655-L

George Kovacs P1301-655-L Coastal Current LED Mini Pendant User Manual

Model: P1301-655-L

INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your George Kovacs P1301-655-L Coastal Current LED Mini Pendant. Please read all instructions carefully before beginning installation and retain this manual for future reference.

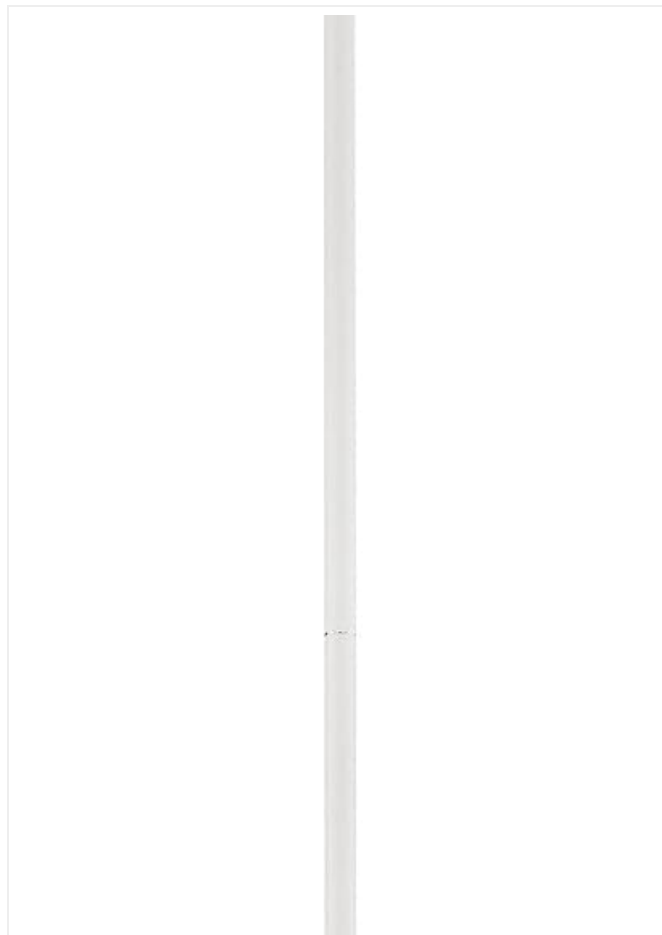




Image: The George Kovacs P1301-655-L Coastal Current LED Mini Pendant in Sand White, showcasing its unique wavy design.



Intertek

Image: Multiple George Kovacs P1301-655-L pendant lights illuminating a modern kitchen island.

SAFETY INFORMATION

WARNING: Risk of electric shock. Disconnect power at the fuse box or circuit breaker before installation or servicing. All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC).

- Consult a qualified electrician if you are unsure about the installation process.
- Ensure the fixture is properly grounded.
- Do not install this fixture in wet locations. It is designed for indoor use only.
- Handle glass components with care to prevent breakage.
- This product is ETL listed, indicating compliance with North American safety standards.



Image: The ETL Listed Intertek logo, signifying that the product meets safety standards.

PACKAGE CONTENTS

Verify that all components are present before beginning installation. If any parts are missing or damaged, contact customer support.

- LED Mini Pendant Fixture (P1301-655-L)
- Mounting Hardware
- Instruction Manual
- P1081-077 (Component as listed in product data)

SETUP (INSTALLATION)

This fixture is designed for semi-flush mount installation. Professional installation is recommended.

1. **Turn Off Power:** Before starting, ensure the power supply to the installation area is turned off at the circuit breaker or fuse box.
2. **Prepare Mounting Surface:** Securely attach the mounting bracket to the ceiling junction box. Ensure the junction box can support the fixture's weight (6.5 lbs).
3. **Adjust Pendant Height:** The pendant's overall height can be adjusted from 20.5 inches to 56.5 inches. Determine the desired hanging length before wiring.
4. **Make Electrical Connections:** Connect the fixture's wires to the corresponding household wires (black to black, white to white, ground to ground) using wire nuts. Ensure all connections are secure.
5. **Secure Canopy:** Carefully push the fixture's canopy up to the ceiling, covering the junction box and mounting bracket. Secure it with the provided screws.

6. **Install Shade/Diffuser:** If the shade or diffuser is separate, carefully attach it according to the specific instructions provided with the fixture.
7. **Restore Power:** Once installation is complete and all connections are secure, restore power at the circuit breaker.



Image: Close-up of the pendant light's canopy, which attaches to the ceiling.

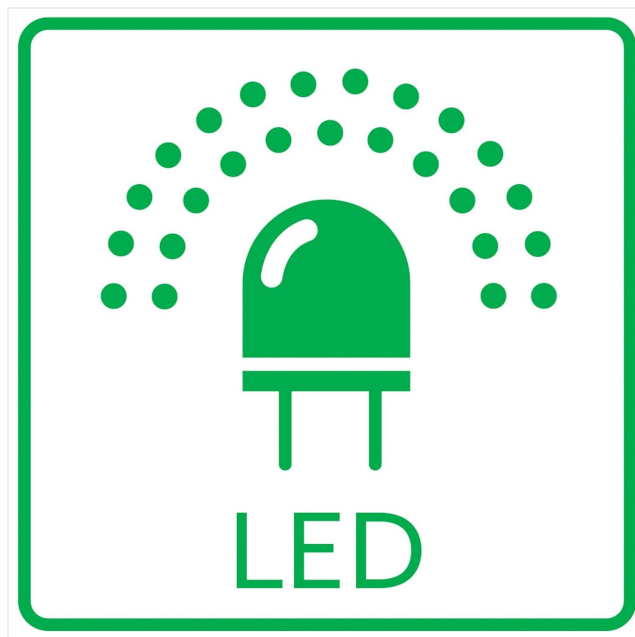


Image: Diagram showing the dimensions of the pendant light, including its 9-inch diameter and adjustable height from 20.5 to 56.5 inches.

OPERATING INSTRUCTIONS

This LED mini pendant is designed for ease of use and energy efficiency.

- **Power On/Off:** Operate the light using a standard wall switch connected to the fixture's circuit.
- **Dimming Function:** This fixture is dimmable. Use a compatible LED dimmer switch (sold separately) for optimal performance and light level control.
- **Remote Control:** The fixture supports remote control operation. Refer to the remote control's specific instructions for pairing and functionality.

MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your pendant light.

- **Cleaning:** Disconnect power before cleaning. Use a soft, dry cloth to wipe the exterior surfaces. For glass components, a mild glass cleaner can be applied to a cloth, then gently wipe the glass. Avoid abrasive cleaners or solvents.
- **Bulb Replacement:** This fixture uses integrated LED components and does not require traditional bulb replacement. If the LED light source fails, contact customer support for assistance.
- **Inspection:** Periodically check all electrical connections and mounting hardware for tightness.

TROUBLESHOOTING

If you experience issues with your pendant light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	• No power to the fixture. • Loose wire connections. • Faulty wall switch.	• Check circuit breaker/fuse. • Verify all wire connections are secure (power off first). • Test the wall switch.
Light flickers or dims unexpectedly.	• Incompatible dimmer switch. • Loose connections.	• Ensure a compatible LED dimmer is used. • Check wire connections (power off first).
Remote control not working.	• Remote battery low or dead. • Remote not paired with fixture.	• Replace remote battery. • Refer to remote control instructions for pairing.

SPECIFICATIONS

General	
Brand	GEORGE KOVACS
Model Number	P1301-655-L
Color	Sand White
Material	Glass
Style	Coastal
Room Type	Bedroom, Dining Room, Entryway, Kitchen, Living Room
Indoor/Outdoor Usage	Indoor
Item Weight	6.5 Pounds
Item Dimensions (L x W x H)	13.5"L x 9"W x 13.5"H

Minimum Overall Height	20.5 inches
Maximum Overall Height	56.5 inches
Electrical & Lighting	
Power Source	Corded Electric
Light Source	LED
Number of Light Sources	1
Voltage	120 Volts
Wattage	16 watts
Brightness	402 lumens
Light Color Temperature	3000K
Color Rendering Index (CRI)	95CRI
Dimmable	Yes
Control Method	Remote
Switch Type	Rocker
Certifications	
Specification Met	ETL

WARRANTY

This George Kovacs P1301-655-L LED Mini Pendant is covered by a **Limited 1-year warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from improper installation, accident, misuse, abuse, or unauthorized modifications. For warranty claims, please retain your proof of purchase and contact customer support.

SUPPORT

For technical assistance, missing parts, or warranty inquiries, please contact George Kovacs customer support. Visit the official George Kovacs website for contact information or refer to your purchase documentation.

Online Resources: [Visit the GEORGE KOVACS Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question