

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KitchenAid](#) /

› [KitchenAid KSMSCA Vegetable Sheet Cutter Attachment Instruction Manual](#)

KitchenAid KSMSCA

KitchenAid KSMSCA Vegetable Sheet Cutter Attachment Instruction Manual

Model: KSMSCA

INTRODUCTION

The KitchenAid Vegetable Sheet Cutter Attachment transforms your KitchenAid Stand Mixer into a versatile tool for creating thin or thick sheets from various fruits and vegetables. This manual provides essential information for safe and effective use, maintenance, and care of your attachment.



*Image: KitchenAid Stand Mixer with the Vegetable Sheet Cutter Attachment in operation, producing thin sheets of zucchini.
Two plates with prepared vegetable sheets are visible.*

PACKAGE CONTENTS

Your KitchenAid KSMSCA Vegetable Sheet Cutter Attachment package includes the following components:

- 1 Thin Blade
- 1 Thick Blade
- 1 Zucchini/Cucumber Adapter
- 1 Food Holder
- 1 Food Skewer
- Main Attachment Body



Image: All components of the KitchenAid Vegetable Sheet Cutter Attachment, including the main body, blades, food holder, and skewer, neatly arranged.



Image: A close-up view of the two interchangeable blades, one for thin sheets and one for thick sheets, included with the attachment.

SETUP AND ASSEMBLY

Follow these steps to properly attach the Vegetable Sheet Cutter to your KitchenAid Stand Mixer:

1. Ensure your KitchenAid Stand Mixer is unplugged and turned off.
2. Locate the power hub on the front of your stand mixer. Unscrew the attachment knob and remove the hub cover.
3. Insert the attachment shaft into the power hub, ensuring the shaft fits securely into the square drive socket.
4. Rotate the attachment slightly back and forth if necessary until it seats properly.

5. Tighten the attachment knob clockwise until the attachment is firmly secured to the mixer.
6. Select either the thin or thick blade and slide it into the designated slot on the attachment body.
7. Attach the food holder and food skewer as needed for your chosen fruit or vegetable.



Image: Front view of the KitchenAid Stand Mixer with the Vegetable Sheet Cutter Attachment securely connected to the power hub.



Attachment sold separately

Image: Side view of the KitchenAid Stand Mixer with the Vegetable Sheet Cutter Attachment, showing its horizontal orientation when attached.



**Attachment sold separately*

Image: Back view of the KitchenAid Stand Mixer with the Vegetable Sheet Cutter Attachment, highlighting the connection point to the power hub.

OPERATING INSTRUCTIONS

The Vegetable Sheet Cutter allows you to create continuous sheets from various fruits and vegetables. Here's how to operate it:

1. Prepare your fruit or vegetable by washing it and trimming the ends to create flat surfaces. For longer items, you may need to cut them into shorter, manageable lengths (e.g., 4-5 inches).
2. Carefully center the fruit or vegetable onto the food skewer. Ensure it is firmly impaled to prevent wobbling during operation.
3. Position a bowl or plate beneath the attachment to collect the vegetable sheets.
4. Turn your KitchenAid Stand Mixer to a low speed (e.g., Speed 2). The attachment will begin to rotate and feed the produce through the blade.
5. As the sheet is produced, gently guide it to prevent tearing or tangling.
6. Continue until the entire fruit or vegetable has been processed, or until you reach the desired amount.
7. Turn off the stand mixer and carefully remove any remaining core or small pieces.



Image: The KitchenAid Stand Mixer with the Vegetable Sheet Cutter Attachment actively producing long, continuous sheets of zucchini on a kitchen counter.

Your browser does not support the video tag.

Video: A short demonstration of the KitchenAid Vegetable Sheet Cutter Attachment in action, showing how it efficiently processes vegetables into sheets.

Your browser does not support the video tag.

Video: An overview of the KitchenAid Vegetable Sheet Cutter Attachment, highlighting its ease of use and the quality of the vegetable sheets produced.

Your browser does not support the video tag.

Video: A detailed look at the KitchenAid Vegetable Sheet Cutter, demonstrating its assembly and how to create various vegetable sheets.

CARE AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your KitchenAid Vegetable Sheet Cutter Attachment:

- **Blades, Adapter, Skewer, and Food Holder:** These components are top-rack dishwasher safe. For best results, rinse them immediately after use to remove any food residue.
- **Main Attachment Body:** The main body of the attachment should be wiped clean with a warm, damp cloth. Do not immerse the main body in water or wash it in a dishwasher.
- Ensure all parts are completely dry before storing.
- Store the attachment and its components in its original storage case for easy access and protection.

TROUBLESHOOTING

If you encounter any issues with your Vegetable Sheet Cutter Attachment, consider the following:

- **Attachment not fitting securely:** Ensure the attachment knob is fully unscrewed and the shaft is correctly

aligned with the square drive socket in the power hub.

- **Vegetable not feeding properly:** Check that the fruit or vegetable is firmly impaled on the skewer and that its ends are trimmed flat. Ensure the mixer speed is set appropriately (low speed is recommended).
- **Sheets are uneven or tearing:** Verify that the blade is correctly installed and free of debris. The consistency and ripeness of the produce can also affect sheet quality.

SPECIFICATIONS

Brand	KitchenAid
Model Number	KSMSCA
Product Dimensions	10.8" L x 7.9" W x 3" H
Material	Stainless Steel
Color	Semi-Gloss Aluminum
Special Feature	Interchangeable Blades
Recommended Uses	Vegetable
Product Care Instructions	Dishwasher Safe (Blades, Adapter, Skewer, Food Holder), Hand Wash Only (Main Body)
Blade Material	Stainless Steel
Item Weight	2.5 Pounds
Operation Mode	Automatic (via Stand Mixer)

WARRANTY INFORMATION

For detailed warranty information regarding your KitchenAid KSMSCA Vegetable Sheet Cutter Attachment, please refer to the warranty card included in your product packaging or visit the official KitchenAid website. Keep your proof of purchase for any warranty claims.

SUPPORT AND SERVICE

Should you require assistance with your KitchenAid KSMSCA Vegetable Sheet Cutter Attachment, please contact KitchenAid Customer Service. Contact details can be found on the official KitchenAid website or in your product documentation. Please have your model number (KSMSCA) and serial number ready when contacting support.