

Samsung SKK-DDX

Samsung SKK-DDX Washer Dryer Stacking Kit Instruction Manual

Model: SKK-DDX

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient installation, operation, and maintenance of your Samsung SKK-DDX Washer Dryer Stacking Kit. Please read this manual thoroughly before use and retain it for future reference.

2. PRODUCT FEATURES

- **Space-Saving Design:** Allows stacking of a Samsung front-load washer and dryer to optimize laundry space.
- **Convenient Loading:** The easy-to-install slide-out rack provides a convenient surface for loading and unloading laundry.
- **Easy Dryer Access:** Storing the dryer above the washer makes its contents more accessible for easier loading and unloading.

3. PACKAGE CONTENTS

The Samsung SKK-DDX Stacking Kit includes the following components:

- Middle frame with extension connector (Stacking Kit Frame)
- Installation hardware (various hooks/brackets, 4 caps for dryer feet)
- Instruction Manual

4. COMPATIBILITY

This stacking kit is designed for use with specific Samsung front-load washers and dryers. Please verify your appliance models before installation.

مناسب لطرازات غسالة سامسونج:

Compatible Samsung washing machines:



WW10T554DAN



WW90TA046AE



WW80TA046AX



WW80TA046AX



WW90T754DBX

Image: Compatible Samsung washing machine models. Models shown include WW10T554DAN, WW90TA046AE, WW80TA046AX, and WW90T754DBX.

مناسب لطرزات مجفف سامسونج:

Compatible Samsung dryers:



Image: Compatible Samsung dryer models. Models shown include DV80T5220AX and DV90T5240AX.

5. SETUP AND INSTALLATION

Proper installation is crucial for safety and performance. It is recommended to have two people for installation due to the weight of the appliances.

5.1 Before You Begin

- Ensure both the washer and dryer are unplugged from the power source.
- Make sure the washer is level and stable.
- Clear the area around the appliances to allow for easy movement.

5.2 Installation Steps

1. **Prepare the Washer:** Refer to your washer's manual for any specific instructions regarding stacking. Some models may require removing screws from the back.
2. **Attach Stacking Kit to Washer:** Secure the stacking kit frame to the top of the washing machine using the provided brackets and hardware. The kit includes different sets of hooks to fit various washing machine types, utilizing existing holes. No new holes should be drilled.
3. **Prepare the Dryer:** Attach the four provided caps to the feet of the dryer. This ensures the dryer sits at the correct height to fit into the stacking kit support.

4. **Lift and Place Dryer:** Carefully lift the dryer and place it onto the stacking kit frame, ensuring it is securely seated.
5. **Secure Dryer (Optional):** The stacking kit may include options to further secure the dryer to the support. Follow the specific instructions in the kit for this step if desired.
6. **Check Stability:** Gently push and pull on the stacked appliances to ensure they are stable and securely connected.

يتيح لك وضع المجفف فوق الغسالة*

Allows to stack a dryer on top of a washing machine*



*Depending on the model, the washing machine may protrude further out than the dryer.

*بحسب الطراز، قد تبرز الغسالة أكثر من المجفف.

Image: Illustration of a dryer stacked on a washing machine using the SKK-DDX kit. Note that the washing machine may protrude further than the dryer depending on the model.

6. OPERATING INSTRUCTIONS (SLIDE-OUT SHELF)

The stacking kit features a convenient slide-out shelf for ease of use.

- **To Extend:** Gently pull the handle on the front of the shelf to extend it. It will lock into place when fully extended.
- **To Retract:** Push the shelf back into the stacking kit until it is fully closed. Ensure it is completely retracted before operating either appliance.
- **Weight Limit:** Do not exceed the maximum weight capacity of 15 kg (33 lbs) on the slide-out shelf.

7. MAINTENANCE

- **Cleaning:** Wipe the stacking kit and slide-out shelf with a soft, damp cloth. Avoid abrasive cleaners.


- **Inspection:** Periodically check all connections and hardware to ensure they remain tight and secure.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stacking kit feels unstable.	Hardware not tightened; washer not level; dryer not seated correctly.	Ensure all screws and brackets are tight. Level the washing machine. Re-seat the dryer firmly on the kit.
Slide-out shelf does not extend/retract smoothly.	Obstruction; dirt in tracks; damaged mechanism.	Check for obstructions. Clean tracks. If damaged, contact Samsung service.
Dryer does not fit properly on the kit.	Incorrect model compatibility; caps not installed on dryer feet.	Verify appliance models against compatibility section. Ensure dryer feet caps are correctly installed.

9. SPECIFICATIONS

- **Brand:** Samsung
- **Model Name:** SKK-DDX
- **Included Components:** Middle frame with extension connector
- **Item Weight:** 5.5 kg (12.1 lbs)
- **Color:** Black (Metallic Gray)
- **Dimensions (Approximate):** 605 mm (Width) x 565 mm (Depth) x 75 mm (Height) - *Note: These dimensions refer to the kit itself, not the stacked appliances.*

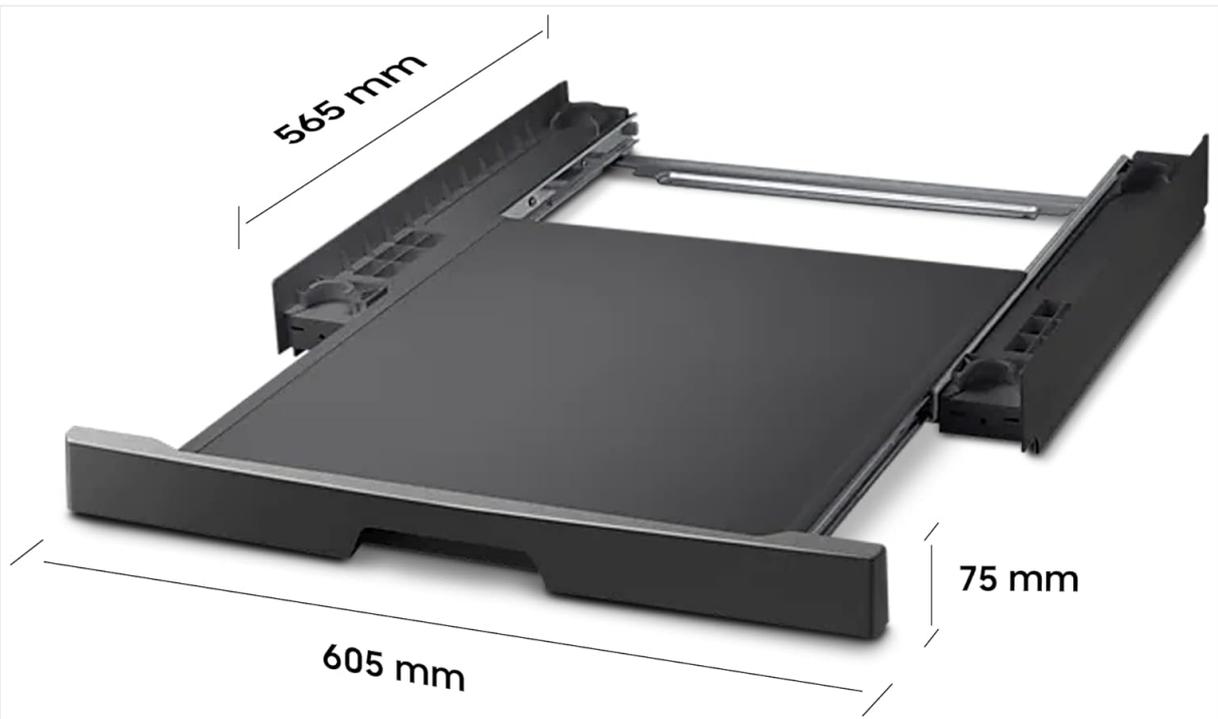

الوزن: 5.5 كجم
Weight: 5.5 kg

Image: Detailed dimensions of the SKK-DDX stacking kit, showing width (605 mm), depth (565 mm), height (75 mm), and weight (5.5 kg).

10. SAFETY INFORMATION

- Always unplug appliances before installation or maintenance.
- Ensure the floor is level and capable of supporting the combined weight of the washer, dryer, and stacking kit.
- Do not allow children to play on or around the stacked appliances.
- If you encounter any difficulties during installation, contact qualified service personnel.

11. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your Samsung washer and dryer, or visit the official Samsung website. You can also contact Samsung customer service directly.

Samsung Support Website: www.samsung.com/support