

[Manuals.plus](#) /

› [AOZBZ](#) /

› AOZBZ Portable Document Scanner User Manual

AOZBZ JMZ161805YTWZ05293

AOZBZ Portable Document Scanner User Manual

Model: JMZ161805YTWZ05293

INTRODUCTION

The AOZBZ Portable Document Scanner is a versatile and compact handheld device designed for quick and efficient scanning of documents, photos, receipts, and more. With its high-speed USB 2.0 connectivity and support for up to 900DPI resolution, it allows you to easily digitize your important files into JPG or PDF formats. This manual provides detailed instructions on setting up, operating, and maintaining your scanner to ensure optimal performance.



The AOZBZ Portable Document Scanner, a compact and efficient tool for digitizing documents on the go.

SETUP

Before using your AOZBZ Portable Document Scanner, please follow these steps to ensure it is properly set up.

1. **Battery Installation:** The scanner requires 2 AA batteries (not included). Open the battery compartment, insert the batteries according to the polarity indicators, and close the compartment securely.
2. **Micro SD Card Insertion:** The scanner supports Micro SD cards up to 32GB. Insert the Micro SD card into the designated slot until it clicks into place. This card will store your scanned images.



Visual guide showing the steps for setting up the scanner, including battery and Micro SD card installation, and connecting to a computer.

Your browser does not support the video tag.

Official product video demonstrating the setup and basic operation of the portable document scanner, including battery and SD card insertion, and initial scanning steps.

OPERATING INSTRUCTIONS

Follow these steps to effectively use your portable scanner.

1. **Power On:** Long press the "SCAN" button to turn on the device. The display will light up.
2. **Select Resolution (DPI):** Press the "DPI" button to cycle through the available resolutions: 300DPI, 600DPI, and 900DPI. Choose the resolution that best suits your scanning needs. Higher DPI provides clearer images but results in larger file sizes.
3. **Select Format (JPG/PDF):** Press the "JPG/PDF" button to switch between JPEG and PDF output formats.
4. **Begin Scanning:** Place the scanner on the document you wish to scan. Ensure the document is flat and smooth. Short press the "SCAN" button. The green LED light will flash, indicating it's ready to scan. Slowly and steadily roll the scanner across the document. Maintain a consistent speed and pressure for best results.
5. **End Scanning:** Once you have scanned the desired area, press the "SCAN" button again to stop. The scanner will automatically save the image to the Micro SD card. If no operation is performed for 3 minutes, the scanner will automatically power off.
6. **Transferring Files:** Connect the scanner to your computer using the provided USB cable. The scanner will appear as a removable disk drive. You can then access the scanned files (JPG or PDF) from the Micro SD card. The device is plug-and-play, requiring no special software installation for file transfer.

3 modes of resolution for your options: 300dpi/600dpi/900dpi, you can save it in the clearest way, picture and document are showed clear as it is.



Illustration of the different DPI resolution options (300, 600, 900) available on the scanner, showing the clarity difference.

It is applicable in bank, insurance business, lawyer, real estate agency, scan your important files and save them immediately, no struggling in finding a printing shop, keep it confidential.



The portable scanner being used to digitize important business documents, highlighting its utility in professional settings.



The scanner connected via USB to a computer, demonstrating how scanned data can be easily read and transferred from the Micro SD card.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your scanner.

- **Cleaning the Scan Head:** Regularly clean the scan head (the transparent strip on the underside of the scanner) with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with a mild, non-abrasive cleaner. Ensure the scan head is completely dry before use.
- **Battery Care:** If the scanner will not be used for an extended period, remove the batteries to prevent leakage and damage.

- **Storage:** Store the scanner in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your scanner, refer to the following common problems and solutions:

- **Scanner Not Turning On:**
 - Check if the batteries are inserted correctly with the right polarity.
 - Ensure the batteries have sufficient charge. Replace with new AA batteries if necessary.
 - Long press the "SCAN" button firmly to power on.
- **Scanned Images are Blurry or Distorted:**
 - Ensure the document is flat and smooth on the scanning surface.
 - Roll the scanner slowly and steadily across the document. Uneven speed can cause distortion.
 - Clean the scan head as described in the Maintenance section. Dust or debris can affect scan quality.
 - Ensure you are scanning within the recommended speed range.
- **Scanner Not Connecting to Computer / Files Not Visible:**
 - Ensure the USB cable is securely connected to both the scanner and the computer.
 - Try a different USB port on your computer.
 - Verify that the Micro SD card is properly inserted into the scanner.
 - On your computer, check "My Computer" or "This PC" for a new removable disk drive. If it doesn't appear, try restarting both the scanner and the computer.
 - The scanner is compatible with Windows XP/7/Vista/Mac OS 10.4 or above. Ensure your operating system meets these requirements.
- **Error Message on Display:**
 - Refer to the small display on the scanner for specific error codes. Common errors might indicate a full SD card (transfer files or replace), or a scanning issue (try rescanning).

SPECIFICATIONS

Feature	Detail
Product Dimensions	10.04 x 0.98 x 0.98 inches (10"D x 1"W x 1"H)
Item Weight	6 ounces (170 Grams)
Model Number	JMZ161805YTWZ05293
Media Type	USB, SD Card
Scanner Type	Document
Connectivity Technology	USB
Resolution	300 dpi / 600 dpi / 900 dpi
Sheet Size	A4

Feature	Detail
Wattage	2 watts
Color Depth	900 Bits
Storage	Supports up to 32GB Micro SD card (16GB included)
File Format	JPG / PDF
Compatibility	Windows XP/7/Vista/Mac OS 10.4 or above



Detailed view of the scanner with its dimensions, illustrating its compact and portable design.

WARRANTY AND SUPPORT

Specific warranty details and direct support contact information are not provided in the available product data. For any issues or inquiries, please refer to the product packaging or contact the retailer where the product was purchased. You may also visit the official AOZBZ store on Amazon for general information and potential support resources.

Link to AOZBZ Store: [AOZBZ Official Store](#)

© 2024 AOZBZ. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question