

[Manuals.plus](#) /

› [Haktoys](#) /

› Haktoys Fishing Game Play Set (Model 1022FSH) Instruction Manual

Haktoys 1022FSH

Haktoys Fishing Game Play Set Instruction Manual

Model: 1022FSH

1. INTRODUCTION

Thank you for choosing the Haktoys Fishing Game Play Set. This manual provides important information for the safe and proper assembly, operation, and maintenance of your new game. Please read these instructions thoroughly before use and retain them for future reference.



Image 1.1: The Haktoys Fishing Game Play Set, showing the rotating board, fish, fishing poles, and product packaging.

2. What's in the Box

Carefully unpack all components and ensure all items are present before discarding packaging materials.

- 1 x Fishing Base (Rotating Board)
- 21 x Fish Figurines
- 4 x Fishing Poles

WHAT'S IN THE BOX

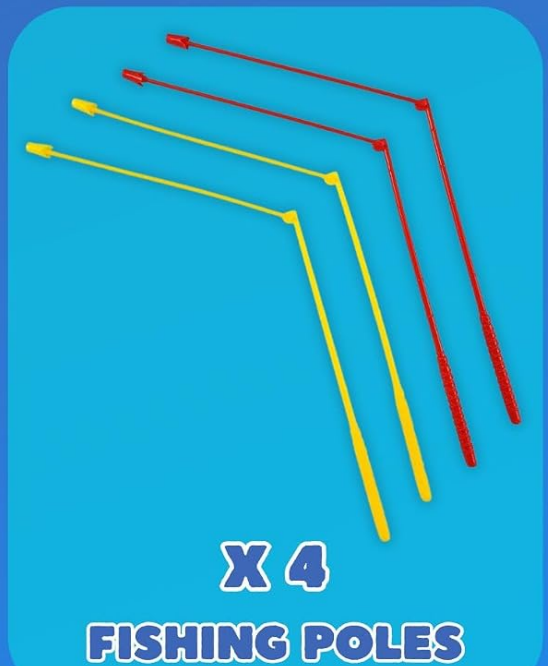 


Image 2.1: Visual representation of the game components, including 21 fish figurines, 4 fishing poles, and the rotating fish pond board.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the underside of the fishing game base.
2. Using a screwdriver (not included), open the battery compartment cover.
3. Insert **2 AA batteries** (not included) into the compartment, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

3.2 Game Assembly

1. Place the fishing game base on a flat, stable surface.
2. Distribute the 21 fish figurines evenly into the designated slots on the rotating board.
3. Each player should take one fishing pole.

4. OPERATING INSTRUCTIONS

4.1 Powering On and Music Control

The game features a music on/off switch for flexible play environments.

1. Locate the power/music switch on the side of the fishing game base.
2. Slide the switch to the **"On"** position to start the game with music and rotation.
3. To play without music, slide the switch to the **"Mute"** position. The board will continue to rotate.
4. To turn off the game completely, slide the switch to the **"Off"** position.

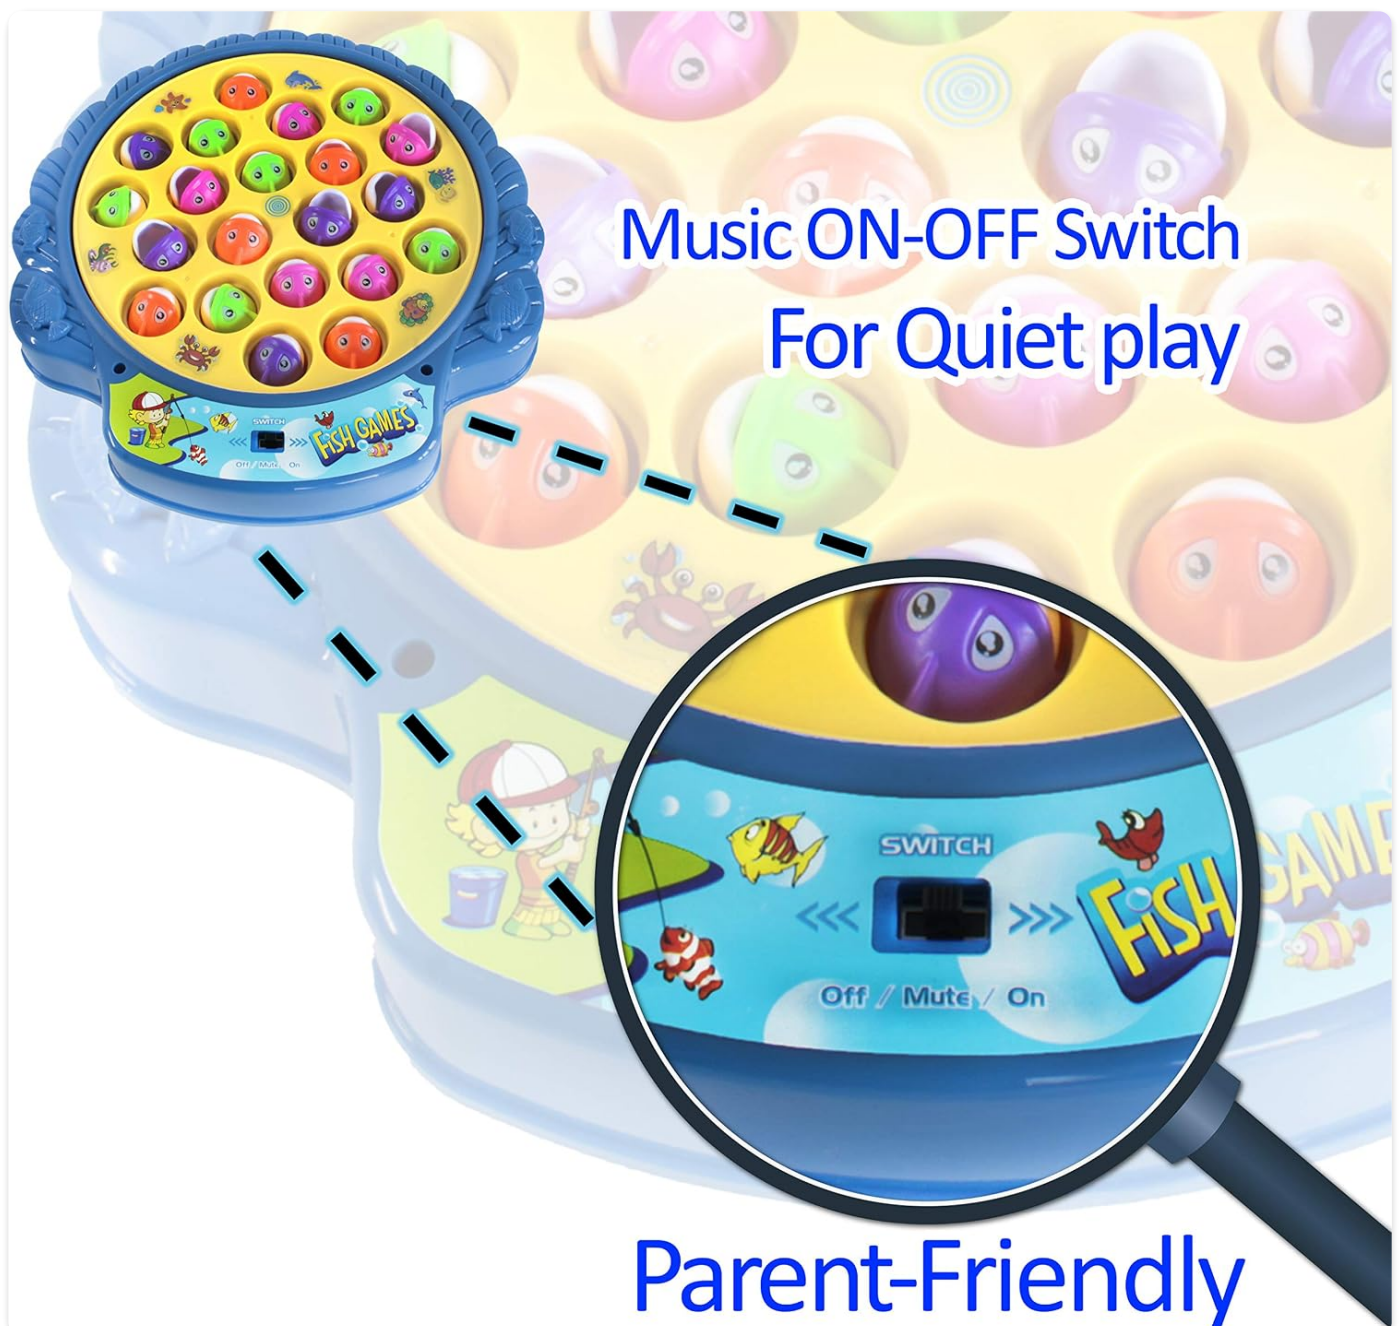 


Image 4.1: Detail of the music ON-OFF switch, labeled for Off, Mute, and On positions, allowing for quiet play.

4.2 How to Play

This interactive fishing game is designed for 1-4 players.

1. Once the game is powered on, the board will begin to rotate, and the fish will open and close their mouths.
2. Players use their fishing poles to catch the fish. Aim to hook a fish when its mouth is open.

3. The goal is to catch as many fish as possible.
4. The game encourages hand-eye coordination and fine motor skills.



Image 4.2: Three children engaged in playing the fishing game, demonstrating the use of fishing poles to catch fish from the rotating board.

5. MAINTENANCE

5.1 Cleaning

- Wipe the game base and fish figurines with a soft, damp cloth.
- Do not immerse the game base in water.
- Avoid using harsh chemicals or abrasive cleaners.

5.2 Storage

- When not in use, store the game in a cool, dry place, away from direct sunlight.

- Remove batteries if the game will not be used for an extended period to prevent leakage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Game does not turn on or rotate.	Batteries are dead or incorrectly installed.	Check battery polarity and replace with fresh AA batteries.
Music is not playing.	Music switch is in "Mute" position.	Slide the music switch to the "On" position.
Fish are difficult to catch.	Timing issue or fishing pole technique.	Practice hooking the fish when their mouths are fully open. Ensure fishing pole string is not tangled.

7. SPECIFICATIONS

- **Model Number:** 1022FSH
- **Product Dimensions:** 10.5 x 1.5 x 10.5 inches (Game Board)
- **Item Weight:** 1 pound
- **Recommended Age:** 36 months - 8 years
- **Batteries Required:** 2 AA batteries (not included)
- **Manufacturer:** Haktoys

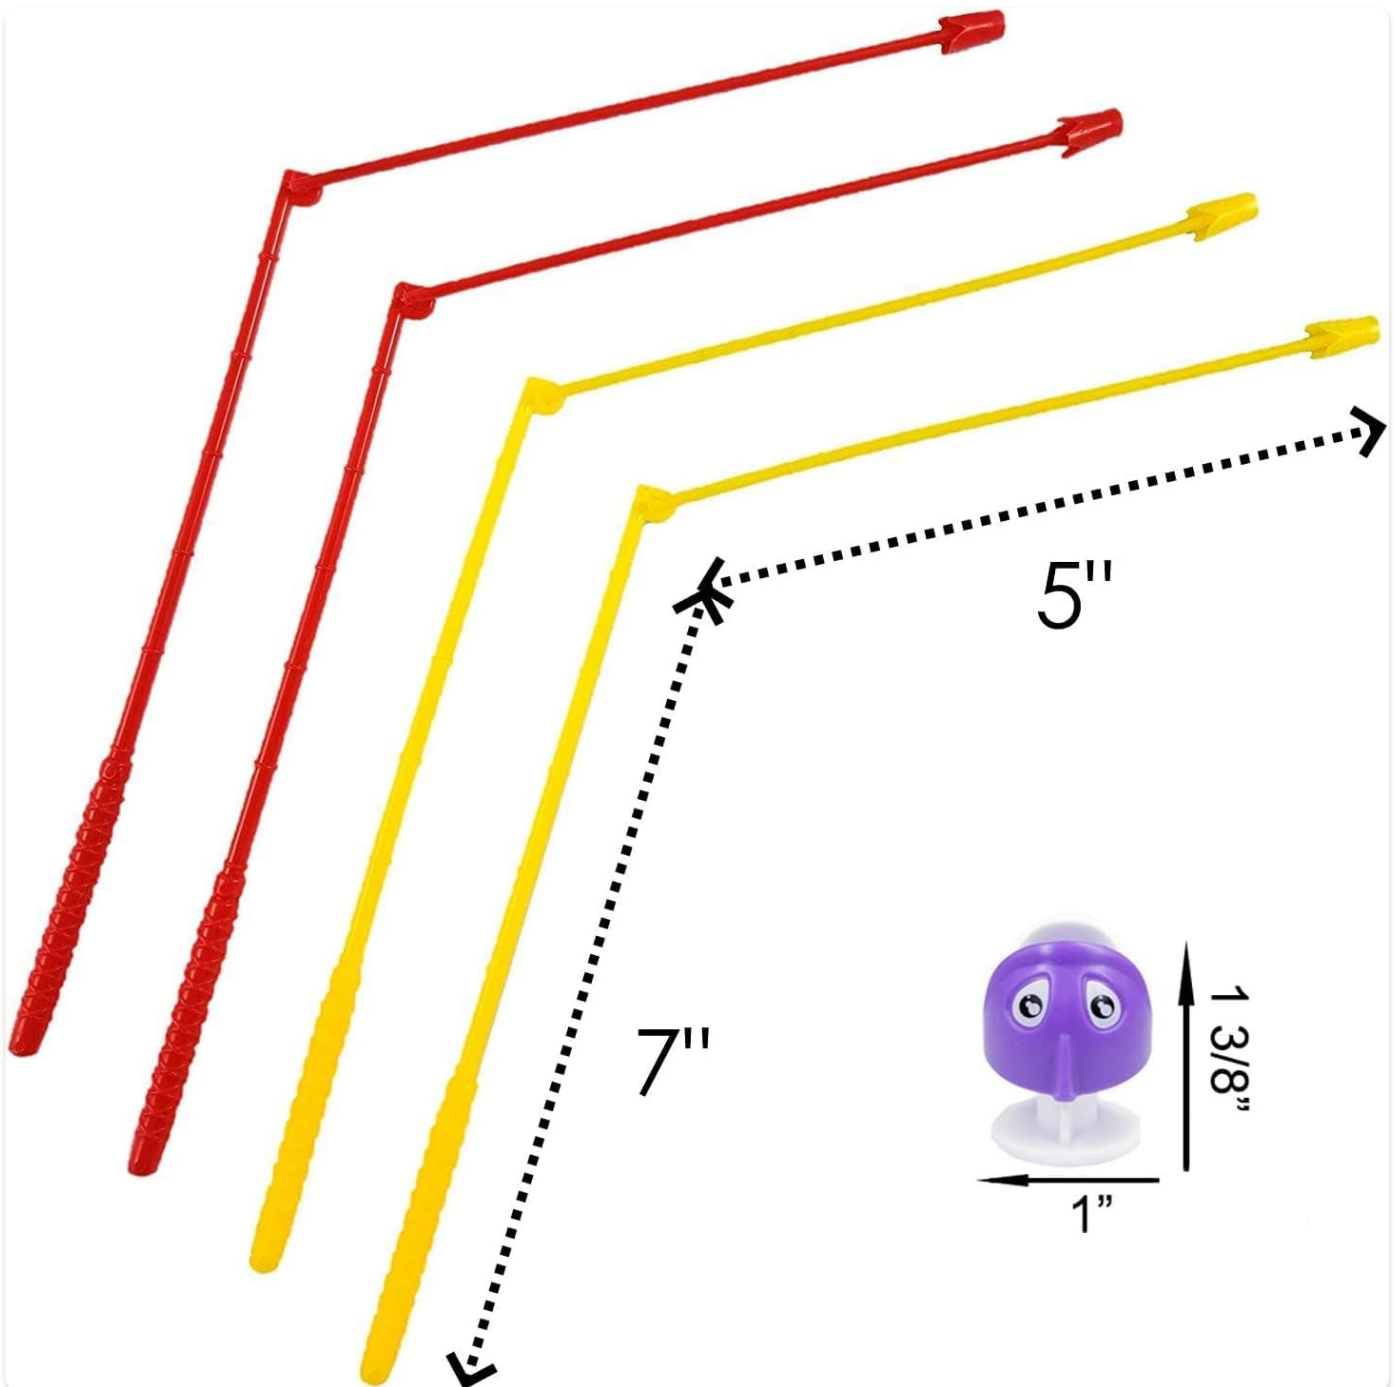 


Image 7.1: Measurements of the fishing poles (7 inches long, 5 inches from handle to hook) and a fish figurine (1 3/8 inches tall, 1 inch wide).

8. SUPPORT AND REPLACEMENT PARTS

For additional support or inquiries, please visit the official Haktoys website or contact their customer service. If you require extra fishing poles or fish figurines, you can search for the following ASINs:

- **Extra Fishing Poles:** ASIN B07BRFQ8ZV
- **Extra Fish:** ASIN B07FTSXBM9

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question