

---

[Manuals.plus](#) /

› [Budweiser](#) /

› Budweiser Bluetooth Can Speaker BW-BCS-002 Instruction Manual

## Budweiser BW-BCS-002

# Budweiser Bluetooth Can Speaker Instruction Manual

Model: BW-BCS-002

---

## 1. PRODUCT OVERVIEW

---

The Budweiser Bluetooth Can Speaker is a portable wireless audio device designed for convenient music playback. Its unique design mimics a Budweiser beer can, offering both aesthetic appeal and functional audio. This speaker supports Bluetooth connectivity, USB playback, and features an auxiliary input.



Image 1: Front view of the Budweiser Bluetooth Can Speaker.





Image 2: Rear view of the Budweiser Bluetooth Can Speaker, showing the various ports and controls.

## 2. PACKAGE CONTENTS

- Budweiser Bluetooth Can Speaker
- USB Charging Cable
- Auxiliary Audio Cable
- Instruction Manual

## 3. SETUP

---

### 3.1 Charging the Speaker

1. Locate the Micro USB charging port on the speaker (refer to Image 2).
2. Connect the small end of the provided USB charging cable to the speaker's charging port.
3. Connect the larger end of the USB cable to a USB power adapter (not included) or a computer's USB port.
4. The charging indicator light will illuminate during charging and turn off when fully charged.

### 3.2 Powering On/Off

- To power on, slide the power switch to the 'ON' position. A startup sound will indicate the speaker is active.
- To power off, slide the power switch to the 'OFF' position.

### 3.3 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (indicated by a flashing LED).
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Budweiser Speaker" or a similar name from the list of devices.
4. Once paired, the speaker will emit a confirmation tone, and the LED indicator will stop flashing.

## 4. OPERATING THE SPEAKER

---

### 4.1 Control Functions

The speaker features integrated controls for easy management of your audio playback:

- **Play/Pause:** Press the Play/Pause button (often integrated with the power or mode button) to start or pause music.
- **Next/Previous Track:** Use the navigation buttons (often labeled with arrows or +/-) to skip to the next or previous song.
- **Volume Control:** Long-press the navigation buttons or use a dedicated volume dial/buttons to adjust the volume.

### 4.2 Playback Modes

- **Bluetooth Mode:** After successful pairing, audio from your connected device will play through the speaker.
- **USB/TF Card Mode:** Insert a USB drive or TF (MicroSD) card with MP3 audio files into the respective port. The speaker will automatically switch to this mode and begin playback.
- **Auxiliary Input Mode:** Connect an external audio device using the provided 3.5mm auxiliary cable. The speaker will switch to AUX mode, allowing audio playback from the connected device.

## 5. MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use harsh chemicals or abrasive cleaners.
- **Water Resistance:** This speaker is **NOT WATER RESISTANT**. Avoid exposure to water, rain, or excessive moisture to prevent damage.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker

regularly, even if not in constant use.

## 6. TROUBLESHOOTING

- **No Power:** Ensure the speaker is fully charged. Connect the charging cable and allow it to charge for at least 30 minutes before attempting to power on again.
- **No Sound:**
  - Check the volume level on both the speaker and your connected device.
  - Ensure the speaker is in the correct playback mode (Bluetooth, USB, or AUX).
  - If using Bluetooth, verify that the speaker is successfully paired with your device. Try unpairing and re-pairing.
- **Bluetooth Pairing Issues:**
  - Make sure the speaker is within the 10-meter Bluetooth range of your device.
  - Turn off Bluetooth on your device and then turn it back on.
  - Restart both the speaker and your device.
- **Poor Sound Quality:**
  - Ensure there are no obstructions between the speaker and your Bluetooth device.
  - Move away from other wireless devices that might cause interference.
  - Check the audio source for quality issues.

## 7. SPECIFICATIONS

Feature	Specification
Model Name	BW-BCS-002
Dimensions	2.5 x 2.5 x 4.5 inches
Item Weight	6.4 ounces
Material	Aluminum
Speaker Type	Outdoor
Connectivity Technology	Bluetooth, USB
Wireless Communication Technology	Bluetooth
Bluetooth Range	10 Meters
Power Source	Battery Powered (1 Lithium Polymer battery included)
Speaker Maximum Output Power	3 Watts
Frequency Response	200 KHz
Audio Output Mode	Stereo
Water Resistance Level	Not Water Resistant

## **8. WARRANTY INFORMATION**

---

This Budweiser Bluetooth Can Speaker comes with a limited warranty. Please refer to the warranty card included in your package for specific terms, conditions, and duration of coverage.

## **9. SUPPORT**

---

For further assistance, technical support, or warranty claims, please contact the manufacturer, M&S Accessory Network, through their official support channels. Contact information can typically be found on the product packaging or their official website.