

[Manuals.plus](#) /

› [Globo](#) /

› Globo 54348-3 ROMAN LED Spot Light Instruction Manual

Globo 54348-3

Globo 54348-3 ROMAN LED Spot Light Instruction Manual

Model: 54348-3

1. INTRODUCTION

Thank you for choosing the Globo 54348-3 ROMAN LED Spot Light. This elegant ceiling fixture features a nickel matte finish and three clear smoked glass shades, designed to provide efficient and stylish illumination. This manual provides essential information for the safe installation, operation, and maintenance of your new light fixture. Please read these instructions carefully before installation and retain them for future reference.



Figure 1: The Globo 54348-3 ROMAN LED Spot Light in an installed setting.

The fixture includes three energy-saving E14 LED bulbs, each 4W, operating at 230V, delivering 200 lumens of warm white light (3000K). Its design is suitable for various indoor environments, adding a classic yet modern touch.

2. SAFETY INFORMATION

- **Electrical Safety:** Always disconnect power at the main circuit breaker or fuse box before installation, maintenance, or bulb replacement.
- **Qualified Electrician:** Installation should be performed by a qualified electrician or competent person in accordance with all local electrical codes and regulations.
- **Voltage:** Ensure the supply voltage matches the fixture's requirements (230V).
- **Indoor Use Only:** This fixture is designed for indoor use in dry locations (IP20 rated). Do not expose to moisture or direct water.
- **Bulb Type:** Use only E14 LED bulbs with a maximum wattage of 4W per bulb.
- **Handling:** Handle glass components with care to prevent breakage.

- **Heat:** LED bulbs can still generate some heat. Allow bulbs to cool before handling.

3. PACKAGE CONTENTS

Carefully unpack the box and ensure all components are present and undamaged. If any parts are missing or damaged, do not attempt to assemble or install the fixture. Contact your retailer for assistance.

- 1 x Globo 54348-3 ROMAN LED Spot Light Fixture
- 3 x E14 LED Bulbs (4W, 230V)
- Mounting Hardware (screws, wall plugs, wire connectors - typically included)
- Instruction Manual

4. SETUP (INSTALLATION)

Follow these steps for safe and proper installation of your ceiling light fixture.

4.1 Pre-Installation

1. **Turn off Power:** Locate the main circuit breaker or fuse box and turn off the power to the junction box where the fixture will be installed. Verify power is off using a voltage tester.
2. **Prepare Mounting Surface:** Ensure the ceiling surface is clean, dry, and structurally sound to support the weight of the fixture.
3. **Review Dimensions:** Refer to the dimension diagram to ensure the fixture fits your intended space.

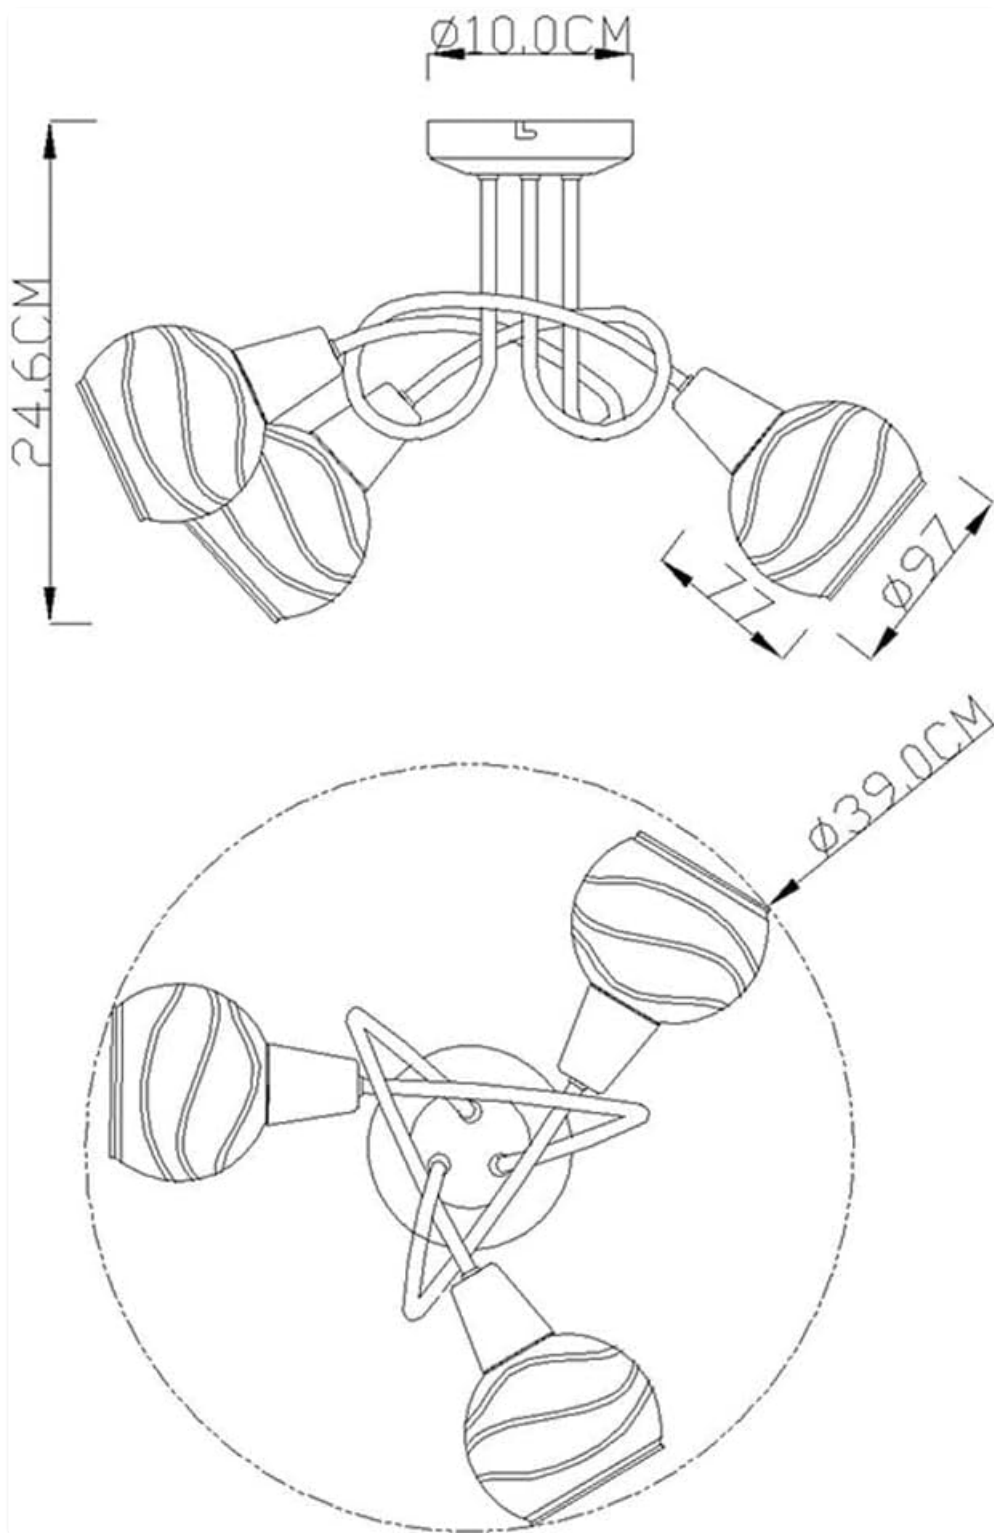


Figure 2: Dimensional drawing of the light fixture. Diameter: 39.0 cm, Height: 24.6 cm.

4.2 Mounting the Fixture

1. **Attach Mounting Bracket:** Secure the mounting bracket (if separate) to the ceiling junction box using the provided screws. Ensure it is firmly attached.
2. **Wiring:** Connect the fixture's wires to the household electrical wires. Typically, connect the live (brown/black) wire from the fixture to the live wire from the ceiling, the neutral (blue/white) wire from the fixture to the neutral wire from the ceiling, and the ground (green/yellow) wire from the fixture to the ground wire from the ceiling. Use appropriate wire connectors and ensure all connections are secure.
3. **Secure Fixture:** Carefully lift the fixture and align it with the mounting bracket. Secure the fixture to the bracket using the provided screws or nuts. Ensure it is flush with the ceiling and stable.

4.3 Bulb Installation

1. **Insert Bulbs:** Gently screw the provided E14 LED bulbs into the sockets. Do not overtighten.
2. **Attach Glass Shades:** Carefully attach the glass shades to the fixture, ensuring they are securely fastened according to the fixture's design.



Figure 3: Detail of the bulb socket and glass shade, illustrating where to insert the E14 LED bulb.

4.4 Post-Installation

1. **Restore Power:** Once installation is complete and all connections are secure, restore power at the main circuit breaker.
2. **Test Fixture:** Turn on the light switch to ensure the fixture is functioning correctly.

5. OPERATING INSTRUCTIONS

The Globo 54348-3 ROMAN LED Spot Light is designed for simple operation via a standard wall switch. It does not feature an integrated switch on the fixture itself.

- **Turning On/Off:** Use the wall switch connected to the fixture's electrical circuit to turn the light on or off.
- **Dimming:** This fixture is not specified as dimmable. Using a dimmer switch with non-dimmable LED bulbs may cause flickering or damage to the bulbs and/or fixture.

6. MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your light fixture.

- **Cleaning:** Disconnect power before cleaning. Wipe the fixture with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish or glass.
- **Bulb Replacement:** Ensure power is off and bulbs have cooled completely before attempting to replace them. Unscrew the old bulb and screw in a new E14 LED bulb (max 4W).
- **Inspection:** Periodically check for any loose connections or signs of wear. If any issues are found, consult a qualified electrician.

7. TROUBLESHOOTING

If you encounter issues with your light fixture, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Light does not turn on	No power to the fixture Loose wiring connection Faulty bulb	Check circuit breaker/fuse. Ensure wall switch is on. Verify all wire connections are secure (power off first). Replace bulb with a known working one.
Light flickers	Loose bulb Incompatible dimmer switch Faulty bulb	Tighten bulb securely. Ensure no dimmer switch is used, or replace with compatible LED dimmer if bulbs are dimmable (these are not specified as dimmable). Replace bulb.
Bulbs burn out quickly	Incorrect bulb type/wattage Overheating Voltage fluctuations	Ensure E14 LED 4W bulbs are used. Ensure proper ventilation around the fixture. Consult an electrician to check household voltage.

If these steps do not resolve the issue, consult a qualified electrician or contact customer support.

8. SPECIFICATIONS

Feature	Specification
Model Number	54348-3
Brand	Globo
Material	Glass, Nickel
Finish	Nickel Matte
Color	Grey (fixture), Clear Smoked (glass)
Style	Classic

Feature	Specification
Dimensions (Diameter x Height)	39 cm x 24.6 cm
Number of Lights	3
Bulb Type	LED (E14 base)
Max. Compatible Wattage (per bulb)	4 Watt
Voltage	230 Volt
Luminous Flux (per bulb)	200 Lumen (output)
Color Temperature	3000K (Warm White)
Energy Efficiency Class	A++ (old rating) / F (new rating)
Room Lighting Classification	IP20
Special Features	Lightweight
Installation Type	Ceiling Mount
Switch Style	Without switch (wall switch operated)



Figure 4: Energy efficiency label for the included LED bulbs, indicating class F under the new EU rating system.

9. WARRANTY

Globo products are manufactured to high-quality standards. This product is covered by the standard manufacturer's warranty against defects in materials and workmanship from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by improper installation, misuse,

accidents, or unauthorized modifications.

10. SUPPORT

For technical assistance, warranty inquiries, or to report missing/damaged parts, please contact your retailer or the manufacturer directly. Please have your model number (54348-3) and proof of purchase ready when contacting support.

Manufacturer: Globo

Website: Please refer to the product packaging or your retailer's website for the official Globo support contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0732YNP8L>

More documents and user manuals: <https://manuals.plus/>