

Monzana MZTV3010

Monzana MZTV3010 Tower Fan User Manual

Model: MZTV3010

1. INTRODUCTION AND SAFETY INFORMATION

Thank you for choosing the Monzana MZTV3010 Tower Fan. This manual provides important information for the safe and efficient operation of your new appliance. Please read it thoroughly before use and keep it for future reference.

Important Safety Instructions

- Always ensure the fan is placed on a stable, flat surface.
- Do not insert fingers or objects into the fan grille.
- Keep the fan away from water or other liquids.
- Unplug the fan from the power outlet before cleaning or when not in use.
- Do not operate the fan with a damaged cord or plug.
- This appliance is for indoor use only.

2. PACKAGE CONTENTS

Please check that all components are present:

- Monzana MZTV3010 Tower Fan unit
- Base (multiple parts for assembly)
- Remote Control
- Aromabox with two fragrance pads
- User Manual (this document)

3. SETUP AND ASSEMBLY

The Monzana MZTV3010 Tower Fan requires minimal assembly. Follow these steps:

1. Carefully unpack all components from the box.

2. Assemble the fan base according to the illustrations in the manual. Typically, this involves connecting two halves of the base and securing them to the main fan unit with screws.
3. Ensure the power cord is routed correctly through the base and secured if clips are provided.
4. Place the assembled fan on a firm, level surface.



This image shows the complete Monzana MZTV3010 Tower Fan, highlighting its sleek, white design and tall, slender profile suitable for various room settings.



This image provides the dimensions of the Monzana Tower Fan (84 cm height, 26 cm base diameter) and visually represents its 70-degree oscillation capability, indicating its coverage area.

4. OPERATING INSTRUCTIONS

Your Monzana Tower Fan can be operated using the control panel on top of the unit or the included remote control.

Control Panel and Remote Control Overview



A detailed view of the fan's top control panel with an LED display showing '25', alongside the remote control. This image demonstrates the intuitive interface and the convenience of remote operation, with icons for speed, oscillation, timer, and mode.



A close-up of the remote control for the Monzana Tower Fan, showing its five buttons: Power, Speed, Oscillation, Timer, and Mode. This remote allows convenient operation from a distance.

Functions:

- **Power Button:** Press to turn the fan ON or OFF.
- **Speed Button:** Cycles through 3 fan speeds (Low, Medium, High). The current speed is indicated on the LED display.
- **Mode Button:** Selects one of 3 operating modes:
 - **Normal Mode:** The fan operates at a constant speed.
 - **Natural Mode:** Simulates a natural breeze by varying the fan speed intermittently.
 - **Sleep Mode:** The fan operates at a lower, quieter speed, ideal for nighttime use.
- **Oscillation Button (OSC):** Activates or deactivates the 70° oscillation function, allowing the fan to sweep air across a wider area.
- **Timer Button:** Sets the operating time from 1 to 12 hours. The fan will automatically turn off after the set time. Press repeatedly to cycle through timer settings.



An overview of the Monzana Tower Fan's key features, including its three speed settings, 70-degree oscillation, 12-hour timer, three operating modes (Normal, Natural, Sleep), and remote control functionality, each represented by an icon.

5. AROMABOX FEATURE


The Monzana Tower Fan includes an aromabox to diffuse your favorite scents into the room.

How to Use the Aromabox:

1. Locate the aromabox compartment, usually at the back or side of the fan.
2. Open the compartment and insert one of the provided fragrance pads.
3. Apply a few drops of your preferred essential oil or fragrance onto the pad.
4. Close the aromabox compartment securely.
5. As the fan operates, the air circulation will gently diffuse the scent into your environment.



The tower fan is shown in a living room setting, illustrating the aroma box feature with small yellow flower icons representing diffused scent. This highlights the fan's ability to refresh the environment with chosen fragrances.

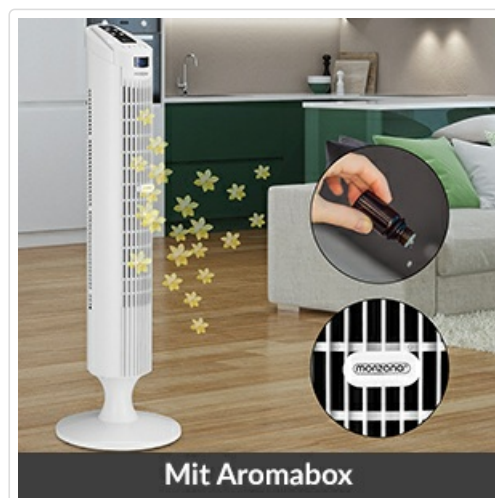

A close-up image detailing the aromabox feature of the Monzana Tower Fan, showing where to insert fragrance pads to diffuse scents into the room.

6. MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your fan.

Cleaning Instructions:

- 1. Always unplug the fan from the power outlet before cleaning.
- 2. Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
- 3. Use a vacuum cleaner with a brush attachment or a soft brush to remove dust from the air intake and outlet grilles.
- 4. Ensure the fan is completely dry before plugging it back in and operating it.
- 5. The fragrance pads in the aromabox should be replaced periodically or cleaned if reusable.

7. TROUBLESHOOTING

If you encounter issues with your Monzana Tower Fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply.	Check if the power cord is securely plugged into a working outlet.
Weak airflow.	Fan speed is too low; grilles are blocked.	Increase the fan speed. Clean the air intake and outlet grilles from dust.
Oscillation not working.	Oscillation function is not activated.	Press the OSC button on the control panel or remote control.
Remote control not working.	Batteries are depleted or incorrectly inserted; obstruction between remote and fan.	Replace batteries. Ensure correct polarity. Remove any obstructions. Point remote directly at the fan's receiver.
Unusual noise.	Fan is not on a level surface; foreign object inside.	Place the fan on a stable, flat surface. Unplug and carefully check for any foreign objects.

8. SPECIFICATIONS

Feature	Detail
Model Number	MZTV3010
Dimensions (L x W x H)	26 x 26 x 84 cm
Weight	2.6 kg
Power Source	Corded Electric
Voltage	230 Volts
Power	45.00 Watts
Number of Speeds	3

Feature	Detail
Oscillation Angle	70°
Timer	1-12 hours
Noise Level	50 Decibels
Airflow	13 Cubic meters per minute
Control Type	Remote Control, On-device buttons
Material	Plastic
Special Features	Portable, Aromabox

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.