

[Manuals.plus](#) /

› [Harman Kardon](#) /

› Harman Kardon HK Traveler Bluetooth Speaker User Manual

Harman Kardon HK Traveler Black

Harman Kardon HK Traveler Bluetooth Speaker User Manual

Model: HK Traveler Black

INTRODUCTION

The Harman Kardon Traveler is a portable Bluetooth speaker designed for professionals on the go. It combines high-quality audio with practical features like a dual microphone conferencing system and a built-in power bank. Its sleek, unibody aluminum design ensures durability and portability, making it an ideal companion for travel and daily use.

Key Features:

- Wireless Bluetooth streaming for seamless audio playback.
- Dual microphone conferencing system with echo and noise cancellation for clear calls.
- Integrated 2500 mAh power bank to charge your devices.
- Advanced craftsmanship with premium materials and a sleek design.
- Compact and lightweight form factor for easy portability.

WHAT'S IN THE BOX

Upon unboxing your Harman Kardon Traveler, please ensure all the following items are present:

- Harman Kardon Traveler Bluetooth Speaker
- USB Charging Cable
- Carrying Pouch
- Warranty Card



Image: The Harman Kardon Traveler speaker shown with its included USB charging cable and carrying pouch, placed on a wooden surface next to a smartphone and keys, illustrating its portability and accessories.

PRODUCT OVERVIEW

Familiarize yourself with the various components and controls of your Harman Kardon Traveler speaker.



Image: Top view of the Harman Kardon Traveler speaker, highlighting the control panel with buttons for volume up (+), volume down (-), call management, Bluetooth pairing, and power on/off. LED indicators are also visible.

Controls and Indicators:

- **Power Button:** Press to turn the speaker on or off.
- **Bluetooth Button:** Press to enter Bluetooth pairing mode.
- **Volume Up (+):** Increases the audio volume.
- **Volume Down (-):** Decreases the audio volume.
- **Call Button:** Manages phone calls (answer, end, reject).
- **LED Indicators:** Display battery status and Bluetooth connection status.
- **USB Charging Port:** For charging the speaker and using it as a power bank.
- **Aux-in Port:** For wired audio connection.

SETUP

1. Charging the Speaker:

1. Connect the included USB charging cable to the speaker's USB port.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicators will show the charging progress. A full charge provides approximately 10 hours of playback.

2. Powering On/Off:

- To power on, press and hold the **Power Button** until the LED indicators light up.
- To power off, press and hold the **Power Button** again until the LED indicators turn off.

3. Bluetooth Pairing:

1. Ensure the speaker is powered on.
2. Press the **Bluetooth Button**. The Bluetooth LED indicator will flash, indicating it's in pairing mode.
3. On your smartphone, tablet, or laptop, enable Bluetooth and search for available devices.
4. Select "Harman Kardon Traveler" from the list of devices.
5. Once connected, the Bluetooth LED indicator will glow solid blue.



Image: Front view of the Harman Kardon Traveler speaker, showcasing its sleek design and the Harman Kardon logo. The speaker grille is visible, indicating the audio output area.

OPERATING INSTRUCTIONS

Music Playback:

- After successful Bluetooth pairing, open your preferred music application on your connected device and begin playback.
- Adjust volume using the **Volume Up (+)** and **Volume Down (-)** buttons on the speaker or directly from your device.
- For wired connection, plug a 3.5mm audio cable into the Aux-in port on the speaker and the audio output of your device.

Call Handling:

- When a call comes in, the music playback will pause. Press the **Call Button** to answer the call.
- To end a call, press the **Call Button** again.
- To reject an incoming call, press and hold the **Call Button**.
- The dual microphones ensure clear communication during conference calls.

Using as a Power Bank:

- Connect your mobile device's charging cable to the USB charging port on the Harman Kardon Traveler.
- The speaker's internal battery will begin charging your connected device.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's surface. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. Use the included carrying pouch for protection during travel or storage.
- **Battery Care:** To prolong battery life, fully charge the speaker before first use and recharge it regularly, even if not in frequent use. Avoid completely draining the battery.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is depleted.	Charge the speaker using the USB charging cable.
No sound	Volume is too low or muted. Device not connected.	Increase volume on speaker and connected device. Ensure Bluetooth is paired or Aux cable is connected.
Bluetooth pairing fails	Speaker not in pairing mode. Device too far. Interference.	Press Bluetooth button to enter pairing mode. Move device closer (within 10 meters). Turn off other Bluetooth devices.
Poor sound quality	Weak Bluetooth signal. Obstructions.	Move speaker and device closer. Remove obstructions between them.

SPECIFICATIONS

Model Name:	HK Traveler
Color:	Black

Material:	Plastic
Product Dimensions:	8.5 x 4.1 x 2.5 inches
Item Weight:	1.43 pounds
Power Source:	Battery Powered
Battery Life:	Up to 10 Hours
Battery Type:	1 Lithium Ion battery (included)
Speaker Output Power:	25 Watts
Connectivity Technology:	Bluetooth, Auxiliary, USB
Bluetooth Range:	Up to 10 meters (33 feet)
Number of Microphones:	2 (for conferencing)
Power Bank Capacity:	2500 mAh
Manufacturer:	Harman Kardon

WARRANTY AND SUPPORT

Your Harman Kardon Traveler Bluetooth Speaker comes with a Warranty Card included in the box. Please refer to this card for detailed information regarding warranty coverage, terms, and conditions.

For technical support, product registration, or further inquiries, please visit the official Harman Kardon website or contact their customer service department. Contact details can typically be found on the Warranty Card or the official product page.

Please retain your proof of purchase for warranty claims.

© 2023 Harman Kardon. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question