

Bitmain APW3++

Bitmain Antminer Power Supply APW3++ User Manual

Model: APW3++

Brand: Bitmain

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Bitmain Antminer Power Supply APW3++. Please read this manual thoroughly before installation and operation to ensure proper functionality and longevity of the unit.

The APW3++ power supply is designed for compatibility with Antminer models including L3+, S9, T9, and D3.

2. SAFETY INFORMATION

- Always ensure the power supply is disconnected from the main power source before performing any installation, maintenance, or troubleshooting.
- Use only a standard PC power cable (C13 type). For high wattage operation (e.g., 1600W at 220V), a 14-gauge or higher rated power cord is recommended to prevent overheating and ensure safety. Do not use a standard computer plug for high-power applications.
- Ensure adequate ventilation around the power supply to prevent overheating. Do not block air vents.
- The APW3++ power supply does not feature an integrated power switch or fuse protection. Powering the unit on or off requires connecting or disconnecting the power cable. A slight spark may occur during connection or disconnection, which is normal due to the absence of a switch. Exercise caution.
- Avoid exposing the unit to moisture, dust, or extreme temperatures.
- Do not attempt to open or modify the power supply unit. This will void any warranty and may pose a safety risk.

3. PRODUCT FEATURES

- Designed for AntMiner L3+, S9, T9, and D3 models.
- Equipped with ten 6-pin PCIe connectors for multiple device connections.
- Maximum output of 1200W at 110V-120V input.

- Maximum output of 1600W at 220V-240V input.
- Compact ATX form factor.
- Air cooling method.

4. SETUP INSTRUCTIONS

1. **Unpack the Power Supply:** Carefully remove the APW3++ power supply from its packaging. Inspect for any visible damage.
2. **Prepare the Environment:** Ensure the installation area is clean, dry, and has adequate airflow. Avoid confined spaces.
3. **Connect PCIe Cables:** Connect the ten 6-pin PCIe power connectors from the APW3++ to the corresponding power input ports on your Antminer device(s). Ensure all connections are secure.
4. **Connect AC Power Cable:** Insert a compatible C13 power cable (not included) into the AC input socket on the rear of the power supply.



An overview of the Bitmain APW3++ power supply unit, showcasing its compact design and the array of ten 6-pin PCIe power connectors extending from one end.



A detailed close-up of the ten 6-pin PCIe power connectors, which are essential for connecting the power supply to compatible Antminer devices.



The rear panel of the APW3++ power supply, featuring the AC power input socket and the cooling fan, which is crucial for heat dissipation.

5. **Connect to Wall Outlet:** Plug the other end of the AC power cable into a grounded electrical outlet. Ensure the outlet provides the correct voltage (110-120V or 220-240V) for your intended operation.

5. OPERATING INSTRUCTIONS

- **Power On:** Once all connections are secure and the AC power cable is plugged into the wall outlet, the power supply will activate. There is no separate power switch.
- **Voltage Considerations:** The power supply automatically adjusts to the input voltage. For maximum output (1600W), a 220V-240V input is required. At 110V-120V, the maximum output is 1200W. Ensure your electrical infrastructure supports the desired wattage.
- **Noise Level:** The power supply operates with a cooling fan. While the PSU itself has a moderate noise level, the connected Antminer device (e.g., S9) typically produces significantly higher noise levels (e.g., 85-90 dB).
- **Power Off:** To power off the unit, safely disconnect the AC power cable from the wall outlet.

6. MAINTENANCE

- **Dust Removal:** Regularly inspect the power supply and its fan for dust accumulation. Use compressed air to gently clean the fan and vents to ensure optimal airflow and prevent overheating.
- **Airflow:** Ensure the area around the power supply remains clear of obstructions to allow for proper air

circulation.

- **Fan Check:** Periodically check the cooling fan for proper operation. A non-functional fan can lead to rapid overheating and damage to the power supply.

7. TROUBLESHOOTING

- **Power Supply Not Turning On:**
 - Verify that the AC power cable is securely connected to both the power supply and a functional wall outlet.
 - Check the wall outlet with another device to confirm it is receiving power.
 - Ensure the power cable itself is not damaged.
- **Overheating:**
 - Check for obstructions around the power supply's air vents.
 - Clean any dust accumulation from the fan and vents.
 - Verify that the internal cooling fan is operating correctly. A faulty fan can cause rapid temperature increases.
- **Unit Not Providing Full Power:**
 - Confirm that the input voltage matches the requirements for the desired output (e.g., 220-240V for 1600W).
 - Ensure the power cable used is of adequate gauge (e.g., 14-gauge or higher for 1600W operation).
- **Spark When Connecting/Disconnecting Power:**
 - This is a normal occurrence due to the absence of a power switch. Exercise caution when plugging in or unplugging the unit.

8. SPECIFICATIONS

 
 
Feature	Detail
Model Name	APW3++
Manufacturer	Bitmain
Product Dimensions	13 x 7 x 5 inches
Item Weight	4.6 pounds
Compatible Devices	Personal Computer (Antminer L3+/S9/T9/D3)
Connector Type	PCI Express (10 x 6-pin)
Output Wattage (110-120V)	1200 watts
Output Wattage (220-240V)	1600 watts
Form Factor	ATX
Cooling Method	Air

9. WARRANTY AND SUPPORT

This product may be covered by a limited warranty provided by the seller. For specific warranty terms and duration, please refer to the purchase agreement or contact your point of sale. For example, some sellers may offer a 15-day warranty on used units.


For technical support or inquiries, please contact the retailer or seller from whom you purchased the Bitmain APW3++ power supply.

Related Documents - APW3++

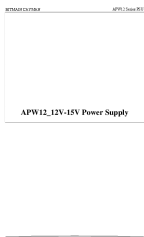	Bitmain APW3-12-1600 PSU Series User Guide User guide for the Bitmain APW3-12-1600 series AC-DC PSU, detailing its features, specifications, remote on/off functionality, order information, troubleshooting, and precautions for use.
	Bitmain APW12 Series 12V-15V Power Supply Technical Manual Detailed technical specifications, features, exterior design, precautions, and troubleshooting guide for the Bitmain APW12 Series 12V-15V DC Power Supply, designed for servers and mining machines.
	Bitmain AntMiner S2 User Manual This manual provides comprehensive instructions for setting up, configuring, and maintaining the Bitmain AntMiner S2, a 1TH/s bitcoin miner.
	Bitmain AntMiner R4 Manual: Setup, Configuration, and Operation Comprehensive user manual for the Bitmain AntMiner R4, covering setup, power supply, miner configuration, status monitoring, system upgrades, and password modification. Includes technical specifications and operational guidance.
	Antminer S21 XP (270Th) Complete Guide: Specifications, Setup, and Mining Comprehensive guide to the Bitmain Antminer S21 XP (270Th) ASIC miner, covering technical specifications, setup instructions, mineable coins, maintenance, and overclocking for Bitcoin mining.

	Complete Guide to Bitmain Antminer L7 (9300Mh/s): Specifications, Maintenance, and Optimization A comprehensive guide to the Bitmain Antminer L7 (9300Mh/s) ASIC miner, detailing its technical specifications, supported cryptocurrencies, purchase options, essential maintenance practices, safe overclocking methods, troubleshooting tips, and humidity control strategies for optimal performance and profitability in cryptocurrency mining.
---	---

 Documents - Bitmain – APW3

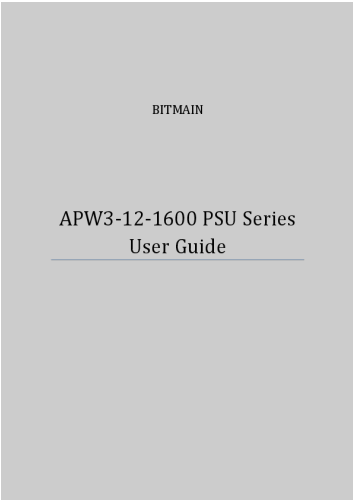

[\[pdf\]](#) Frequently Asked Questions Specifications Guide

APW3 12 1600 PSU Series User Guide user guide zeusbtc manuals |||

BITMAIN APW3-12-1600 PSU Series User Guide AntMiner PSU APW3-12-1600 Series Contents 1 Overview

.....3 2

Features.....

lang:en score:58 filesize: 840 K page_count: 8 document date: 2020-11-22




[\[pdf\]](#) User Manual Installation Guide Instructions Specifications Guide Warranty

Microsoft Word AntMiner L3 Installation Guide docx Bitmainantminer l3 blissz default user login Page Info

Instructions Online User Account Activation OdollarsL3 Server Guidefile12 bitmain shop product firmware Manual 007201708150747462626v8cDCy2067E |||

L3 Server Installation Guide Document Version 0.1 April 2017 Copyright Bitmaintech Pte.Ltd. 2007 2017. All rights reserved. Bitmaintech Pte.Ltd. Bitmain reserves the right to make corrections, modifications, enhancements, improvements, a...

 lang:en score:55 filesize: 4.12 M page_count: 16 document date: 2018-07-31

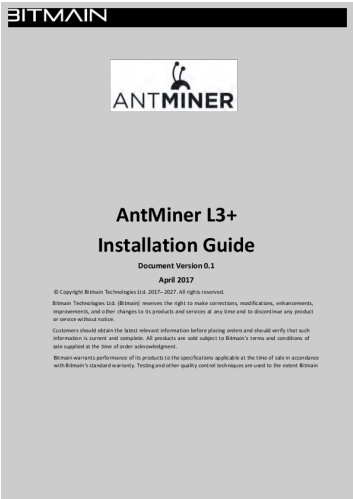

[\[pdf\]](#) User Manual Installation Guide Specifications Guide Warranty

AntMiner L3 Installation Guide Manual Antminer Bitmaind central tech dl Bitmain |||

AntMiner L3 Installation Guide Document Version 0.1 April 2017 Copyright Bitmain Technologies Ltd. 2017 2027. All rights reserved. Bitmain Technologies Ltd. Bitmain reserves the right to make corrections, modificati...

lang:en score:53 filesize: 4.17 M page_count: 15 document date: 2020-11-22

BITMAIN CAYMAN

APW3-12-1600 PSU Series User Guide

[Bitmain APW3-12-1600 PSU Series User Guide](#)

User guide for the Bitmain APW3-12-1600 series AC-DC PSU, detailing its features, specifications, remote on/off functionality, order information, troubleshooting, and precautions for use.

lang:en **score:51** filesize: 1004.72 K page_count: 9 document date: 2022-01-19

BITMAIN



B3 Server Installation Guide

Document Version 0.1
May 2018

© Copyright Bitmain Technologies Ltd. 2007 - 2018. All rights reserved.
Bitmain Technologies Ltd. reserves the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice.
Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to Bitmain's terms and conditions of sale, which are available at the time of order or on our website.
Bitmain warrants the performance of its products to the specifications applicable at the time of sale in accordance with Bitmain's standard warranty. Testing and other quality control techniques are used to the extent Bitmain deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

[\[pdf\] User Manual Installation Guide Specifications Guide Warranty](#)

B3 Server Installation Guide SG docx huizhen hu file12 bitmain shop product firmware Antminer Manual 007201808131639485528pbprx3g0707

B3 Server Installation Guide Document Version 0.1 May 2018 Copyright Bitmaintech Pte.Ltd. 2007 201 ... 7 DC Power 12V DC input 25 328 W 7 8 220VAC Power 25 ,93 conversion efficiency 360 W 7 of **APW3** 9 220VAC Power 40 ,93 conversion efficiency of **APW3** 373 W 7 10 220VAC Power efficie...

lang:en **score:51** filesize: 1.1 M page_count: 14 document date: 2018-07-31

BITMAIN



AntMiner S9 Installation Guide

Document Version 0.1
June 2016

[\[pdf\] User Manual Installation Guide Specifications Guide Warranty](#)

AntMiner S9 Installation Guide Manual zeusbtc manuals user |||

AntMiner S9 Installation Guide Document Version 0.1 June 2016 AntMiner S9 Installation Guide Copyright Bitmain Technologies Ltd. 2007 2016. All rights reserved. Bitmain Technologies Ltd. Bitmain reserves the right to make corrections, modifications, enhancements, improvements, and other change...

lang:en **score:50** filesize: 658.9 K page_count: 15 document date: 2020-11-22



[Bitmain Antminer X3 Server Installation Guide](#)

Comprehensive installation guide for the Bitmain Antminer X3 server, covering setup, configuration, monitoring, administration, and regulatory information. Learn how to install and manage your X3 mining hardware.

lang:en **score:50** filesize: 1.09 M page_count: 14 document date: 2020-11-22



[\[pdf\] User Manual Installation Guide Specifications Guide Warranty](#)

X3 Server Installation Guide SG docx huizhen hu file12 bitmain shop product firmware Antminer Manual 00720180813163913930S5mughoD06ED

X3 Server Installation Guide Document Version 0.1 Apr 2018 Copyright Bitmaintech Pte.Ltd. 2007 2018. All rights reserved. Bitmaintech Pte.Ltd. Bitmain reserves the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and...

lang:en **score:50** filesize: 1.08 M page_count: 14 document date: 2018-07-31




[\[pdf\] User Manual Installation Guide Specifications Guide Warranty](#)

Antminer Z9mini Installation Guide Manual AntMiner Server zeusbtc manuals user |||

Z9 mini Server Installation Guide Document Version 0.1 June 2018 Copyright Bitmaintech Pte.Ltd. 2006 A 5 7 DC Power 12V DC input 25 247 W 5 8 220VAC Power 25 ,93 conversion efficiency of **APW3** 266 W 5 220VAC Power efficiency 9 25 ,93 conversion efficiency 26.6J/Ksol5 of **APW3** 10...

 lang:en **score:49** filesize: 1.92 M page_count: 14 document date: 2020-11-22

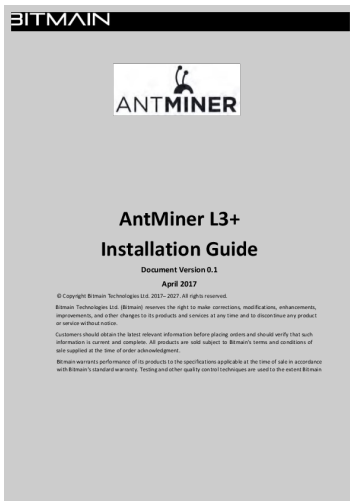


[\[pdf\]](#) User Manual Installation Guide Specifications Guide Warranty

AntMiner L3 Installation Guide Manual for manualsinfo © Copyright Bitmain Technologies Ltd 2017 2027

All rights reserved reserves the right to make corrections modifications View ru manuals |||

AntMiner L3 Installation Guide Document Version 0.1 April 2017 Copyright Bitmain Technologies Ltd. 2017 2027. All rights reserved. Bitmain Technologies Ltd. Bitmain reserves the right to make corrections, modificati...

 
lang:en **score:49** filesize: 4.17 M page_count: 15 document date: 2021-12-22

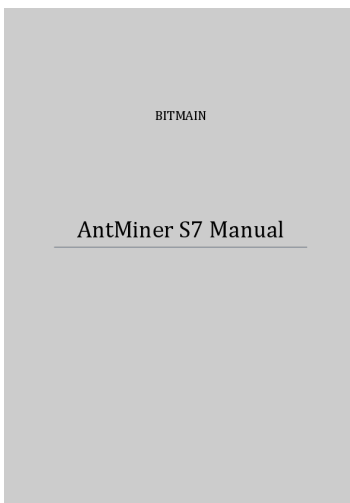

[AntMiner S7 Manual - BITMAIN](#)

Comprehensive user manual for the BITMAIN AntMiner S7 cryptocurrency mining hardware, covering setup, configuration, power supply, status monitoring, firmware upgrades, and troubleshooting.

 lang:en **score:49** filesize: 1.22 M page_count: 10 document date: 2020-11-22

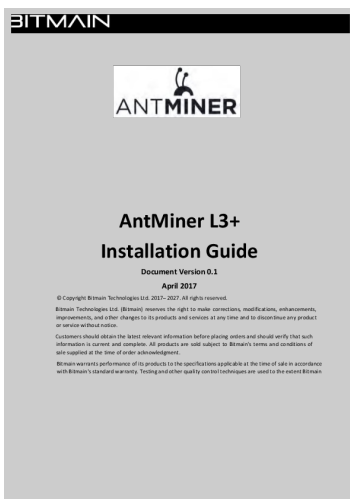

[AntMiner L3+ Installation Guide - Bitmain](#)

This guide provides detailed instructions for installing, configuring, and managing the Bitmain AntMiner L3+ ASIC miner, including setup, power connection, pool configuration, firmware updates, and monitoring.

lang:en **score:48** filesize: 4.17 M page_count: 15 document date: 2020-11-22



AntMiner S9 Installation Guide

Document Version 0.1
June 2016

[\[pdf\]](#) User Manual Installation Guide Specifications Guide Warranty

AntMiner S9 Installation Guide Manual Antminer Bitmain ENBedienungsanleitungen — 21energyAntminer
Manualcdn shopify s files 1 0803 0447 2398 v 1714633805 |||

AntMiner S9 Installation Guide Document Version 0.1 June 2016 AntMiner S9
Installation Guide Copyright Bitmain Technologies Ltd. 2007 2016. All rights reserved.
Bitmain Technologies Ltd. Bitmain reserves the right to make corrections,
modifications, enhancements, improvements, and other change...

lang:en **score:48** filesize: 658.9 K page_count: 15 document date: 2020-11-22



D3 Server Installation Guide

Document Version 0.1
Aug 2017

© Copyright Bitmain Technologies Holding Company 2007 - 2022. All rights reserved.
Bitmain Corporation (hereinafter referred to as "Bitmain") reserves the right to make corrections, modifications,
enhancements, improvements, and other changes to its products and services at any time and to discontinue
any product or service without notice.
Customers should obtain the latest relevant information before placing orders and should verify that
such information is current and complete. All products are sold subject to Bitmain's terms and
conditions of sale supplied at the time of sale or on its website.
Bitmain warrants performance of its products to the specifications applicable at the time of sale in accordance
with Bitmain's standard warranty. Testing and other quality control techniques are used to the extent Bitmain

[AntMiner D3 Server Installation Guide](#)

Comprehensive guide for installing and configuring the Bitmain AntMiner D3 server,
covering setup, power connection, pool configuration, monitoring, and administration.

lang:en **score:47** filesize: 1.34 M page_count: 16 document date: 2023-07-27



D3 Server Installation Guide

Document Version 0.1
Aug 2017

© Copyright Bitmain Technologies Holding Company 2007 - 2022. All rights reserved.
Bitmain Corporation (hereinafter referred to as "Bitmain") reserves the right to make corrections, modifications,
enhancements, improvements, and other changes to its products and services at any time and to discontinue
any product or service without notice.
Customers should obtain the latest relevant information before placing orders and should verify that
such information is current and complete. All products are sold subject to Bitmain's terms and
conditions of sale supplied at the time of sale or on its website.
Bitmain warrants performance of its products to the specifications applicable at the time of sale in accordance
with Bitmain's standard warranty. Testing and other quality control techniques are used to the extent Bitmain

[\[pdf\]](#) User Manual Installation Guide Specifications Guide Warranty

AntMiner S9 Installation Guide Bitmain Avi Eliav D3 Server Manual file12 bitmain shop product s3
firmware 57318813 1c81 4d83 b774 e6e6277750c4 2022 01 19 18 |||

D3 Server Installation Guide Document Version 0.1 Aug 2017 Copyright Bitmain
Technologies Holding Company 2007 2022. All rights reserved. Bitmain Cayman
hereinafter referred to as Bitmain reserves the right to make corrections,
modifications, enhancements, improvements, and other changes to it...

lang:en **score:47** filesize: 1.82 M page_count: 16 document date: 2022-01-19



[\[pdf\]](#) User Manual Installation Guide Specifications Guide Warranty

B3 Server Installation Guide SG docx huizhen hu Manual file12 bitmain shop product s3 firmware 6b696fb0 bad1 4d9a 9e5d 463a01440baf 2022 01 19 18 |||

B3 Server Installation Guide Document Version 0.1 May 2018 Copyright Bitmain Technologies Holding C ... 7 DC Power 12V DC input 25 328 W 7 8 220VAC Power 25 ,93 conversion efficiency 360 W 7 of **APW3** 9 220VAC Power 40 ,93 conversion efficiency of **APW3** 373 W 7 10 220VAC Power efficie...

lang:en **score:47** filesize: 934.41 K page_count: 14 document date: 2022-01-19



[\[pdf\]](#) User Manual Installation Guide Specifications Guide Warranty

AntMiner E3 Server Installation Guide Manual © Copyright Bitmaintech Pte Ltd 2007 2018 All rights reserved Bitmain reserves the right to make corrections modifications enhancements improvements and other fa zeusbtc manuals user |||

E3 Server Installation Guide Document Version 0.1 July 2018 Copyright Bitmaintech Pte.Ltd. 2007 20 ... DC Power 12V DC input 25 58.9 A 4 707 W 4 220VAC Power 25 ,93 8 conversion efficiency of **APW3** 760 W 4 220VAC Power efficiency 25 ,93 9 conversion efficiency of **APW3** 10 Weightwitho...

lang:en **score:47** filesize: 1.19 M page_count: 14 document date: 2020-11-22




[\[pdf\]](#) User Manual Installation Guide Specifications Guide Warranty

Microsoft Word A3 installation guide docx Server Manual file12 bitmain shop product s3 firmware ba3899f0 50f9 4771 890c d58e0c1398cb 2022 01 19 18 |||

A3 Server Installation Guide Document Version 0.1 Jan 2018 Copyright Bitmain Technologies Holding Company 2007 2022. All rights reserved. Bitmain Cayman hereinafter referred to as Bitmain reserves the right to make corrections, modifications, enhancements,s, improvements, and...

 lang:en **score:46** filesize: 10.83 M page_count: 17 document date: 2022-01-19

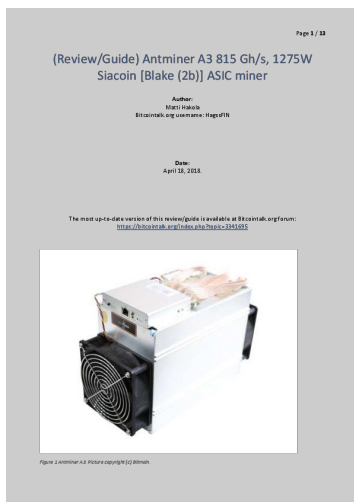

[pdf] User Manual Guide

Antminer A3 Manual ZEUSMINING User user manual zeusbtc Review Guide 815 Gh s 1275W Siacoin Blake Page 3 13 1 General information other items needed is a 2b ASIC miner using 28nm chip technology manufactured by Bitmain Technologies headquarters in Beijing China manuals ||| Page 1 / 13 Review/Guide Antminer A3 815 Gh/s, 1275W Siacoin Blake 2b ASIC miner Author: Matti ... at least 10x PCI-E 6-pin connectors, everyone with a dedicated cable, at least 18AWG wires. Bitmain **APW3** is the official customs power supply, but for example any common brand server grade power sup...
lang:tl score:46 filesize: 1.57 M page_count: 13 document date: 2021-11-11



[pdf] User Manual Installation Guide Specifications Guide Warranty

X3 Server Installation Guide SG docx huizhen hu Manual file12 bitmain shop product s3 firmware 7fff6a32 fc6f 4916 a244 d68658d986a3 2023 07 27 14 ||| X3 Server Installation Guide Document Version 0.1 Apr 2018 Copyright Bitmain Technologies Holding Company 2007 2022. All rights reserved. Bitmain Cayman hereinafter referred to as Bitmain reserves the right to make corrections, modifications, enhancements, improvements, and other changes to it...
lang:en score:46 filesize: 976.68 K page_count: 14 document date: 2023-06-27



[pdf] User Manual Installation Guide Specifications Guide Warranty

Z9mini Installation Guide SG docx huizhen hu Server Manual file12 bitmain shop product s3 firmware 73a236d4 9252 45a4 8df7 7f9108420339 2022 01 19 18 ||| Z9 mini Server Installation Guide Document Version 0.1 June 2018 Copyright Bitmain Technologies Hol6 A 5 7 DC Power 12V DC input 25 247 W 5 8 220VAC Power 25 ,93 conversion efficiency of **APW3** 266 W 5 220VAC Power efficiency 9 25 ,93 conversion efficiency 26.6J/Ksol5 of **APW3** 10...
lang:en score:46 filesize: 1.02 M page_count: 14 document date: 2022-01-19



[\[pdf\]](#) User Manual Installation Guide Specifications Guide Warranty

E3 Server Installation Guide SG docx huizhen hu Manual file12 bitmain shop product s3 firmware 6c60a43c b6c2 4c53 9ac9 c79be6fa9e11 2023 07 27 14 |||

E3 Server Installation Guide Document Version 0.1 July 2018 Copyright Bitmain Technologies Holding ... DC Power 12V DC input 25 58.9 A 4 707 W 4 220VAC Power 25 ,93 8 conversion efficiency of **APW3** 760 W 4 220VAC Power efficiency 25 ,93 9 conversion efficiency of **APW3** 10 Weightwitho...

lang:en **score:46** filesize: 1.07 M page_count: 14 document date: 2023-06-27



[\[pdf\]](#) User Manual Installation Guide Specifications Guide Warranty

X3 Server Installation Guide SG docx huizhen hu Manual file12 bitmain shop product s3 firmware 16fbdefc eb31 4f94 ab33 5098ab63c58c 2022 01 19 18 |||

X3 Server Installation Guide Document Version 0.1 Apr 2018 Copyright Bitmain Technologies Holding Company 2007 2022. All rights reserved. Bitmain Cayman hereinafter referred to as Bitmain reserves the right to make corrections, modifications, enhancements, improvements, and other changes to it...

lang:en **score:46** filesize: 978.42 K page_count: 14 document date: 2022-01-19



[\[pdf\]](#) User Manual Installation Guide Specifications Guide Warranty

Microsoft Word AntMiner T9 Installation Guide docx Server Manual file12 bitmain shop product s3 firmware 6118243f 062f 4f0e aa45 b1a796d7b3f6 2022 01 19 18 |||

T9 Server Installation Guide Document Version 1.0 Jan 2017 Copyright Bitmain Technologies Holding Company 2007 2022. All rights reserved. Bitmain Cayman hereinafter referred to as Bitmain reserves the right to make corrections, modifications, enhancements, improvements, and ot...

lang:en **score:46** filesize: 2.83 M page_count: 15 document date: 2022-01-19



[\[pdf\]](#) User Manual Installation Guide Specifications Guide Warranty

E3 Server Installation Guide SG docx huizhen hu Manual file12 bitmain shop product s3 firmware

70a02480 5256 4ada b375 561e665bcec3 2022 01 19 18 |||

E3 Server Installation Guide Document Version 0.1 July 2018 Copyright Bitmain

Technologies Holding ... DC Power 12V DC input 25 58.9 A 4 707 W 4 220VAC

Power 25 ,93 8 conversion efficiency of **APW3** 760 W 4 220VAC Power efficiency 25

,93 9 conversion efficiency of **APW3** 10 Weightwitho...

lang:en **score:46** filesize: 1.07 M page_count: 14 document date: 2022-01-19



[Bitmain Antminer S9 Server Installation Guide](#)

Comprehensive installation guide for the Bitmain Antminer S9 server, detailing hardware setup, power connection, software configuration, and operational monitoring.

lang:en **score:46** filesize: 1.29 M page_count: 14 document date: 2022-01-19



[\[pdf\]](#) User Manual Installation Guide Specifications Guide Warranty

S9 server Installation Guide SG docx huizhen hu Server Manual file12 bitmain shop product s3 firmware

a96e87f6 563a 4a2f 813a 957ef8592732 2023 07 27 16 |||

S9 Server Installation Guide Document Version 0.1 Jan 2017 Copyright Bitmain

Technologies Holding Company 2007 2022. All rights reserved. Bitmain Cayman

hereinafter referred to as Bitmain reserves the right to make corrections,

modifications, enhancements, improvements, and other changes to it...

lang:en **score:46** filesize: 1.12 M page_count: 14 document date: 2023-07-27



[\[pdf\]](#) User Manual Installation Guide Specifications Guide Warranty

Microsoft Word AntMiner L3 Installation Guide docx minghao li01 Server Manual file12 bitmain shop product s3 firmware 60d89dd4 cb40 479e a936 65c16b98822a 2023 07 27 16 |||

L3 Server Installation Guide Document Version 0.1 April 2017 Copyright Bitmain Technologies Holding Company 2007 2022. All rights reserved. Bitmain Cayman hereinafter referred to as Bitmain reserves the right to make corrections, modifications, enhancements, improvements, and other changes to...

lang:en score:45 filesize: 1.19 M page_count: 16 document date: 2023-07-27




[\[pdf\]](#) User Manual Installation Guide Specifications Guide Warranty

Microsoft Word AntMiner T9 Installation Guide docx chengshuai zhang Server Manual file12 bitmain shop product s3 firmware 77d86393 377f 4971 b7ba 03df62f2da60 2023 07 27 16 |||

T9 Server Installation Guide Document Version 1.0 Jan 2017 Copyright Bitmain Technologies Holding Company 2007 2022. All rights reserved. Bitmain Cayman hereinafter referred to as Bitmain reserves the right to make corrections, modifications, enhancements, improvements, and other changes to it...

 lang:en score:45 filesize: 1.25 M page_count: 15 document date: 2023-07-27

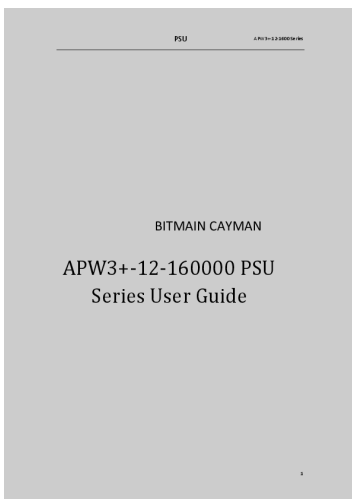

[\[pdf\]](#) User Manual Frequently Asked Questions Specifications Guide

Microsoft Word APW5 manual docx APW3 Manual file12 bitmain shop product s3 firmware b1fceb25 c322 4bbb 857c 3c92144a5074 2022 01 19 18 |||

PSU APW3 --12--1600 Series BITMAIN CAYMAN APW3 --12--160000 PSU Series User Guide ... iency Current A 5 PSU 4. Order Information Wire Type 4.1 Order Information **APW3** 12 2600 A1 PSU Wire Type Revision Rated Power W Voltage Output V ...

lang:en score:43 filesize: 1.01 M page_count: 9 document date: 2022-01-19



[\[pdf\]](#) User Manual Installation Guide Specifications Guide Warranty

AntMiner S9 Installation Guide Bitmain Avi Eliav Document Version 0 1 Aug 2017 © Copyright Bitmaintech Pte Ltd 2007 All rights reserved reserves the right to make corrections modifications enhancements D3 Server InstallationGuide file12 bitmain shop product firmware Antminer Manual 00720170926151410298Vic3770x066C

D3 Server Installation Guide Document Version 0.1 Aug 2017 Copyright Bitmaintech Pte.Ltd. 2007 2017. All rights reserved. Bitmaintech Pte.Ltd. Bitmain reserves the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and...

lang:en score:43 filesize: 2.23 M page_count: 16 document date: 2018-07-31



[\[pdf\]](#) Installation Guide Specifications Guide Warranty

Microsoft Word A3 installation guide docx Server Installation Guide Document Version 0 1 Jan 2018 © Copyright Bitmaintech Pte Ltd 2007 2016 All rights reserved Bitmain reserves the right file12 bitmain shop product firmware

A3 Server Installation Guide Document Version 0.1 Jan 2018 Copyright Bitmaintech Pte.Ltd. 2007 2016. All rights reserved. Bitmaintech Pte.Ltd. Bitmain reserves the right to make corrections, modifications, enhancements, improvements, ...

lang:en score:41 filesize: 11.17 M page_count: 17 document date: 2018-07-31

 


[\[pdf\]](#) User Manual Installation Guide Specifications Guide Warranty

S9 server Installation Guide SG docx huizhen hu © Copyright Bitmaintech Pte Ltd 2007 2017 All rights reserved Bitmain reserves the right to make corrections modifications enhancements improvements and other -3- S9ServerInstallationGuide TableofContents 1 Overview 4 S9ServerComponents 5 2 Specifications 6 ConnectingthePowerSupply 7 3 SettingUptheServer 9 file12 bitmain shop product firmware Antminer Manual 007201704050318081629Q4Fqy0b0677

S9 Server Installation Guide Document Version 0.1 Jan 2017 Copyright Bitmaintech Pte.Ltd. 2007 2017. All rights reserved. Bitmaintech Pte.Ltd. Bitmain reserves the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and...

lang:en score:40 filesize: 1.46 M page_count: 14 document date: 2018-07-31

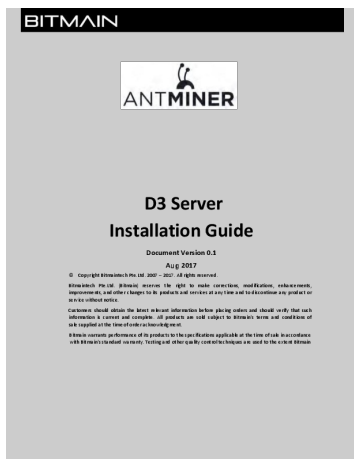

[\[pdf\]](#) User Manual Installation Guide Specifications Guide Warranty

Provided by ManualsAndMore Download User Manual BITMAIN ANTMINER D3 Installation bitmain antminer d3 installation manual 1 manualsandmore |||

D3 Server Installation Guide Document Version 0.1 Aug 2017 Copyright Bitmaintech Pte.Ltd. 2007 2017. All rights reserved. Bitmaintech Pte.Ltd. Bitmain reserves the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and...

lang:en score:40 filesize: 2.05 M page_count: 16 document date: 2019-07-24



[\[pdf\]](#) User Manual Installation Guide Guide

Ebang E9 Manual ZEUSMINING Ebit User user manual zeusbtc manuals Review Guide Plus 9 0 Th s 1300W Bitcoin SHA 256 Page 3 11 1 General information other items needed is a ASIC miner using 14nm chip technology manufactured by Zhejiang ebage9 |||

Page 1 / 11 Review/Guide Ebit E9 Plus 9.0 Th/s, 1300W Bitcoin SHA-256 ASIC miner Author: Matti H ... least 10x PCI-E 6-pin connectors, everyone with a dedicated cable, at least 18AWG wires. I used the **APW3** 1600W power supply manufacturer: Bitmain to power my miner. I recommend a 1600W power capac...

lang:en score:40 filesize: 864.5 K page_count: 11 document date: 2021-11-11



[\[pdf\]](#) User Manual Installation Guide Specifications Guide Warranty

Microsoft Word AntMiner L3 Installation Guide docx BitmainVisit siteConnect PSU power cable connectors to each of the eight PCI e on top server ensuring that hash board is powered by same Connect a connector controller network ETH portBitmain Antminer Login Bitmain AccountL3 Server ManualL3 Manualfile12 bitmain shop product s3 firmware 3dda9652 6f61 4290 b304 eb89cc426a2f 2022 01 19 18 Manual |||

L3 Server Installation Guide Document Version 0.1 April 2017 Copyright Bitmain Technologies Holding Company 2007 2022. All rights reserved. Bitmain Cayman hereinafter referred to as Bitmain reserves the right to make corrections, modifications, enhancements, improvements, and ...

lang:en score:40 filesize: 3.99 M page_count: 16 document date: 2022-01-19

APW3++ Output Voltage
Modification Guide

Document Revision 3

0

[\[pdf\]](#) Instructions Guide

APW3 Voltage Mod Guide File Repo Pivotal Pleb TechAPW3 Revision 3cdn shopify s files 1 0710 7362
8440 3 v 1691019011 |||

APW3 Output Voltage Modification Guide Document Revision 3 0 Table of Contents
Warnings and

Disclaimers..... 2

Overview.....

lang:en **score:39** filesize: 11.94 M page_count: 17 document date: 0000-00-00

BITMAIN

**AntMiner D3
Installation Guide**Document Version 0.1
Aug 2017

© Copyright Bitmain Technologies Ltd. 2017 - 2016. All rights reserved.
Bitmain Technologies Ltd. Bitmain reserves the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice.
Customer's should obtain the latest software information before purchasing and based on this that such information is correct and complete. All products are sold subject to Bitmain's terms and conditions of sale, applicable at the time of order or technology used.
Bitmain warrants performance of its products to the specifications applicable at the time of sale in accordance with Bitmain's standard warranty. Testing and other quality control techniques are used to the extent Bitmain deems

[\[pdf\]](#) User Manual Installation Guide Specifications Guide Warranty

Provided by ManualsAndMore Download User Manual BITMAIN AntMiner D3 Installation
manualsandmore |||

AntMiner D3 Installation Guide Document Version 0.1 Aug 2017 Copyright Bitmain Technologies Ltd. 2007 2016. All rights reserved. Bitmain Technologies Ltd. Bitmain reserves the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at ...

lang:en **score:37** filesize: 1.75 M page_count: 16 document date: 2019-07-24

BITMAIN

**T9 Server
Installation Guide**Document Version 0.1
Jan 2017

© Copyright Bitmain Pte. Ltd. 2017 - 2017. All rights reserved.
Bitmain Pte. Ltd. Bitmain reserves the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice.
Customer's should obtain the latest software information before purchasing and based on this that such information is correct and complete. All products are sold subject to Bitmain's terms and conditions of sale, applicable at the time of order or technology used.
Bitmain warrants performance of its products to the specifications applicable at the time of sale in accordance with Bitmain's standard warranty. Testing and other quality control techniques are used to the extent Bitmain deems

[\[pdf\]](#) User Manual Installation Guide Specifications Guide Warranty

Provided by ManualsAndMore Download User Manual BITMAIN Antminer T9 Installation
manualsandmore |||

T9 Server Installation Guide Document Version 0.1 Jan 2017 Copyright Bitmaintech Pte.Ltd. 2007 2017. All rights reserved. Bitmaintech Pte.Ltd. Bitmain reserves the right to make corrections, modifications, enhancements, improvements, ...

lang:en **score:37** filesize: 3.07 M page_count: 15 document date: 2019-07-24




[pdf] Installation Guide Specifications Guide Warranty

Microsoft Word AntMiner T9 Installation Guide docx Document Version 0 1 Jan 2017 © Copyright Bitmaintech Pte Ltd 2007 All rights reserved Bitmain reserves the right to make corrections modifications enhancements file11 bitmain shop product firmware ||| T9 Server Installation Guide Document Version 0.1 Jan 2017 Copyright Bitmaintech Pte.Ltd. 2007 2017. All rights reserved. Bitmaintech Pte.Ltd. Bitmain reserves the right to make corrections, modifications, enhancements, improvements, ... lang:en score:37 filesize: 3.43 M page_count: 15 document date: 2018-07-31




[pdf] Installation Guide Specifications Guide Warranty

 AntMiner S9 Installation Guide Bitmain Avi Eliav D3 6 AntMinerD3InstallationGuide 1 2 Specification Hash Rate 17 GH s±5% Rated voltage 11 60 ~ 13 00V Frequency 487M Estimated wall outlet power consumption with APW3 93% efficiency 25°C ambient temperature To check your firmware version In System click the Overview tab File Version displays date of miner use antminerdistribution 2017 AntMiner D3 Installation Guide Document Version 0.1 Aug 2017 Copyright Bitmain Technologies Ltd. 2007 2016. All rights reserved. Bitmain Technologies Ltd. Bitmain reserves the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at ... lang:en score:37 filesize: 1.74 M page_count: 16 document date: 2017-09-26

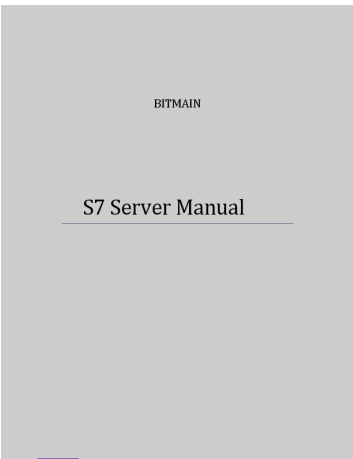

[pdf] User Manual

Provided by ManualsAndMore Download User Manual BITMAIN AntMiner S7 bitmain antminer s7 manual 1 manualsandmore ||| BITMAIN S7 Server Manual Contents S7 Server Manual Last updated: 2/1/2016 Page 2 of 12 1 Overview3 2 Features..... Features..... lang:en score:37 filesize: 1.62 M page_count: 12 document date: 2019-07-24

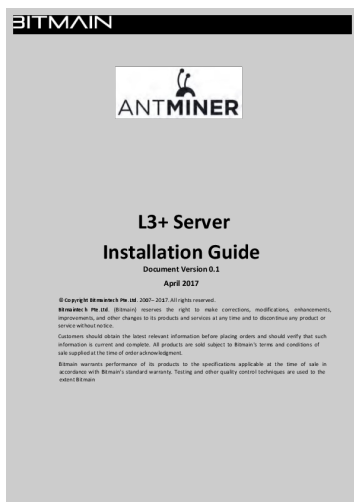 

[\[pdf\]](#) User Manual Installation Guide Specifications Guide Warranty

Microsoft Word AntMiner L3 Installation Guide docx Server Document Version 0 1 April 2017 ©

Copyright Bitmaintech Pte Ltd 2007 All rights reserved Bitmain reserves the right K!4!K!

Server!InstallationG uide 1! Overview ! TheL3 serveris snewestversionintheL3 serverse ries ltastsastatebo

of art BM1485 K!7!K! 2 Connecting!the!Power!Supply ConnectingthePowerSupply Nine!PC

ecconnectorsarelocatedatthetopoftheL3 serverfo C1VkJ5h2kuS file12 bitmain shop product firmware

Manual 007201708150747462626v8cDCy2067E images na ssl amazon I

L3 Server Installation Guide Document Version 0.1 April 2017 Copyright Bitmaintech

Pte.Ltd. 2007 2017. All rights reserved. Bitmaintech Pte.Ltd. Bitmain reserves the right

to make corrections, modifications, enhancements, improvements, a...

lang:en **score:37** filesize: 4.12 M page_count: 16 document date: 2018-07-31



[\[pdf\]](#) Installation Guide Specifications Guide Warranty

Z9mini Installation Guide SG docx huizhen hu Z9 mini Server 6 1 Checking Your Firmware Version The

server is Bitmain s newest version in the series All servers are tested antminerdistribution 2018 08

 
Z9 mini Server Installation Guide Document Version 0.1 June 2018 Copyright

Bitmaintech Pte.Ltd. 2006 A 5 7 DC Power 12V DC input 25 247 W 5 8 220VAC

Power 25 ,93 conversion efficiency of **APW3** 266 W 5 220VAC Power efficiency 9 25

,93 conversion efficiency 26.6J/Ksol5 of **APW3** 10...

lang:en **score:37** filesize: 1.88 M page_count: 14 document date: 2018-07-31

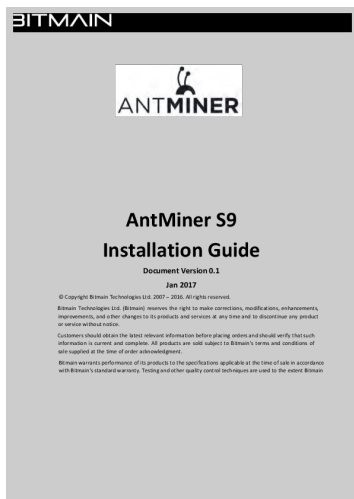

[\[pdf\]](#) Installation Guide Specifications Guide Warranty

Microsoft Word AntMiner S9 Installation Guide docx The miner does not contain a DC converter therefore

higher input voltage will To set up the file IPReporter zip is supported by Windows only bitcoin shop

 
guides

AntMiner S9 Installation Guide Document Version 0.1 Jan 2017 Copyright Bitmain

Technologies Ltd. 2007 2016. All rights reserved. Bitmain Technologies Ltd. Bitmain

reserves the right to make corrections, modificati...

lang:en **score:37** filesize: 2.56 M page_count: 14 document date: 2017-04-05

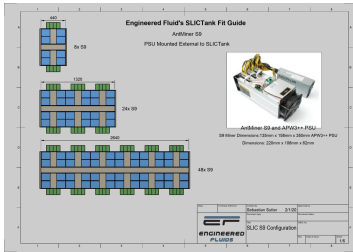


[\[pdf\]](#) Dimension Guide Guide

Sheet1 EF SLICTank Miner Fit Guide 20200201 engineeredfluids files ugd 3c3c1e

e6bc9760bda6469a9b3b8f09b728f159 |||

1 2 3 4 5 6 7 8 440 Engineered Fluid s SLICTank Fit Guide A A A ntMiner S9 8x S9 External to LICT k PSU Mounted S an B B 1320 C D E F 1 24x S9 2640 2 3 4 C AntMiner S9 and **APW3** PSU S9 Miner Dimensions:135mm x 158mm x 350mm **APW3** PSU Dimensions: 220mm x 108mm x 62mm D 48x...

 lang:en **score:36** filesize: 6.19 M page_count: 5 document date: 2020-02-10

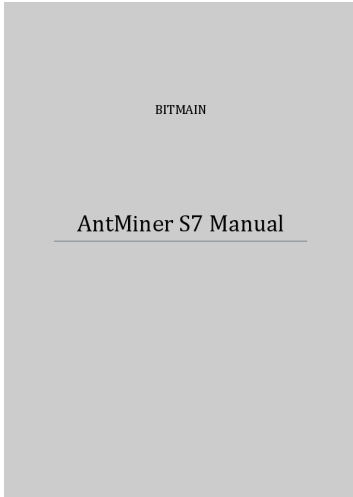

[\[pdf\]](#) User Manual Guide

AntMiner S5 Manual XXX S7 Last updated 9 23 2015 Page 4 of 10 3 Power Supply Each has PCI e connectors for 12V 15A DC STABLE input on hash boards and 1 connector the controller all are required Do not connect more BITMAIN The with 86Th s is Bitmain newest iteration using new state art Antminer user guide antminerdistribution 09

 
BITMAIN AntMiner S7 Manual Contents AntMiner Manual Last updated: 9/23/2015

Page 2 of 10 1 Overview

.....3 2

Features.....

lang:en **score:36** filesize: 1.13 M page_count: 10 document date: 2015-09-23

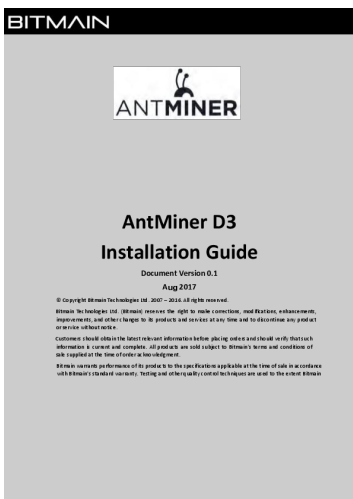

[\[pdf\]](#) User Manual Installation Guide Specifications Guide Warranty

AntMiner D3 Installation Guide Manual Avi Eliav ASIC miner sales and 4 Configuring the Miner 1 Setting Up Pool To configure In Configuration click General Settings 2 Set options according to following table Option Description URL Enter of your desired pool The can be set up with three mining pools decreasing zeusbtc manuals user Zeus Mining power connect PSUs wall outlet Each hashboard must powered by same PSU on both connectors to Document Version 0 Aug 2017 © Copyright Bitmain Technologies Ltd 2007 2016 All rights reserved reserves right make corrections modifications es |||

AntMiner D3 Installation Guide Document Version 0.1 Aug 2017 Copyright Bitmain Technologies Ltd. 2007 2016. All rights reserved. Bitmain Technologies Ltd. Bitmain reserves the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at ...

 
lang:en **score:36** filesize: 1.81 M page_count: 16 document date: 2020-11-22



[Bitmain Antminer B3 Server Installation Guide](#)

Comprehensive installation guide for the Bitmain Antminer B3 server, covering setup, configuration, monitoring, and administration.

lang:en score:36 filesize: 1.12 M page_count: 14 document date: 2021-11-18

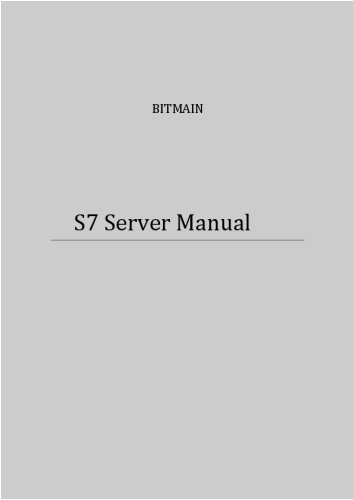

[\[pdf\] User Manual Guide](#)

AntMiner S5 Manual XXX S7 Server Last updated 2 1 2016 Page 7 of 12 Step Enter the IP address provided into your WEB browser and proceed to login using root for both username password In user guide file12 bitmain shop product firmware 582c0236 401e 46ef 8d6b bcd01d6188a 2019 08 02 17 BITMAIN S7 Server Manual Contents S7 Server Manual Last updated: 2/1/2016 Page 2 of 12 1 Overview3 2 Features.....

lang:en score:36 filesize: 1.7 M page_count: 12 document date: 2018-07-31