



Manuals.plus /

› HyperGear /

› HyperGear Sound Storm All-Terrain HD Wireless Speaker User Manual HYG-14210

HyperGear Sound Storm HYG-14210

HyperGear Sound Storm All-Terrain HD Wireless Speaker User Manual

Model: Sound Storm HYG-14210 | Brand: HyperGear

1. PRODUCT OVERVIEW

The HyperGear Sound Storm is an all-terrain HD wireless speaker designed for robust performance in various environments. It connects wirelessly to your devices, delivering high-definition sound with massive projection. Featuring up to 8 hours of music playback, an impact-resistant, all-terrain jacket, and certified IPX7 waterproof rating, this speaker is built for adventure. It includes a built-in microphone for wireless calls and a rechargeable Li-Polymer battery. A bonus 360° bike mount is also included for versatile attachment.



Massive HD Stereo Sound

This palm-sized 6-watt speaker delivers precision bass and clearly balanced acoustics that can fill any indoor and outdoor space with stunning sound.

Image: The Sound Storm speaker delivering massive HD stereo sound.



Durable Rugged Build

Designed for the harshest elements with an impact-resistant frame, aircraft-grade aluminum grill, heavy-duty rubberized exterior, integrated carrying strap, and universal mounting socket.

Image: The speaker's durable, rugged build designed for harsh elements.

2. PACKAGE CONTENTS

Please verify that all items listed below are present in your package:

SOUND STORM

Bluetooth® Wireless Speaker



Package Contents

Sound Storm Speaker
3.5mm Stereo Auxiliary Cable
Micro USB Charging Cable
Bike Mount
User Manual



Image: Contents of the HyperGear Sound Storm package.

- Sound Storm Speaker
- 3.5mm Stereo Auxiliary Cable
- Micro USB Charging Cable
- Bike Mount
- User Manual

3. GETTING STARTED

3.1 Charging the Speaker

Before first use, fully charge the Sound Storm speaker. Connect the Micro USB charging cable to the speaker's charging port and the other end to a USB power source (e.g., wall adapter, computer USB port). The LED indicator will show charging status and turn off or change color when fully charged.

3.2 Powering On/Off

- To Power On: Press and hold the Power button until the LED indicator lights up and you hear an audible prompt.
- To Power Off: Press and hold the Power button until the LED indicator turns off and you hear an audible prompt.

3.3 Bluetooth Pairing

1. Ensure the speaker is powered on and in pairing mode (LED indicator will flash, indicating it's discoverable).
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for new devices.
3. Select "Sound Storm" from the list of available devices.
4. Once paired, the speaker will confirm with an audible prompt and the LED indicator will stop flashing.

Note: The speaker will automatically attempt to reconnect to the last paired device when powered on.

3.4 Attaching the Bike Mount

The included 360° bike mount allows you to securely attach the speaker to handlebars, poles, boat railings, or stroller handles.

1. Assemble the bike mount components if necessary, ensuring it is firmly secured.
2. Attach the mount to your desired location (e.g., bicycle handlebars) and tighten it securely.
3. Slide the Sound Storm speaker onto the mount until it clicks into place. Ensure it is stable before use.



Includes Bonus Bike Mount

The lightweight & versatile bike mount comes fully assembled and is easy to use, firmly securing onto handlebars, poles, boat railings, and even stroller handles.

Image: The Sound Storm speaker mounted on bicycle handlebars using the included bike mount.

4. OPERATION

4.1 Music Playback

- **Play/Pause:** Press the Play/Pause button once.
- **Next Track:** Press and hold the Volume Up (+) button.
- **Previous Track:** Press and hold the Volume Down (-) button.
- **Volume Control:** Press the Volume Up (+) or Volume Down (-) buttons to adjust the volume.



Always Ready for Adventure

With the latest Bluetooth 4.1 Technology, connections are crystal clear and pairing is effortless. Wirelessly stream music & calls for up to 8-hrs on a single charge!

Image: The Sound Storm speaker providing up to 8 hours of wireless playtime, suitable for outdoor adventures.

4.2 Hands-Free Calling

The Sound Storm speaker features a built-in microphone for hands-free calling when connected via Bluetooth.

- **Answer Call:** Press the Play/Pause button once when a call comes in.
- **End Call:** Press the Play/Pause button once during a call.
- **Reject Call:** Press and hold the Play/Pause button for 2 seconds when a call comes in.

4.3 Waterproof Usage

The Sound Storm speaker is certified IPX7 waterproof, meaning it can be submerged in water up to 1 meter deep for up to 30 minutes. To ensure water resistance, the protective flap covering the charging port

and auxiliary input must be properly and securely closed before exposure to water.



Certified IPX7 Water & Dust-Proof

Safe for the shower, pool & beach. This All-Terrain, All-Weather speaker can even be submerged in water 1 meter deep for up to 30 minutes!

Image: The IPX7 certified waterproof and dust-proof Sound Storm speaker.

5. CARE AND MAINTENANCE

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Water Resistance:** Always ensure the protective flap for ports is securely closed before exposing the speaker to water. After exposure to saltwater or chlorinated water, rinse the speaker with fresh water and dry thoroughly.
- **Storage:** Store the speaker in a cool, dry place away from extreme temperatures and direct sunlight.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use for extended periods.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on	Low battery; Power button not pressed correctly	Charge the speaker; Press and hold the Power button for 3-5 seconds
Cannot pair via Bluetooth	Speaker not in pairing mode; Device Bluetooth off; Speaker already paired to another device; Out of range	Ensure speaker is in pairing mode (flashing LED); Turn on Bluetooth on your device; Disconnect from other devices; Move device closer to speaker (within 33 feet)
No sound	Volume too low; Device not connected; Audio source paused	Increase speaker and device volume; Re-pair Bluetooth; Check audio playback on your device
Poor sound quality	Device too far; Obstructions; Low battery	Move device closer; Remove obstructions; Charge speaker
Microphone not working	Speaker not connected for calls; Microphone obstructed	Ensure Bluetooth profile for calls is enabled on your device; Check for debris blocking the microphone port

7. TECHNICAL SPECIFICATIONS

Brand	HyperGear
Model Name	Sound Storm
Model Number	HYG-14210
Speaker Maximum Output Power	6 Watts
Connectivity Technology	Bluetooth
Connectivity Protocol	Bluetooth
Audio Output Mode	Stereo
Mounting Type	Boat Mount, Table Mount, Bike Mount
Speaker Type	Outdoor
Additional Features	Waterproof
Is Waterproof	True (IPX7 Certified)
Controller Type	Battery Powered
Power Source	Battery Powered
Battery Life	Up to 8 hours
Color	Black
Item Dimensions (D x W x H)	5.2"D x 4.2"W x 1.5"H
Item Weight	0.65 Pounds
UPC	633755142109
Manufacturer	Hypergear

8. WARRANTY AND CUSTOMER SUPPORT

8.1 Warranty Information

The HyperGear Sound Storm speaker comes with a **30-day warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

8.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your HyperGear Sound Storm speaker, please contact our customer support team:

- **Website:** Visit the official HyperGear website for support resources and contact forms.
- **Email:** Refer to your product packaging or the official website for the support email address.
- **Phone:** Refer to your product packaging or the official website for customer service phone numbers.

Please have your model number (HYG-14210) and proof of purchase ready when contacting support.