



Manuals.plus /

- › **Signature Design by Ashley** /
- › Signature Design by Ashley Yandel Power Lift Recliner Instruction Manual

Signature Design by Ashley Yandel

Signature Design by Ashley Yandel Power Lift Recliner Instruction Manual

Model: Yandel (1090112)

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your Signature Design by Ashley Yandel Electric Power Lift Recliner. This recliner features dual motor capability, allowing independent adjustment of the backrest and leg rest, and a power lift function designed to assist users in standing up from a seated position.



Image 1.1: The Yandel Power Lift Recliner in its standard upright position, showcasing its black faux leather upholstery and remote control.

2. SAFETY INFORMATION

WARNING:

- Always use the power lift feature with caution.
- Ensure the chair is stable and on a flat surface before use.
- This chair is designed to assist users, particularly the elderly, in standing. Take extra precautions to prevent falls or injuries during operation.
- Keep children and pets away from the moving parts of the recliner.
- Do not allow anyone to sit on the footrest when it is extended.
- Do not place hands or feet near the mechanism when operating the chair.

- Maximum weight recommendation for this recliner is 250 pounds (113 kg). Exceeding this limit may cause damage to the chair or injury to the user.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Recliner Base Section
- Recliner Backrest Section
- Remote Control
- Power Supply Unit (Transformer)
- Power Cord
- Assembly Instructions (this document)
- Hardware and Tools (if required for specific components)

4. ASSEMBLY INSTRUCTIONS

Assembly typically involves connecting the two main sections of the chair and attaching the power components. The chair is designed to fit through doorways 30 inches or wider.

1. **Unpack Components:** Carefully remove all parts from the packaging. Place them on a soft, clean surface to prevent damage.
2. **Connect Backrest to Base:** Align the metal brackets on the backrest section with the corresponding receivers on the recliner base. Slide the backrest down firmly until it locks into place. You may hear a click.
3. **Attach Arm Cushions and Side Back Cushions:** If separate, slide these components onto their respective brackets until secure.
4. **Connect Power Supply:**
 - Connect the pigtail wire from the power supply unit to the wire extending from the chair's motor. Ensure this connection is secure.
 - Insert two 9-volt transistor radio batteries into the designated compartment on the power supply unit for battery backup functionality.
 - Connect the detachable grounded power cord to the power supply unit.
 - Plug the grounded power cord into a standard wall outlet.
5. **Connect Remote Control:** Plug the remote control cable into the designated port, typically located in a side pouch or near the power connections.
6. **Test Functionality:** Once assembled and powered, test all functions of the recliner using the remote control to ensure proper operation.



Image 4.1: The Yandel Power Lift Recliner positioned in a living room, demonstrating its integration into a home environment.

5. OPERATING INSTRUCTIONS

The Yandel Power Lift Recliner is operated using the wired remote control. The remote allows for independent control of the backrest and leg rest, as well as the power lift function.



Image 5.1: A close-up view of the remote control, showing the distinct buttons for adjusting the backrest and leg rest, and for activating the lift function.

- **Reclining:** Use the "DOWN" button for the backrest to recline the chair backward. Use the "UP" button for the leg rest to extend the footrest. These can be operated independently to find your desired position.
- **Returning to Upright Position:** Use the "UP" button for the backrest to bring the backrest forward. Use the "DOWN" button for the leg rest to retract the footrest.
- **Power Lift Function:** To activate the power lift, press and hold the designated "UP" button for the lift function. The chair will gently tilt forward and lift, assisting you to a standing position. To lower the chair, press and hold the "DOWN" button for the lift function.
- **Battery Backup:** In case of a power outage, the installed 9-volt batteries provide temporary power for a limited number of operations to return the chair to a seated position. This is not intended for continuous operation.



Image 5.2: The Yandel Power Lift Recliner shown in a partially lifted position, demonstrating the chair's ability to assist users in standing.

6. MAINTENANCE AND CARE

Proper care will extend the life and appearance of your recliner. Always handle with care.

- **Cleaning Faux Leather:** For general cleaning, wipe the faux leather upholstery with a soft, damp cloth. For spills, blot immediately with a clean, dry cloth. Avoid harsh chemicals or abrasive cleaners, as these can damage the material.

- **Mechanism Care:** Periodically inspect the reclining mechanism for any loose bolts or connections. Tighten as necessary. Do not lubricate the mechanism unless specifically instructed by customer support.
- **Power Cord Inspection:** Regularly check the power cord and connections for any signs of damage or fraying. If damage is found, discontinue use and contact customer support for replacement parts.
- **Battery Replacement:** Replace the 9-volt backup batteries annually or as needed to ensure functionality during power outages.

7. TROUBLESHOOTING

If your recliner is not functioning correctly, refer to the following common issues and solutions before contacting customer support.

Problem	Possible Cause	Solution
Chair does not move (no power).	<ul style="list-style-type: none"> ◦ Power cord unplugged from wall. ◦ Power cord unplugged from power supply. ◦ Pigtail wire disconnected between power supply and motor. ◦ Safety switch on power supply is off. ◦ Remote control cable unplugged. 	<ul style="list-style-type: none"> ◦ Ensure power cord is securely plugged into a working wall outlet. ◦ Verify the power cord is firmly connected to the power supply unit. ◦ Check and firmly reconnect the pigtail wire. ◦ Locate the small switch on the power supply unit and ensure it is in the "ON" position. ◦ Ensure the remote control cable is fully inserted into its port.
Chair moves slowly or intermittently.	<ul style="list-style-type: none"> ◦ Low battery backup (if operating on batteries). ◦ Loose power connections. 	<ul style="list-style-type: none"> ◦ Ensure the chair is plugged into a wall outlet. Replace 9-volt batteries if necessary. ◦ Check all power connections for tightness.
Unusual noises during operation.	<ul style="list-style-type: none"> ◦ Loose hardware. ◦ Obstruction in mechanism. 	<ul style="list-style-type: none"> ◦ Inspect and tighten any loose bolts or screws. ◦ Ensure no objects are caught in the reclining mechanism.

8. SPECIFICATIONS

Feature	Detail
Model Name	Yandel
Model Number	1090112
Brand	Signature Design by Ashley
Color	Black
Upholstery Material	Faux Leather (100% Polyester)
Product Dimensions (D x W x H)	40"D x 35"W x 44"H
Seat Height	20 Inches
Seat Depth	21.25 Inches
Arm Height	26 Inches
Fully Reclined Length	69 Inches (approximate, based on review)
Item Weight	122 pounds
Maximum Weight Recommendation	250 Pounds
Power Lift Feature	Yes
Dual Motor Recline	Yes
Battery Backup	Requires 2 x 9-volt batteries (not included)
UPC	024052342987



Image 8.1: Dimensional diagram of the Yandel Power Lift Recliner, indicating its height, depth, and width.

9. WARRANTY AND SUPPORT

For warranty information, replacement parts, or technical assistance, please contact Signature Design by Ashley customer support. Refer to your purchase documentation for specific warranty terms and contact details.

Manufacturer: Ashley Furniture

Website: www.ashleyfurniture.com

